

# INSTRUCTION MANUAL

## 2750L-P/ 4500L-P / 6000L-P



### Contact Information

Telephone: 800 733 5427 (toll free in North America)

858 450 0085 (direct)

Fax: 858 458 0267

Email:

Domestic Sales: [domorders.sd@ametek.com](mailto:domorders.sd@ametek.com)

International Sales: [intlorders.sd@ametek.com](mailto:intlorders.sd@ametek.com)

Customer Service: [service.ppd@ametek.com](mailto:service.ppd@ametek.com)

Web: [www.programmablepower.com](http://www.programmablepower.com)

More Application, Information, and Pricing available at:



250 Technology Way  
Rocklin, CA 95765

[sales@testworld.com](mailto:sales@testworld.com)  
1-855-200-TEST (8378)

Click to go [www.TestWorld.com](http://www.TestWorld.com)



## **About AMETEK**

AMETEK Programmable Power, Inc., a Division of AMETEK, Inc., is a global leader in the design and manufacture of precision, programmable power supplies for R&D, test and measurement, process control, power bus simulation and power conditioning applications across diverse industrial segments. From bench top supplies to rack-mounted industrial power subsystems, AMETEK Programmable Power is the proud manufacturer of Elgar, Sorensen, California Instruments and Power Ten brand power supplies.

AMETEK, Inc. is a leading global manufacturer of electronic instruments and electromechanical devices with annualized sales of \$2.5 billion. The Company has over 11,000 colleagues working at more than 80 manufacturing facilities and more than 80 sales and service centers in the United States and around the world.

## **Trademarks**

AMETEK is a registered trademark of AMETEK, Inc.

Other trademarks, registered trademarks, and product names are the property of their respective owners and are used herein for identification purposes only.

## **Notice of Copyright**

*2750L-P / 4500L-P / 6000L-P, Instruction Manual* © 2010 AMETEK Programmable Power, Inc. All rights reserved.

## **Exclusion for Documentation**

UNLESS SPECIFICALLY AGREED TO IN WRITING, AMETEK PROGRAMMABLE POWER, INC. ("AMETEK"):

- (a) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION.
- (b) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSSES, DAMAGES, COSTS OR EXPENSES, WHETHER SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK, AND
- (c) REMINDS YOU THAT IF THIS MANUAL IS IN ANY LANGUAGE OTHER THAN ENGLISH, ALTHOUGH STEPS HAVE BEEN TAKEN TO MAINTAIN THE ACCURACY OF THE TRANSLATION, THE ACCURACY CANNOT BE GUARANTEED. APPROVED AMETEK CONTENT IS CONTAINED WITH THE ENGLISH LANGUAGE VERSION, WHICH IS POSTED AT [WWW.PROGRAMMABLEPOWER.COM](http://WWW.PROGRAMMABLEPOWER.COM).

## **Date and Revision**

March 2011 Revision L

## **Part Number**

4009-316



## **Contact Information**

Telephone: 800 733 5427 (toll free in North America)  
858 450 0085 (direct)  
Fax: 858 458 0267  
Email: [sales@programmablepower.com](mailto:sales@programmablepower.com)  
[service@programmablepower.com](mailto:service@programmablepower.com)  
Web: [www.programmablepower.com](http://www.programmablepower.com)

This page intentionally left blank.

# Important Safety Instructions

Before applying power to the system, verify that your product is configured properly for your particular application.

 <b>WARNING</b>	<b>Hazardous voltages may be present when covers are removed. Qualified personnel must use extreme caution when servicing this equipment. Circuit boards, test points, and output voltages also may be floating above (below) chassis ground.</b>
 <b>WARNING</b>	<b>The equipment used contains ESD sensitive ports. When installing equipment, follow ESD Safety Procedures. Electrostatic discharges might cause damage to the equipment.</b>

Only *qualified personnel* who deal with attendant hazards in power supplies, are allowed to perform installation and servicing.

Ensure that the AC power line ground is connected properly to the Power Rack input connector or chassis. Similarly, other power ground lines including those to application and maintenance equipment *must* be grounded properly for both personnel and equipment safety.

Always ensure that facility AC input power is de-energized prior to connecting or disconnecting any cable.

In normal operation, the operator does not have access to hazardous voltages within the chassis. However, depending on the user's application configuration, **HIGH VOLTAGES HAZARDOUS TO HUMAN SAFETY** may be normally generated on the output terminals. The customer/user must ensure that the output power lines are labeled properly as to the safety hazards and that any inadvertent contact with hazardous voltages is eliminated.

Guard against risks of electrical shock during open cover checks by not touching any portion of the electrical circuits. Even when power is off, capacitors may retain an electrical charge. Use safety glasses during open cover checks to avoid personal injury by any sudden component failure.

Neither AMETEK Programmable Power Inc., San Diego, California, USA, nor any of the subsidiary sales organizations can accept any responsibility for personnel, material or inconsequential injury, loss or damage that results from improper use of the equipment and accessories.

## SAFETY SYMBOLS



**WARNING**  
Risk of Electrical Shock



**CAUTION**  
Refer to Accompanying Documents



Off (Supply)



Direct Current (DC)



Standby (Supply)



Alternating Current (AC)



On (Supply)



Three-Phase Alternating Current



Protective Conductor Terminal



Earth (Ground) Terminal



Fuse



Chassis Ground

## **Product Family: 2750L-P/4500L-P/6000L-P**

### **Warranty Period: One Year**

#### **WARRANTY TERMS**

AMETEK Programmable Power, Inc. ("AMETEK"), provides this written warranty covering the Product stated above, and if the Buyer discovers and notifies AMETEK in writing of any defect in material or workmanship within the applicable warranty period stated above, then AMETEK may, at its option: repair or replace the Product; or issue a credit note for the defective Product; or provide the Buyer with replacement parts for the Product.

The Buyer will, at its expense, return the defective Product or parts thereof to AMETEK in accordance with the return procedure specified below. AMETEK will, at its expense, deliver the repaired or replaced Product or parts to the Buyer. Any warranty of AMETEK will not apply if the Buyer is in default under the Purchase Order Agreement or where the Product or any part thereof:

- is damaged by misuse, accident, negligence or failure to maintain the same as specified or required by AMETEK;
- is damaged by modifications, alterations or attachments thereto which are not authorized by AMETEK;
- is installed or operated contrary to the instructions of AMETEK;
- is opened, modified or disassembled in any way without AMETEK's consent; or
- is used in combination with items, articles or materials not authorized by AMETEK.

The Buyer may not assert any claim that the Products are not in conformity with any warranty until the Buyer has made all payments to AMETEK provided for in the Purchase Order Agreement.

#### **PRODUCT RETURN PROCEDURE**

1. Request a Return Material Authorization (RMA) number from the repair facility (**must be done in the country in which it was purchased**):
  - **In the USA**, contact the AMETEK Repair Department prior to the return of the product to AMETEK for repair:  
Telephone: 800-733-5427, ext. 2295 or ext. 2463 (toll free North America)  
858-450-0085, ext. 2295 or ext. 2463 (direct)
  - **Outside the United States**, contact the nearest Authorized Service Center (ASC). A full listing can be found either through your local distributor or our website, [www.programmablepower.com](http://www.programmablepower.com), by clicking Support and going to the Service Centers tab.
2. When requesting an RMA, have the following information ready:
  - Model number
  - Serial number
  - Description of the problem

**NOTE:** Unauthorized returns will not be accepted and will be returned at the shipper's expense.

**NOTE:** A returned product found upon inspection by AMETEK, to be in specification is subject to an evaluation fee and applicable freight charges.

## **TABLE OF CONTENTS**

<b>SECTION 1</b>	<b>INTRODUCTION AND SPECIFICATIONS</b>	<b>1</b>
1.1	INTRODUCTION	1
1.2	GENERAL DESCRIPTION	1
1.3	ACCESSORY EQUIPMENT/RACK SLIDES	3
1.4	SPECIFICATIONS	3
<b>SECTION 2</b>	<b>INSTALLATION AND ACCEPTANCE</b>	<b>13</b>
2.1	UNPACKING	13
2.2	POWER REQUIREMENTS	13
2.3	MECHANICAL INSTALLATION	13
2.4	INPUT WIRING	13
2.5	OUTPUT CONNECTIONS	20
2.6	OUTPUT VOLTAGE RANGES	20
2.7	FUNCTION TEST	20
2.8	REAR PANEL DIP SWITCH (SW1)	21
<b>SECTION 3</b>	<b>OPERATION</b>	<b>24</b>
3.1	GENERAL	24
3.2	FRONT PANEL CONTROLS	24
3.3	FRONT PANEL INDICATORS	24
3.4	REAR PANEL CONNECTIONS	26
3.5	FRONT PANEL PROGRAMMING	31
3.6	TO MEASURE THE OUTPUT	46
3.7	REMOTE PROGRAMMING WITH ABBREVIATED PLAIN ENGLISH (APE)	47
3.8	REMOTE OPERATION WITH MATE CII	67
<b>SECTION 4</b>	<b>CALIBRATION PROCEDURE</b>	<b>82</b>
4.1	GENERAL	82
4.2	TEST EQUIPMENT	83
4.3	PERIODIC CALIBRATION	88
4.4	NONPERIODIC CALIBRATION	96
<b>SECTION 5</b>	<b>THEORY OF OPERATION</b>	<b>105</b>
5.1	GENERAL	105
5.2	OVERALL DESCRIPTION	105
5.3	INPUT POWER SUPPLY	105
5.4	AUXILIARY POWER SUPPLY	107
5.5	CURRENT LIMIT BOARD	107
5.6	INDICATOR BOARD	107
5.7	RANGE RELAY BOARD	107
5.8	AMPLIFIER MODULES	107
5.9	OSCILLATOR MODULE	108
5.10	CPU/GPIB BOARD	108
5.11	PHASE A/REF BOARD	109
5.12	PHASE B/C BOARD	109
5.13	DISPLAY MODULE	109
<b>SECTION 6</b>	<b>MAINTENANCE AND TROUBLESHOOTING</b>	<b>111</b>
6.1	GENERAL	111
6.2	POOR VOLTAGE ACCURACY	111
6.3	POOR OUTPUT VOLTAGE REGULATION	111
6.4	OVERTEMPERATURE LAMP ON	111
6.5	OVERLOAD LAMP ON	111
6.6	CAN'T PROGRAM AC POWER SYSTEM ON GPIB	112
6.7	DISTORTED OUTPUT	112
6.8	NO OUTPUT	113

6.9	MODULE REMOVAL-----	113
6.10	OSCILLATOR MODULE REMOVAL/REPLACEMENT-----	113
6.11	AMPLIFIER REMOVAL/REPLACEMENT -----	114
<b>SECTION 7</b>	<b>REPLACEABLE PARTS-----</b>	<b>117</b>
7.1	GENERAL -----	117
7.2	ORDERING INFORMATION-----	117
<b>SECTION 8</b>	<b>MIL-STD-704D-----</b>	<b>119</b>
8.1	GENERAL -----	119
8.2	INITIAL SETUP-----	119
8.3	TEST PERFORMED -----	119
8.4	KEYPAD ENTRY (Refer to page 31 for Keyboard flow chart) -----	120
8.5	GPIB OPERATION (Refer to page 150 for syntax diagram) -----	122
8.6	TEST SPECIFICATION -----	122
<b>SECTION 9</b>	<b>2-PHASE OPTION (2P) -----</b>	<b>135</b>
9.1	GENERAL -----	135
<b>SECTION 10</b>	<b>RTCA/DO-160C -----</b>	<b>137</b>
10.1	GENERAL -----	137
10.2	INITIAL SETUP-----	137
10.3	TEST PERFORMED -----	137
10.4	KEYPAD ENTRY (Refer to Figure 1 for Keyboard Flow Chart) -----	137
10.5	GPIB OPERATION -----	139
10.6	TEST SPECIFICATION -----	140



## **TABLE OF TABLES**

Table 1-1:	OUTPUT VA PER PHASE -----	1
Table 1-2	SPECIFICATIONS 4500L-P / 2750L-P / 6000L-P -----	4
Table 2-1	MAXIMUM LENGTH OF OUTPUT WIRES -----	20
Table 3-1	POWER OUTPUT TERMINAL BLOCK (TB1) -----	26
Table 3-2	EXTERNAL SENSE CONNECTOR (J6) -----	26
Table 3-3	SYSTEM INTERFACE CONNECTOR (J7) -----	28
Table 3-4	KEYPAD KEY DESCRIPTION -----	32
Table 3-5	OUTPUT PARAMETER SCREEN -----	33
Table 3-6	MEASUREMENT SCREENS -----	34
Table 3-7	CALIBRATION SCREEN -----	34
Table 3-8	CONFIGURATION SCREENS -----	35
Table 3-9	FRONT PANEL DISPLAY ERROR MESSAGES -----	44
Table 3-10	COMMONLY USED GPIB ABBREVIATIONS -----	49
Table 3-11	UNIT ADDRESS GROUP -----	50
Table 3-12	PROGRAM HEADERS -----	54
Table 3-13	TLK ARGUMENTS -----	62
Table 3-14	EXAMPLE TALK RESPONSE (3-PHASE SYSTEM) -----	64
Table 3-15	STATUS BYTE VALUES -----	67
Table 3-16	CHANNEL DESIGNATORS AND NOUN MODIFIERS -----	71
Table 3-17	NON-CNF STATUS MESSAGES -----	76
Table 3-18	DISCRETE FAULT INTERRUPT CONDITIONS -----	80
Table 3-19	SAMPLE PROGRAMMING STRINGS -----	81
Table 4-1	SETUP LOAD VALUES -----	86
Table 4-1	SETUP LOAD VALUES (continued) -----	87
Table 4-2	AMPLIFIER LOAD BALANCE ADJUSTMENTS -----	99
Table 4-3	CURRENT LIMIT ADJUSTMENT -----	102
Table 6-1	TROUBLESHOOTING -----	111

## **TABLE OF FIGURES**

Figure 1-1	MODEL 4500L / 2750L / 6000L-P OUTPUT DRAWINGS -----	2
Figure 2-1	6000L / 2750L and 4500L-3P REAR PANEL CONNECTIONS -----	14
Figure 2-2	SYSTEM INTERCONNECT -----	15
Figure 2-2	SYSTEM INTERCONNECT FOR MODE OPTION -----	16
Figure 2-2	SYSTEM INTERCONNECT -----	17
Figure 2-2	SYSTEM INTERCONNECT -----	18
Figure 2-3	FUNCTION TEST SETUP -----	23
Figure 3-1	FRONT PANEL CONTROLS AND INDICATORS -----	25
Figure 3-2	REAR PANEL CONNECTIONS - 6000L/2750L/4500L -----	27
Figure 3-3	FUNCTION STROBE CONNECTIONS -----	31
Figure 3-4	KEYPAD -----	31
Figure 3-5	REMOTE COMMEND SEQUENCES -----	52
Figure 3-6	CIIL PROGRAM SYNTAX -----	69
Figure 3-7	CONFIDENCE TEST FLOW DIAGRAM -----	74
Figure 4-1	INTERNAL ADJUSTMENTS AND JUMPER LOCATIONS -----	84
Figure 4-2	EQUIPMENT HOOKUP FOR PERIODIC CALIBRATION -----	90
Figure 4-3	FLOW DIAGRAM A REMOTE CALIBRATION -----	94
Figure 4-3	FLOW CHART (continued) -----	95
Figure 5-1	AC POWER SYSTEM BLOCK DIAGRAM -----	106
Figure 5-2	OSCILLATOR MODULE BLOCK DIAGRAM -----	108
Figure 6-1	MODULE LOCATION -----	115



## SECTION 1 INTRODUCTION AND SPECIFICATIONS

### 1.1 INTRODUCTION

This instruction manual contains information on the installation, operation, calibration, and maintenance of all power systems that use the 2750L-P, 4500L-P and 6000L-P.

### 1.2 GENERAL DESCRIPTION

This power system is a high efficiency power source that provides a low distortion output. The output can be configured in either a single or three-phase configuration.

A number of Power Sources can be configured to supply full output power up to 27000VA. Table 1-1 shows the output VA per phase for each of the available power system models. The table also shows that increased power is available at a reduced operating temperature of 35°C.

MODEL		OUTPUT VA PER PHASE		NUMBER PHASES
		50°C	35°C	
2750L-1P		2700	3000	1
2750L-3P		900	1000	3
	Number of <u>power sources</u>			
4500L-1P	1	4500	5000	1
4500L-3P	1	1500	1667	3
6000L-1P	1	5330	6000	1
6000L-3P	1	1770	2000	3
9000L/2-1P	2	9000	10000	1
9000L/2-3P	2	3000	3333	3
12000L-1P	2	10600	12000	1
12000L-3P	2	3540	4000	3
13500L/3-1P	3	13500	15000	1
13500L/3-3P	3	4500	5000	3
27000L/6-1P	6	27000	30000	1
27000L/6-3P	6	9000	10000	3

Table 1-1: OUTPUT VA PER PHASE

Figure 1-1

MODEL 4500L / 2750L / 6000L-P OUTPUT DRAWINGS

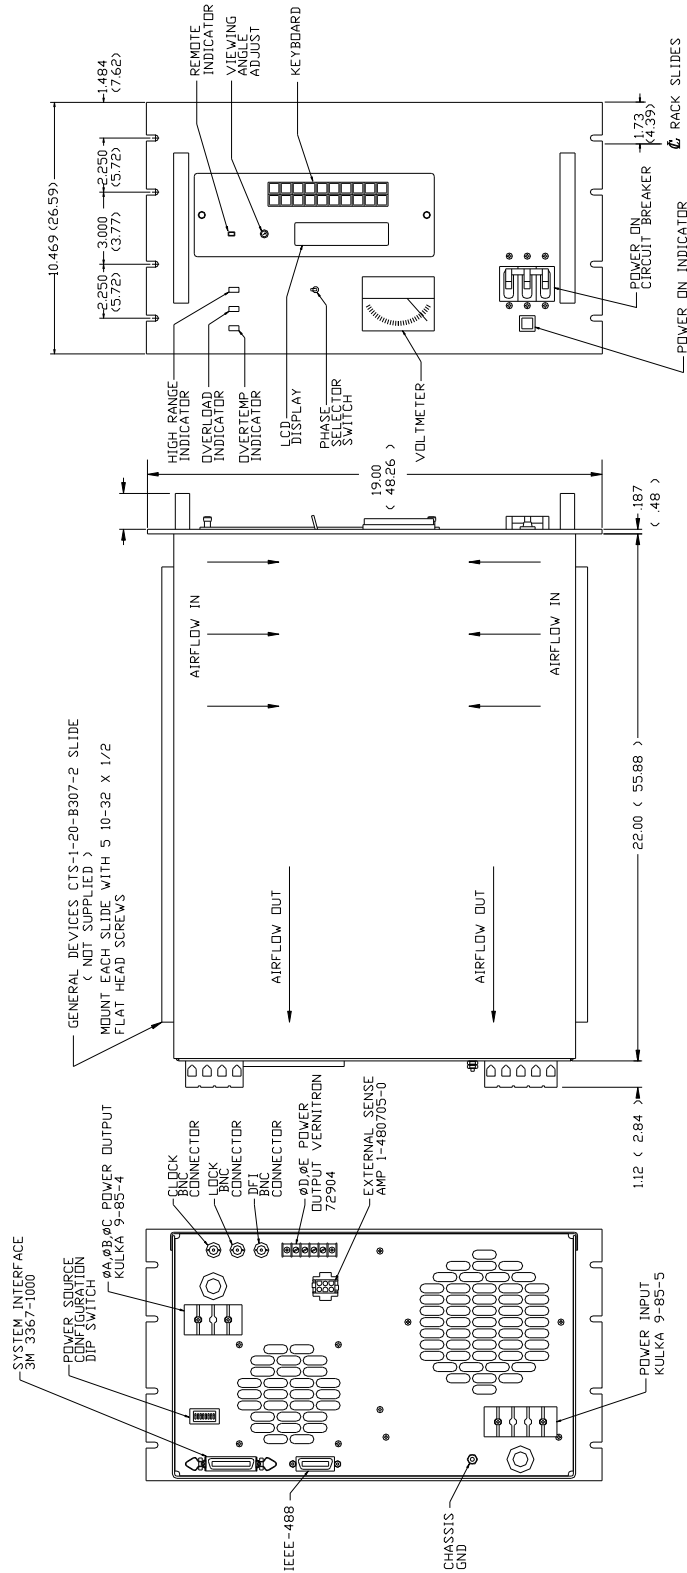


FIGURE 1-1  
CALIFORNIA INSTRUMENTS 4500L/2750L/6000L

Full power is available at the maximum output voltage on either of two voltage ranges. The standard voltage ranges are 135 and 270. Three optional voltage range pairs are available: 67.5/135, 156/312 and 200/400.

All "P" Power systems except for the 6000L will deliver full power from 45 to 2000 Hz. All 6000L-P power systems will deliver full power from 45 to 440 Hz.

The 2750L-3P, 4500L-3P and 6000L-3P will deliver full power from 45 to 5000 Hz. The power sources are illustrated in Figure 1-1. The 200/400 volt range (EHV Option) is specified for full power from 45 to 1000 Hz.

The output frequency of all "P" power systems can be programmed down to 17 Hz at a reduced output voltage.

### **1.3        ACCESSORY EQUIPMENT/RACK SLIDES**

General Devices Model CTS-1-20-B307-2 rack slides may be attached to the sides of the power source using 10-32 X 1/2 flat head screws.

### **1.4        SPECIFICATIONS**

Table 1-1 contains the operation specifications of the AC Power System. All specifications are tested in accordance with standard California Instruments test procedures. The following specifications apply for operation at 100% of full scale voltage, constant line voltages and under no-load and with External Sense Lines connected unless specified otherwise.

**Table 1-2 SPECIFICATIONS 4500L-P / 2750L-P / 6000L-P**

(All specifications apply using external sense, 23 ±5°C, constant line and load conditions unless specified otherwise, after 30 minute warm-up.)

**ELECTRICAL**

MODEL	OUTPUT SPECIFICATIONS							
	VA (At full output voltage)				CURRENT PER PHASE VOLTAGE RANGE			
	TOTAL		PER PHASE		135		270	
	50°C	35°C	50°C	35°C	50°C	35°C	50°C	35°C
2750L-3	2700	3000	900	1000	6.66	7.40	3.30	3.70
2750L-1	2750	3000	2700	3000	20.0	22.22	10.00	11.11
4500L-3	4500	5000 <sup>(1)</sup>	1500	1667 <sup>(1)</sup>	11.12	12.34 <sup>(1)</sup>	5.56	6.17 <sup>(1)</sup>
4500L-1	4500	5000 <sup>(1)</sup>	4500	5000 <sup>(1)</sup>	33.34	37.04 <sup>(1)</sup>	16.67	18.52 <sup>(1)</sup>
6000L-3	5330	6000	1770	2000	13.12	14.82	6.56	7.41
6000L-1	5330	6000	5330	6000	39.35	44.44	19.68	22.22
9000L/2-3	9000	10000 <sup>(1)</sup>	3000	3333 <sup>(1)</sup>	22.24	24.68 <sup>(1)</sup>	11.12	12.34 <sup>(1)</sup>
9000L/2-1	9000	10000 <sup>(1)</sup>	9000	10000 <sup>(1)</sup>	66.66	74.08 <sup>(1)</sup>	33.33	37.04 <sup>(1)</sup>
12000L/2-3	10600	12000	3540	4000	26.24	29.62	13.12	14.81
12000L/2-1	10600	12000	10600	12000	78.7	88.88	39.35	44.44
13500L/3-3	13500	15000 <sup>(1)</sup>	4500	5000 <sup>(1)</sup>	33.34	37.04 <sup>(1)</sup>	16.67	18.52 <sup>(1)</sup>
13500L/3-1	13500	15000 <sup>(1)</sup>	13500	15000 <sup>(1)</sup>	100.0	111.2 <sup>(1)</sup>	50.0	55.6 <sup>(1)</sup>
18000L/3-3	15900	18000	5300	6000	39.35	44.44	19.68	22.22
18000L/3-1	15900	18000	15900	18000	118.0	133.4	59.0	66.7
27000L/6-3	27000	30000 <sup>(1)</sup>	9000	10000 <sup>(1)</sup>	66.66	74.08 <sup>(1)</sup>	33.33	37.04 <sup>(1)</sup>
27000L/6-1	27000	30000 <sup>(1)</sup>	27000	30000 <sup>(1)</sup>	200.0	222.2 <sup>(1)</sup>	100.0	111.1 <sup>(1)</sup>

NOTE: Increased current at 35°C is available up to 2000 Hz or 440Hz for 6000L.

(1) For UP option output VA and Current is limited to 50°C values.

For other Voltage Ranges: Current per phase = VA (per phase)/Voltage Range

Power factor: 0 to unity at full rated output VA

Peak Repetitive Current: 2.5 times the maximum TRMS current at 50°C  
2750L & 6000L: 4 times TRMS current at 50°C

Peak Non-repetitive Current: (10ms, 20ms for 6000L) 2.7 times the maximum TRMS current at 50°C  
2750L & 6000L: 4 times TRMS current at 50°C

Voltage range:           135 and 270 (Standard)  
                               67.5 and 135 (LV Option)  
                               156 and 312 (HV Option)  
                               200 and 400 (EHV Option)

Total Distortion: (Maximum for all harmonics and noise to 300 KHz at full power with linear load)

45 Hz to 2 KHz:           1% THD  
                   to 5 KHz:       2% THD

Line regulation:  $\pm 0.02\%$  of full scale for  $\pm 10\%$  line change

Load regulation:  $\pm 0.05\%$  of full scale from no load to full load

Voltage accuracy (no-load, 23°C, based on TRMS measurement, 45 to 5000 Hz values specified otherwise):

$\pm 0.135$  volts from 5 to 135 volts  
 $\pm 0.54$  volts from 135 to 312 volts  
 $\pm 1.5$  volts from 5 to 200 volts (EHV Option), 45 to 1 KHz  
 $\pm 3.0$  volts from 200 to 400 volts (EHV Option), 45 to 1 KHz


Add 2% of programmed value below 45 Hz.

Frequency Range:

At Full Scale Voltage  
 2750L-3, 4500L-3,  
 6000L-3                   45 Hz to 5000 Hz at 50°C maximum currents  
 All other models       45 Hz to 2000 Hz at 35°C maximum currents

All 6000L systems       45 Hz to 440Hz and 6000L-1P

At less than Full Scale Voltage: (Refer to graph below)

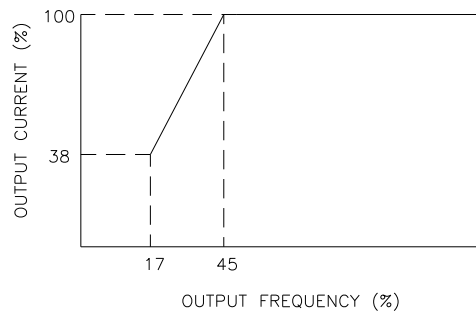

Frequency accuracy:  $\pm 0.001\%$  of programmed value

Frequency resolution: 0.01 Hz to 99.99  
                               0.1 Hz to 999.9  
                               1 Hz to 5000 Hz

Phase angle accuracy (With the same load on each phase):

Phase B and C relative to phase A:  $\pm 2$  degrees to 2 KHz  
 $\pm 3$  degrees to 5 KHz

## PROTECTION

Output overload:	Automatic default with output relays open when programming from 5.0 volts.
Output short circuit:	Immediate default with no automatic recovery.
Input Overvoltage:	Overvoltage causes the circuit breaker to trip.
Loss of Input phase:	No output for loss of Phase B or C. Normal operation at reduced power with loss of Phase A.
Sense line fault:	Immediate default of programmed output with relays open.
Temperature:	Default of programmed output with relays open.

#### MEASUREMENTS (at 23°C)

Voltage accuracy:	±10 Digits of resolution ±2.0 volts from 0 to 200 volts (EHV option) ±3.5 volts from 200 to 400 volts (EHV option)
Voltage resolution:	0.1 volt for 1 digit

	MODEL	
	<u>2750L-3P, 6000L-3P</u> <u>2750L-1P-EHV, 4500L-3P</u>	<u>All Other Models</u>
Current accuracy:	±10 Digits of resolution	
Current resolution:	0.01 Amp	0.1 Amp For 1 digit
True power accuracy:	±10 Digits of resolution	
True power resolution:	1 Watt	0.01 Kw For 1 digit
Apparent power resolution:	1 VA	0.01 KVA For 1 digit
Power factor resolution:	.001	For 1 digit
Frequency	ACCURACY (Hz)	RESOLUTION (Hz)
45 to 99.99 Hz	±0.02	0.01
100 to 499.9 Hz	±0.2	0.1
500 to 999.9 Hz	±0.5	0.1
1000 to 5000 Hz	±10	1

NOTE: For frequencies below 45 Hz, add 2% of measured value to measurement accuracy specification.

Phase angle accuracy:	±2.0 degrees to 2 KHz, ±3 degrees to 5 KHz
Phase angle resolution:	0.1 degree




## SUPPLEMENTAL SPECIFICATIONS

### LINE INPUT

Voltage:	187 to 252V <sub>L-L</sub> three-phase
2750L:	Same as above except can also operate with 1-phase input with 187 to 252 volts.
6000L:	208 to 252V <sub>L-L</sub>
UP Option:	342 to 456V <sub>L-L</sub> three-phase
Current (PF=.6, EFF=75%, V line=minimum, 3P, full load):	31 Amps
2750L-3P:	19 Amps
2750L-1P(input):	29 Amps
6000L-3P(output):	35 Amps
6000L-1P(output):	40 Amps
Frequency:	47 to 440 Hz
Efficiency:	75% (typical)
Surge Current:	
(turn-on, V <sub>L-L</sub> = 252):	178 Amps
	100 Amps for 6000L

## SUPPLEMENTAL OUTPUT SPECIFICATIONS

### Full current range:

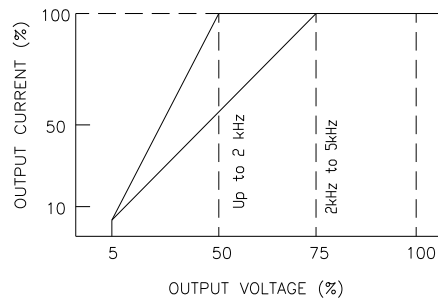

Output noise voltage (20 KHz to 1 MHz at full-load):

200 millivolts (typical)

80 millivolts (typical for 6000L)

Voltage temperature coefficient:  $\pm 0.02$  volts per  $^{\circ}\text{C}$

Voltage stability (24 hours, at constant line, load and temp.):

$\pm 0.015\%$  of full scale

Voltage Settling Time: (from start of voltage change from 5.0 VRMS or higher voltage to a higher voltage to within 2% of final value.)

No-load: 16 milliseconds

Full-load: 0.3 seconds (16 milliseconds to within 15% of final value)

Steady-State Output Impedance (ohms) = (voltage range)  $\times$  (0.0005)/Full-load current

Frequency Temperature Coefficient:  $\pm 5$  ppm of value per  $^{\circ}\text{C}$

Frequency Stability:  $\pm 15$  ppm of value per year

Isolation: Line input to output:  $>500$  VRMS

Front panel controls:

Power On/Off circuit breaker

Keypad: 20-key keyboard

Analog Meter Phase Selection Switch

Bus: IEEE-488 (GPIB)

Subsets; SH1, AH1, T6, L3, SR1, RL2, DC1, DT1

Codes and Formats:

Numeric Representation: NR1, NR2 or NR3

Header: HR1 or HR2 (upper or lower case)

Message Separators: SR1

Data transfer rate: 200K bytes per second

Language: A California Instruments language which is upward compatible from other C.I. products

Functions	Range	Resolution	Initialization
<sup>1</sup> Voltage	0 to range	0.1	5.0
Voltage range	135/270	0.1	135
<sup>1</sup> Phase angle	0 to 999.9	0.1	B = 240 C = 120
Output relay	(GPIB only)	Open or Close	Open
External Sync		Internal or External	Internal
Storage Registers		Registers 0 through 16	
Frequency			
Range:	45 to 5000 Hz for 4500L-3P & 2750L-3P 2000 Hz for all others. 440 Hz for 6000L.		
Resolution:	0.01 Hz from 45.00 to 99.99 Hz 0.1 Hz from 100.0 to 999.9 Hz 1 Hz from 1000 to 5000 Hz		
Default:	60 Hz (any other available)		

<sup>1</sup>Current Limit

MODEL	CURRENT LIMIT RANGE		RESOLUTION	DEFAULT (on 135 Range)
	VOLTAGE RANGE(1)			
	135	270		
2750L-3P	0 to 7.40,	3.70	0.01	7.40
2750L-1P	0 to 22.22,	11.11	0.01	22.22
4500L-3P	0 to 12.34,	6.17	0.01	12.34
4500L-1P	0 to 37.04,	18.52	0.01	37.04
6000L-3P	0 to 14.82,	7.41	0.01	14.82
6000L-1P	0 to 44.44,	22.22	0.01	44.44
9000L/2-3P	0 to 24.68,	12.34	0.01	24.68
9000L/2-1P	0 to 74.08,	37.04	0.01	74.08
12000L/2-3P	0 to 24.68,	12.34	0.01	24.68
12000L/2-1P	0 to 74.08,	37.04	0.01	74.08
13500L/3-3P	0 to 37.04,	18.52	0.01	37.04
13500L/3-1P	0 to 111.2,	55.6	0.1	111.2
18000L/3-3P	0 to 44.44,	22.22	0.01	44.44
18000L/3-1P	0 to 133.4,	66.7	0.1	133.4
27000L/6-3P	0 to 74.08,	37.04	0.01	74.08
27000L/6-1P	0 to 222.2,	111.1	0.1	222.2

For other Voltage Ranges:      Current Limit Range = (VA per phase)/Voltage Range

NOTE (1):      For UP option refer to 50°C current values.    Accuracy: -0 to +15% of programmed value

NOTE:      <sup>1</sup>Independent control for each output phase

NOTE (\*)      Customer access to Initial/Default values for:

Frequency, Voltage, Voltage Range and Current Limit

## OTHER PROGRAMMABLE FUNCTIONS

Register linking

Calibration of Phase,      Output Voltage and measurement functions.

Ramp/Sweeps of Voltage,      Frequency, Phase and Current Limit up to 2 functions simultaneously.

Service request (GPIB):      Service Request for output faults, syntax errors and end of measurement.

Group execute trigger (GPIB):      Trigger setups and terminate programs.

Status reporting:      Serial Poll Status Byte and error messages.

Remote Shutdown      A logic low input will program the voltage to 0 and open the Output Relays.

Output Relay:      Controlled by GPIB. Normally open at power-up. Closed when the first function is programmed from the front panel keypad.

External sense:      Compensates for up to a 10% drop in the load lines.

Function Strobe Output:      A 400 uS logic low output when any output is programmed.

External Sync:      A 5 volt, 45 to 5 KHz, 5 milliamp TTL input. The output will track the frequency and phase of this input. Loss of this input will cause the output to default.

Indicators:	32 character LCD display, Output Overload, Over temperature Power On, High Voltage Range.
Dimensions:	10.5 inches (26.7 cm) high, 23 inches (58.4 cm) deep and 19 inches (48.3 cm) wide.
Weight lbs (Kg):	175 (79.2)
Material:	Aluminum for Front panel, rear panel and top cover. Steel for chassis.
Finish:	Front panel - painted gray 26440 per Federal Standard 595 Chassis - zinc plate type 2 class 2. Rear panel and top cover - iridite.
Air intake/exhaust:	Intake from both sides of chassis. Exhaust to the rear.
Modularity:	Oscillator, All amplifiers, DC power supplies, Current Limit Board Assembly, Range-Relay Board, All displays
Connectors	
Input Power:	Kulka terminal block, 9-85-5 (TB3)
Output Power:	Kulka terminal block, 9-85-4 (TB1)
Auxiliary Output Power:	Barrier Strip (TB2)
External Sense:	AMP connector, 1-480705-0 (J6)
System Interface (mating connector):	3M Connector 3366-1001 plug
System Interface:	3M connector, 3367-1000 (J7)
IEEE-488 connector:	J5
Chassis slides:	Zero Manufacturing Company Model CTN-1-20-E94
Operating temperature:	0°C to 50°C
Storage temperature:	-40°C to +85°C
Operating altitude:	0 to 6000 Ft.

## OPTIONS SPECIFICATIONS

Universal Input Power (UP option): 342 to 456 V<sub>L-L</sub> three phase

Output Voltage Ranges: 156/312 (HV option)  
67.5/135 (LV option)  
200.0/400.0 (EHV option)

Master: Must be used with LK option

Slave: Must be used with LK option

Square Wave (4500L-3P and 2750L-3P only) Performance from 50 Hz to 5 KHz:

Rise and Fall Time (10% to 90%): Less than 40 microseconds

Droop: Less than 10%

Overshoot (resistive load): Less than 20%

Mode: Allows power system to be programmed to a 1 or 3 phase output.

Auxiliary outputs (Option AX): Master and Slave options not available with this option

(All specifications at 23°C and verified with TRMS voltmeter. The Phase D sense lines must be connected to the Phase D output.)

Phase D:

Voltage: 26.0 Vrms fixed

Accuracy: ±2%

Current: 3.0 Amps (Max)

Frequency: 360 to 440 (Tracks the main outputs)

Phase: Tracks the Phase A output

Accuracy: ±1 degree. (All outputs at half load, 400 Hz)

Distortion: 1% THD maximum with linear load

Line Regulation: ±0.05% using external sense

Load Regulation: ±0.05% using external sense

Phase E

Voltage: 5.0 Vrms fixed

Accuracy: ±5%

Current: 5.0 Amps (Max)

Frequency: 360 to 440 Hz (Tracks the main outputs)

Phase: Tracks the phase A output with Phase D

Distortion: 1% THD maximum with linear load

Line Regulation:  $\pm 0.1\%$  for 10% line change

Load Regulation:  $\pm 10\%$  from no-load to full-load

MATE (MT option)

CIL language

DFI connector

Confidence Test (Tests 3 phases for output, oscillator drive, phase relationship, frequency and current limit.)

MIL-704D (704D option)

Performs all sections of MIL-STD-704D

2-PHASE (2P): 2-phase operation

RTCA/DO-160C (DO160C option)

Performs all sections of RTCA/DO-160C

## SYSTEMS

MODEL	POWER PER PHASE		MAX CURRENT PER PHASE (135V RANGE)	
	(35°C)	UP	(35°C)	UP
9000L-1P	10000	9000	74.08	66.66
13500L-1P	15000	13500	111.2	100.0
27000L-1P	30000	27000	222.2	200.0
9000L-2P	5000	4500	37.04	33.34
9000L-3P	3333	3000	34.68	22.22
12000L-3P	4000		29.62	
12000L-1P	12000		88.88	
13500L-3P	5000	4500	37.04	33.34
18000L-3P	6000		44.44	
18000L-1P	18000		133.4	
27000L-3P	10000	9000	74.08	66.66

## **SECTION 2            INSTALLATION AND ACCEPTANCE**

### **2.1            UNPACKING**

Inspect the unit for any possible shipping damage immediately upon receipt. If damage is evident, notify the carrier. DO NOT return an instrument to the factory without prior approval. Do not destroy the packing container until the unit has been inspected for damage in shipment.

### **2.2            POWER REQUIREMENTS**

The AC Power System has been designed to operate from a three-phase AC line voltage. The input line voltage may be between 187 volts and 252 volts line-to-line for the standard product or 342 to 456 volts line-to-line for the UP option. The frequency may be between 47 Hz and 440 Hz. Select an AC input line and hookup wire to the AC Power System that will deliver 40 amps per phase and still supply a minimum of 187 volts line-to-line. Refer to Figure 2-2 for circuit breaker requirements of all multichassis power system. The 6000L power system must have a minimum of 208V<sub>L-L</sub> for a full rated load on the output.

### **2.3            MECHANICAL INSTALLATION**


The power system has been designed for rack mounting in a standard 19 inch rack. The unit should be supported from the sides with optional rack slides. See Accessory Equipment/Rack Slides in paragraph 1.3. The cooling fan at the rear of the unit must be free of any obstructions which would interfere with the flow of air. A 2.5 inch clearance should be maintained between the rear of the unit and the rear panel of the mounting cabinet. Also, the air intake holes on the sides of the power source must not be obstructed. See Figure 1-1.

### **2.4            INPUT WIRING**

The AC Power System must be operated from a three-wire three-phase service with a fourth wire for common. The common wire is connected to the chassis of the AC Power System. The mains source must have a current rating greater than or equal to the AC Power System circuit breaker, 40 amps. Refer to Figure 2-1 for the input power connections. Refer to Figure 2-2 for all multichassis power systems.

The 2750L may also be operated from a 1-phase input. The 1-phase line input must be connected between the øB and øC terminals of TB3 on the rear panel. These terminals are identified as terminals 2 and 3 of TB3 in Figure 2-1.


**Figure 2-1 6000L / 2750L and 4500L-3P REAR PANEL CONNECTIONS**

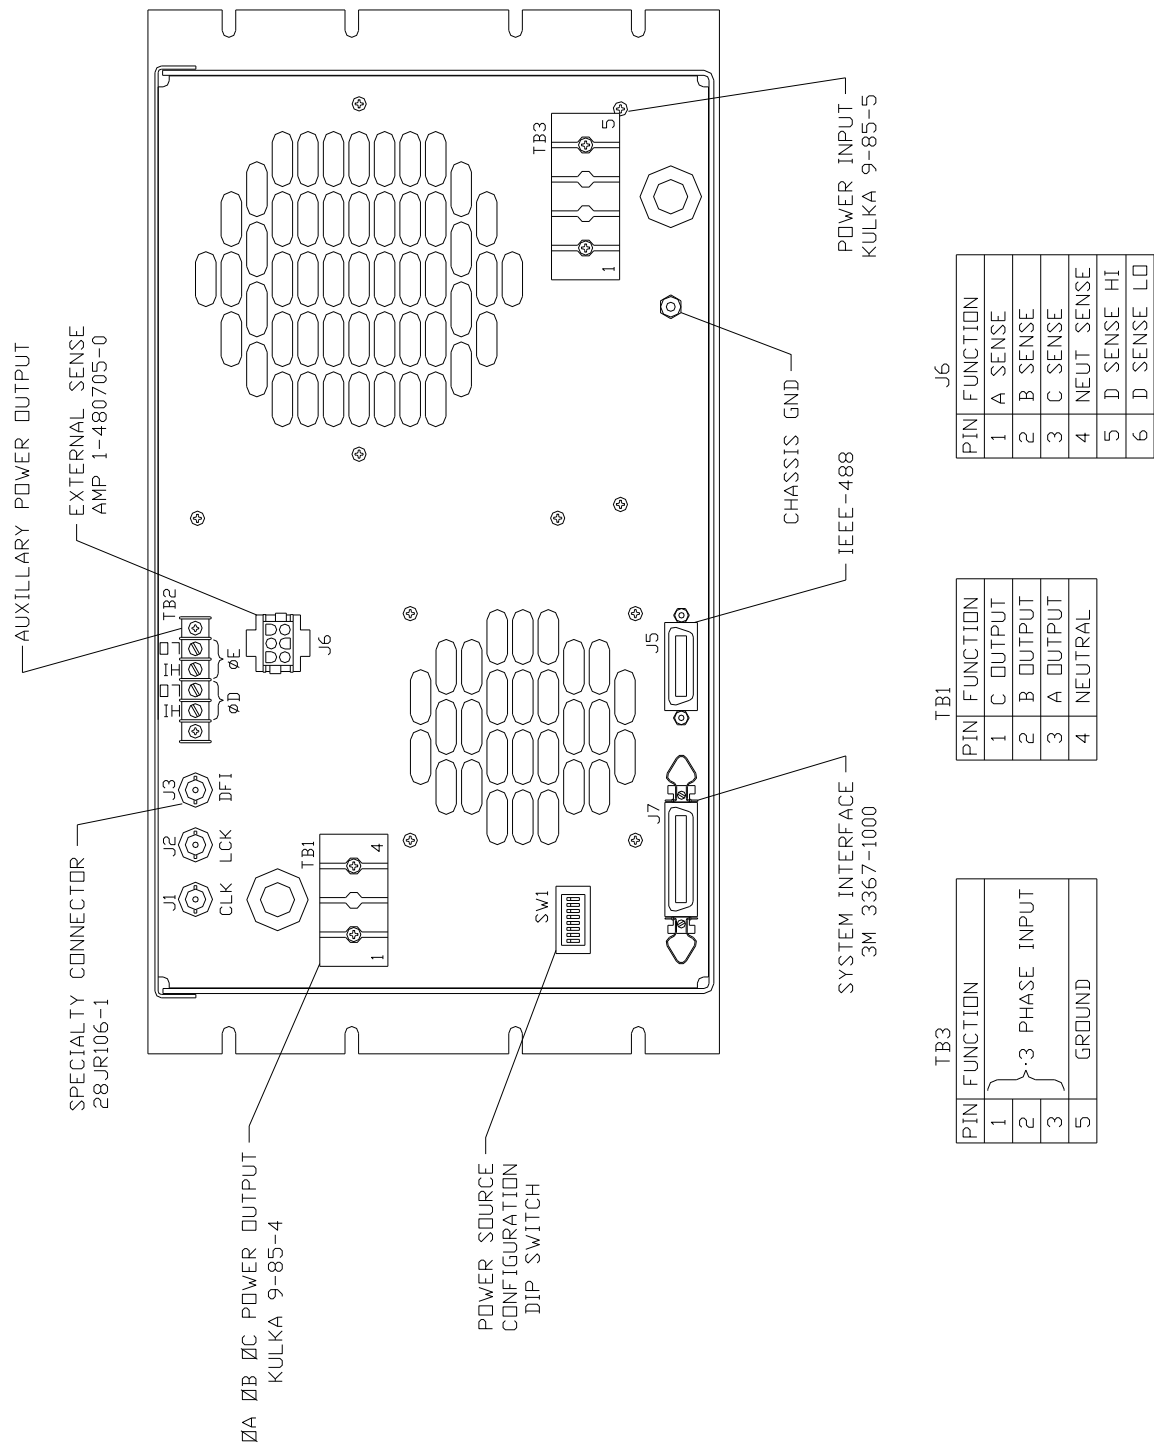





**6000L-3, 12000L/2-3, 4500L-3, 18000L/4-3**

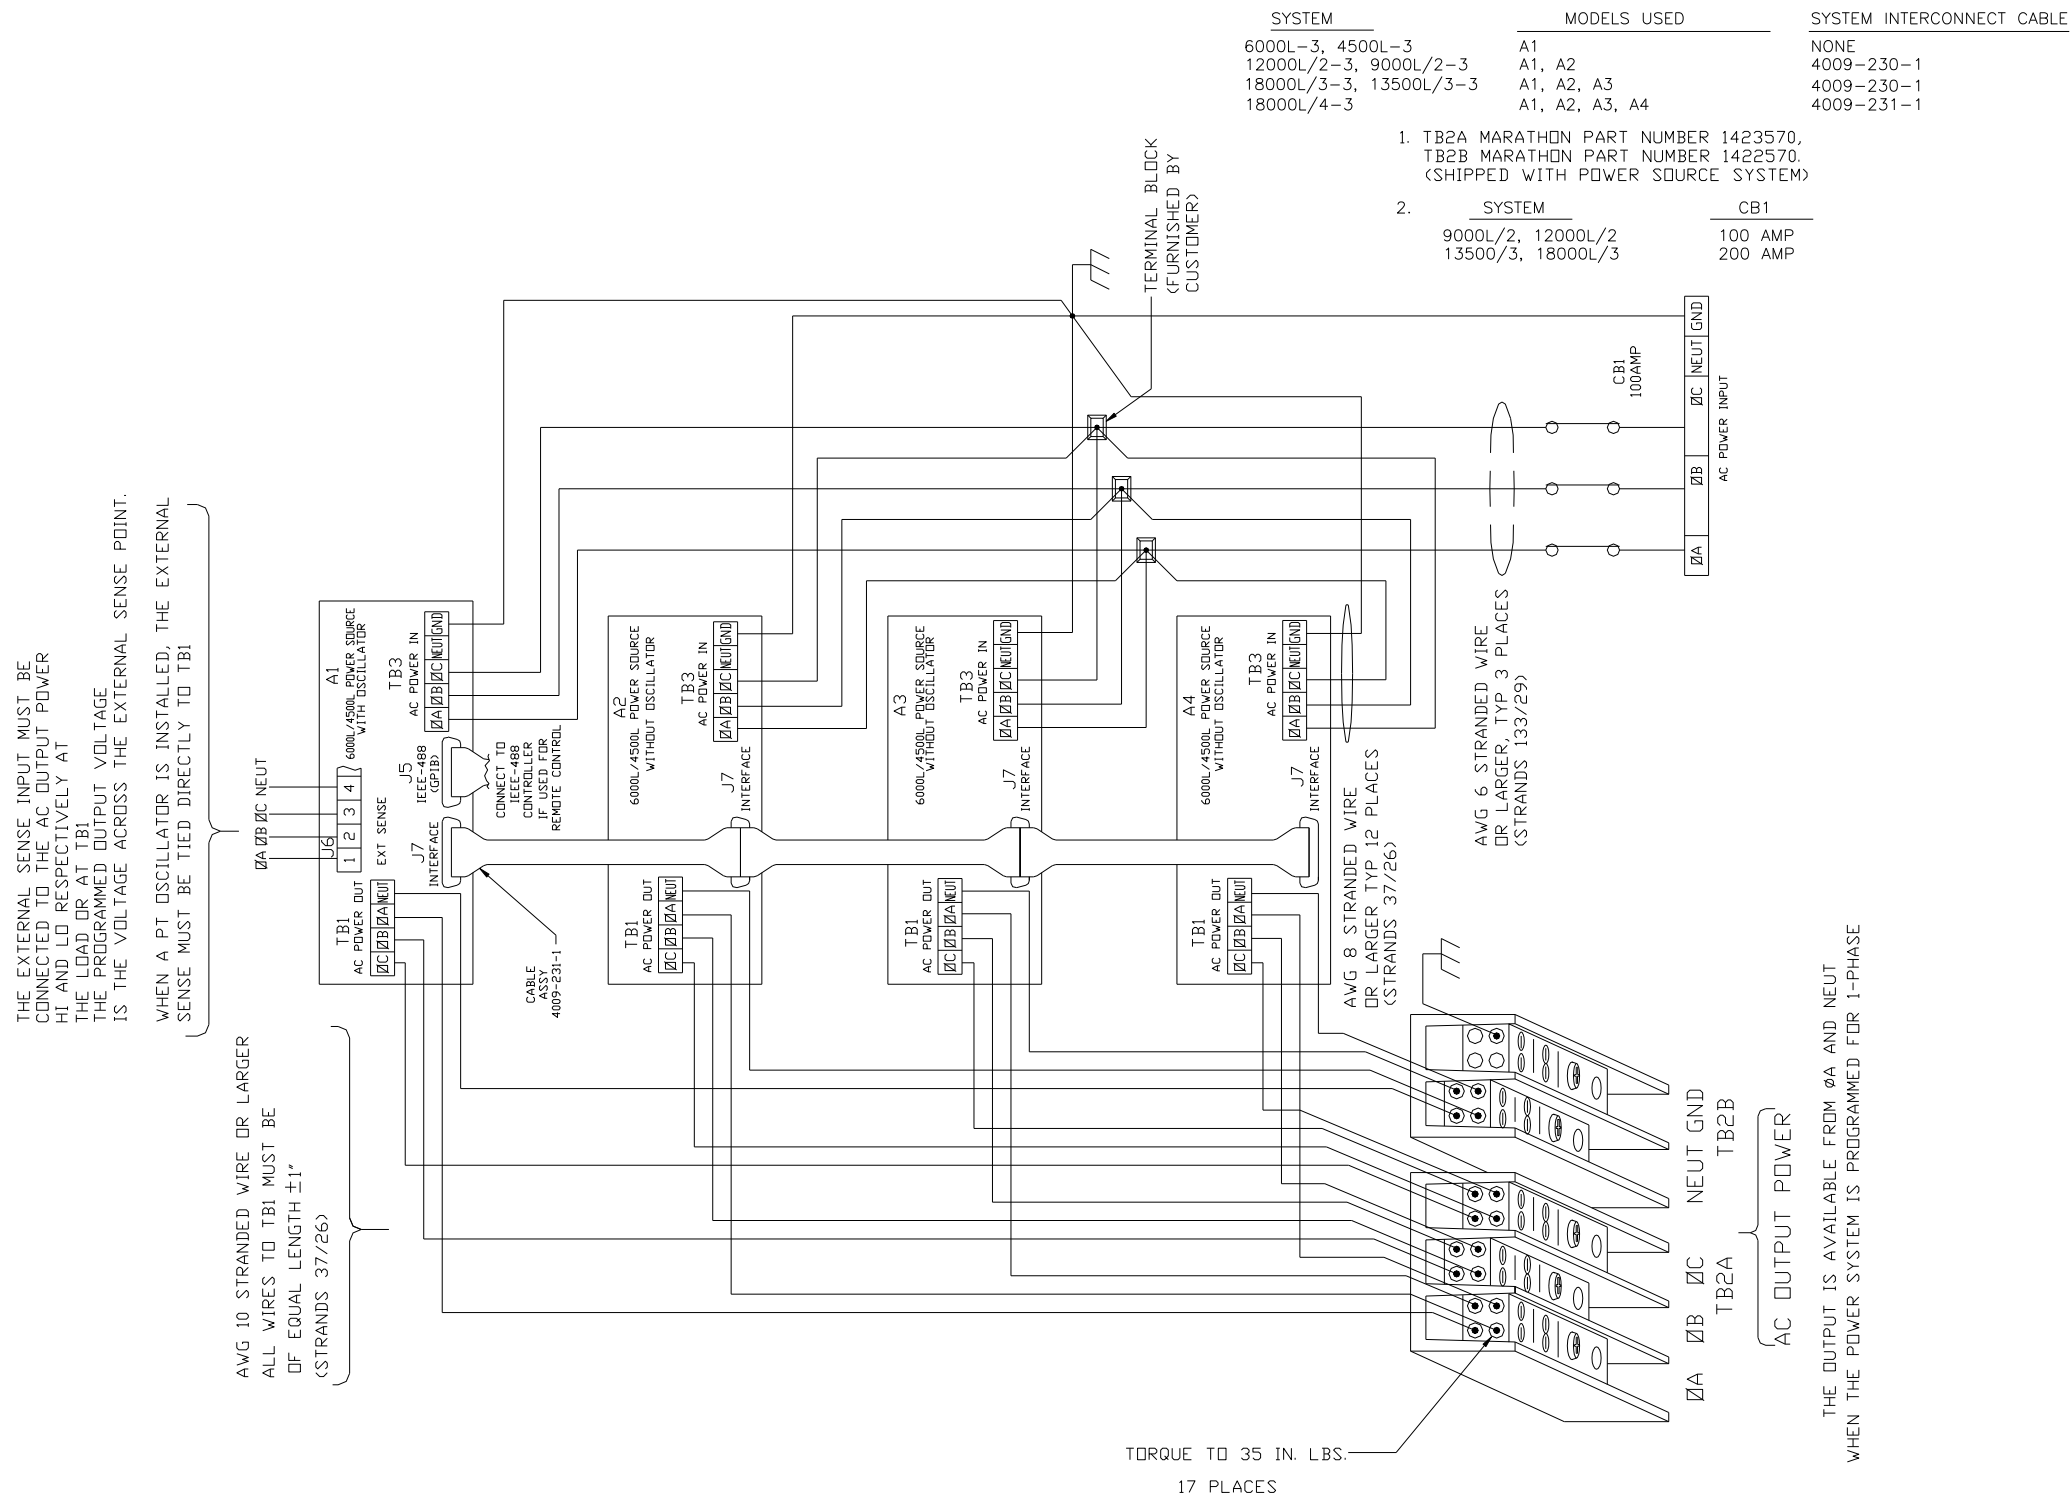

**Figure 2-2 SYSTEM INTERCONNECT FOR MODE OPTION**  
**6000L-3, 12000L/2-3, 4500L-3, 9000L/2-3, 13500L/3-3, 18000L/4-3 18000L/3-3**

4995-665  
 REV A

SYSTEM	MODELS USED	SYSTEM INTERCONNECT CABLE
6000L-1, 4500L-1	A1	NONE
12000L/2-1, 9000L/2-1	A1, A2	4009-230-1
18000L/3-1, 13500L/3-1	A1, A2, A3	4009-230-1
27000L/6-1	A1, A2, A3, A4, A5, A6	4009-231-1

4. FOR 18000L/3-1, 18000L/4-1 & 27000L/6-1 USE 200 AMP CB1.
3. FOR 9000L/2-1, 12000L/2-1 & 13500L/3-1 USE 100 AMP CB1.
2. TB2A (12000L/2-1 & 18000L/3-1) (9000L/2-1 & 13500L/3-1) MARATHON PART NUMBER 1422570. TB2A (27000L/6-1) MARATHON PART NUMBER 1432555. (SHIPPED WITH POWER SOURCE SYSTEM) NO TB1 FOR 4500L-1
1. SYSTEM INTERCONNECT SHOWN FOR 27000L/6-1 SYSTEM. FOR 18000L/2-1, 13500L/3-1 SYSTEM ELIMINATE POWER SOURCES A4, A5 & A6. FOR 12000L/2-1, 9000L/2-1 SYSTEM ELIMINATE POWER SOURCES A3, A4, A5 & A6. ONE CONNECTOR OF CABLE ASSY 4009-230-1 IS NOT TERMINATED FOR 9000L/2-1 AND 12000L/2-1.

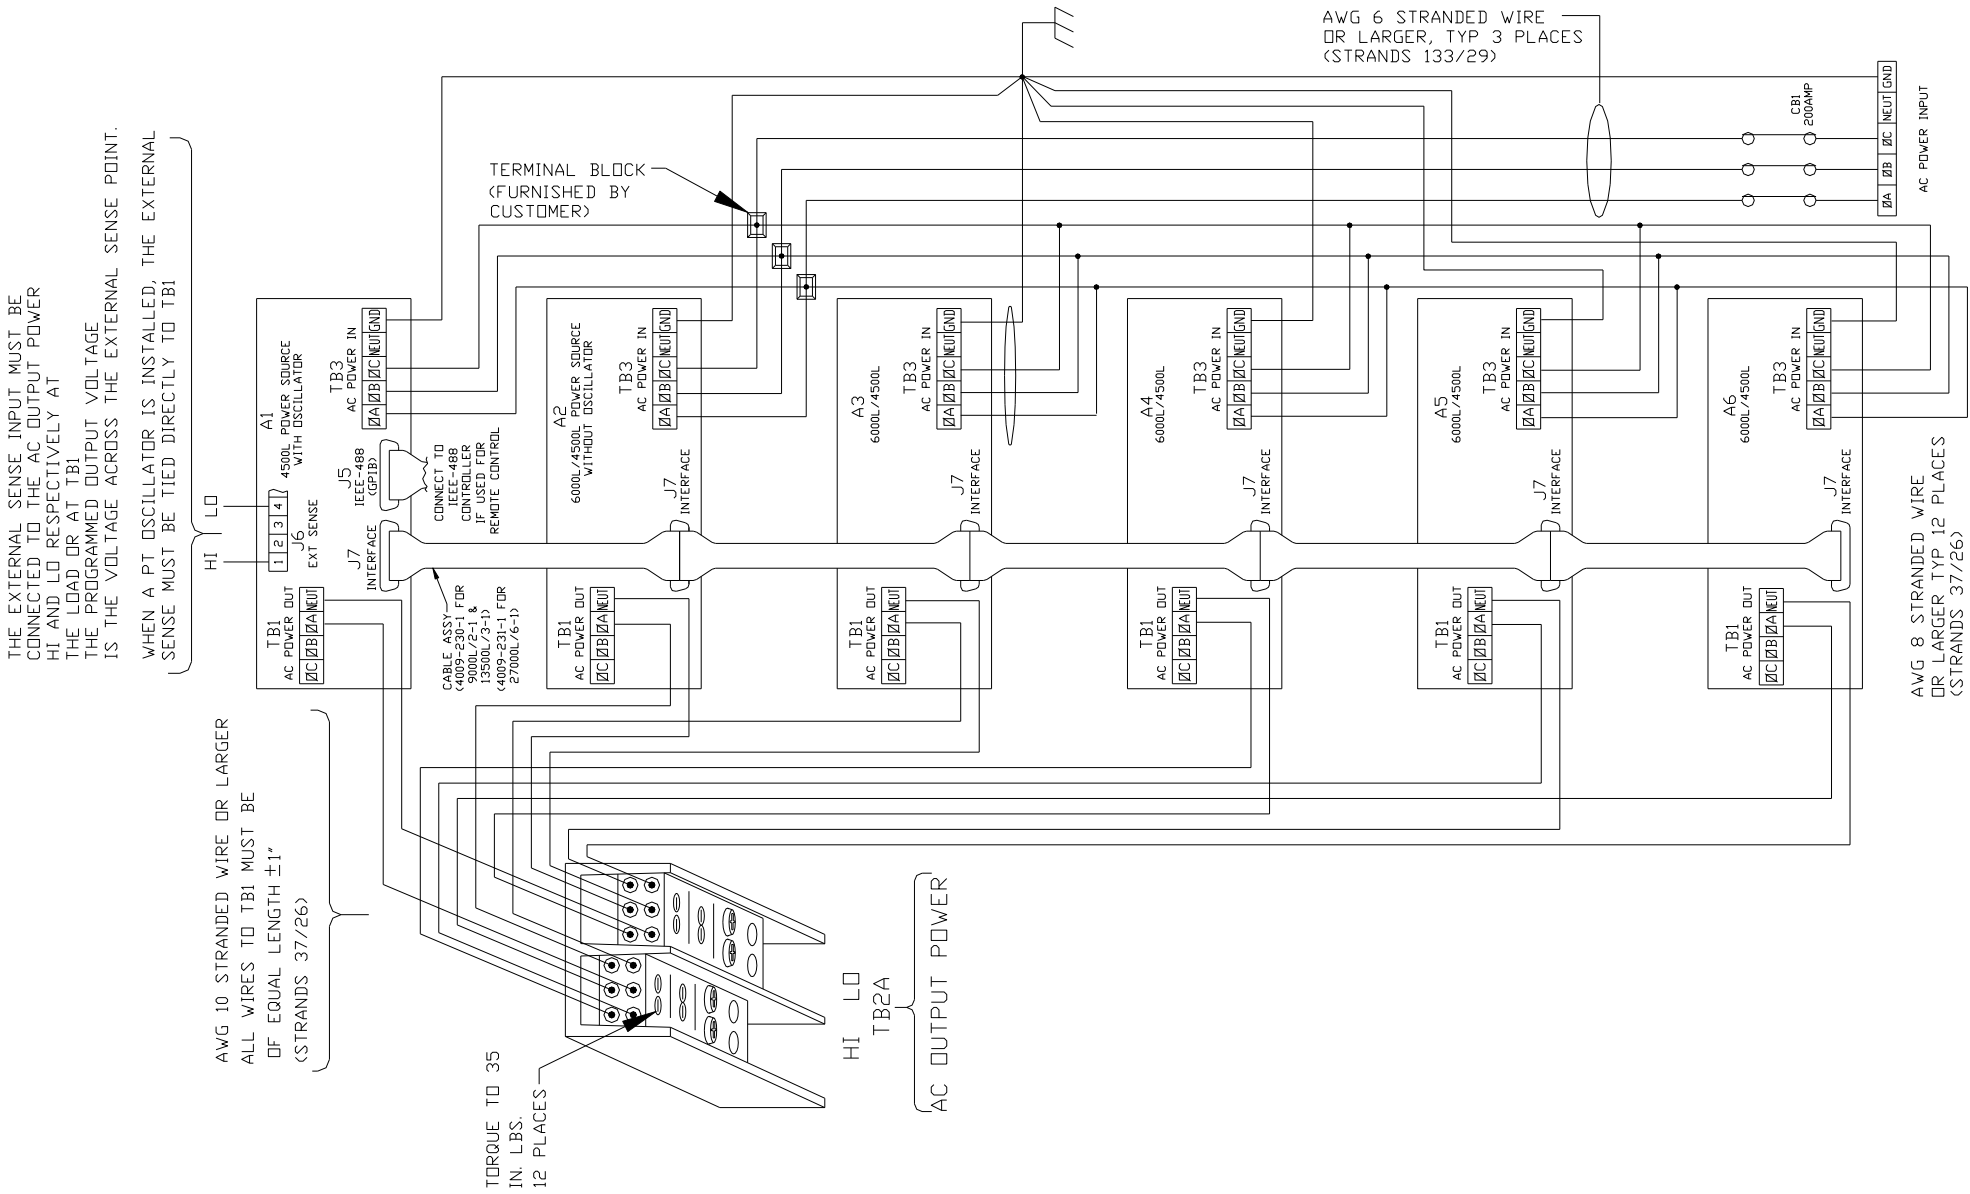


Figure 2-2 SYSTEM INTERCONNECT  
FOR ALL 1-PHASE SYSTEMS

4995-653  
REV C



# **CAUTION**

Voltages up to 480 VAC are available in certain sections of this power source. This equipment generates potentially lethal voltages.

# **DEATH**

on contact may result if personnel fail to observe safety precautions. DO NOT touch electronic circuits when power is applied.

## 2.5 OUTPUT CONNECTIONS

The output terminal block, TB1, is located at the rear of the power system. For a single power source power system, all load connections must be made at TB1. The external sense inputs allow the power system output voltages to be monitored directly at the load and must be connected. The external sense wires are connected at J6 on the rear panel. Refer to Figure 2-2 for all connections.

The output power cables must be large enough to prevent a voltage difference greater than 2 VRMS between the voltage at TB1 and the voltage between External Sense HI and LO input. Table 2-1 shows the maximum length of the output wires. The table assumes the External Sense input is connected at the load.

**Table 2-1 MAXIMUM LENGTH OF OUTPUT WIRES**

WIRE GAGE (AWG)	MAXIMUM LENGTH (ft) OF WIRE BETWEEN OUTPUT (HI) AND LOAD		
14	MAX LENGTH (ft)	=	$2/(\text{MAX CURRENT PER PHASE} \times 0.0027)$
12	MAX LENGTH (ft)	=	$2/(\text{MAX CURRENT PER PHASE} \times 0.0017)$
10	MAX LENGTH (ft)	=	$2/(\text{MAX CURRENT PER PHASE} \times 0.00111)$
8	MAX LENGTH (ft)	=	$2/(\text{MAX CURRENT PER PHASE} \times 0.00061)$

For a single power source, 1-phase power system the output power is available on TB1, pins 3 and 4.

The External Sense inputs must be connected or an AMP FAULT error message will be shown on the display and reported through the external interface.

Refer to Figure 2-2 for all multiple power source power system hook-ups.

NOTE: A special hook-up is required for all multiple power source power systems with the MODE Option. Refer to Figure 2-2 for the connections. The 1-phase output for a single power source with the MODE Option is available from TB1, pins 3 and 4.

## 2.6 OUTPUT VOLTAGE RANGES

The standard voltage ranges for this AC power system are 135 and 270. Selection of the 270 volt range causes the front panel "HIGH RANGE" lamp to illuminate. The range may be changed from either the front panel keypad or through the GPIB input. All voltages are programmed line-to-neutral for 3-phase operation.

## 2.7 FUNCTION TEST

Refer to Figure 2-3 for the test setup.

Perform the following test sequence.

- 1) Apply the AC line power and turn on the front panel circuit breaker. No loads should be connected to the output terminal block.
- 2) Verify that the POWER ON lamp is lit.
- 3) With the front panel keypad program the HI output voltage range with the following key sequences:

4 ENT                      To select the Range screen (RNG)

To program the HI range (ex., 270 volt range):

270 PRG ENT

- 4)      Verify the HIGH RANGE lamp is lit.
- 5)      Program the output to maximum voltage with the following key sequences:  
  
            Depress the MON key 1 time to select the Amplitude screen (AMP).  
  
            To program the voltage to maximum.  
  
            (Maximum Range value) PRG ENT
- 6)      Verify that the front panel voltmeter indicates approximately the programmed value for all three phases or for phase A for a 1-phase system.
- 7)      Program the AC Power System to the low range with the following keystrokes:  
  
            4 ENT (low voltage range value) PRG ENT
- 8)      Program the output to the maximum low voltage range voltage:  
  
            5 ENT (maximum low voltage range value) PRG ENT
- 9)      Observe each of the outputs with the oscilloscope or distortion analyzer. The outputs should be clean sine waves having less than 1.0% distortion.
- 10)     Apply full loads to each phase (Refer to Table 4-1). Verify that the voltage of each phase remains within (0.0005 x voltage range) volts of the no-load voltage. The waveforms shall still appear clean on the oscilloscope and have less than 1% distortion.
- 11)     Program the Current Limit to 5.0 amps:  
  
            8 ENT  
  
            5 PRG ENT
- 12)     The display should show the error message 'AMP ABC FAULT' for a 3-phase system. The error message may not, however, include all of the phases. The output will default to a programmed value of 5.0 volts with the output relays open.

## **2.8            REAR PANEL DIP SWITCH (SW1)**

The rear panel Dip Switch is used only for the output phase configuration in high power multi-chassis systems.

The following product/system configurations must have the DIP switches set to the logic "1", or OFF position.


- a.)      All single chassis systems
- b.)      All chassis with the Oscillator/Controller installed.
- c.)      All chassis in systems with the MODE option installed.
- d.)      All chassis in systems with Single Phase output.
- e.)      Both chassis in a 9000L/2-3 or 12000L/2-3 system.

For multiple-chassis power systems, with a multi-phase output (9000L/2-2, 13500L/3-3, 27000L/6-3, and 40500L/9-3) the DIP switches should be set to the following positions:

	<u>DIP SWITCH</u>			
	D	C	B	A
PHASE A MASTER AND SLAVE	1	1	1	1
PHASE B	1	1	1	0
PHASE C	1	1	0	1



Figure 2-3      FUNCTION TEST SETUP

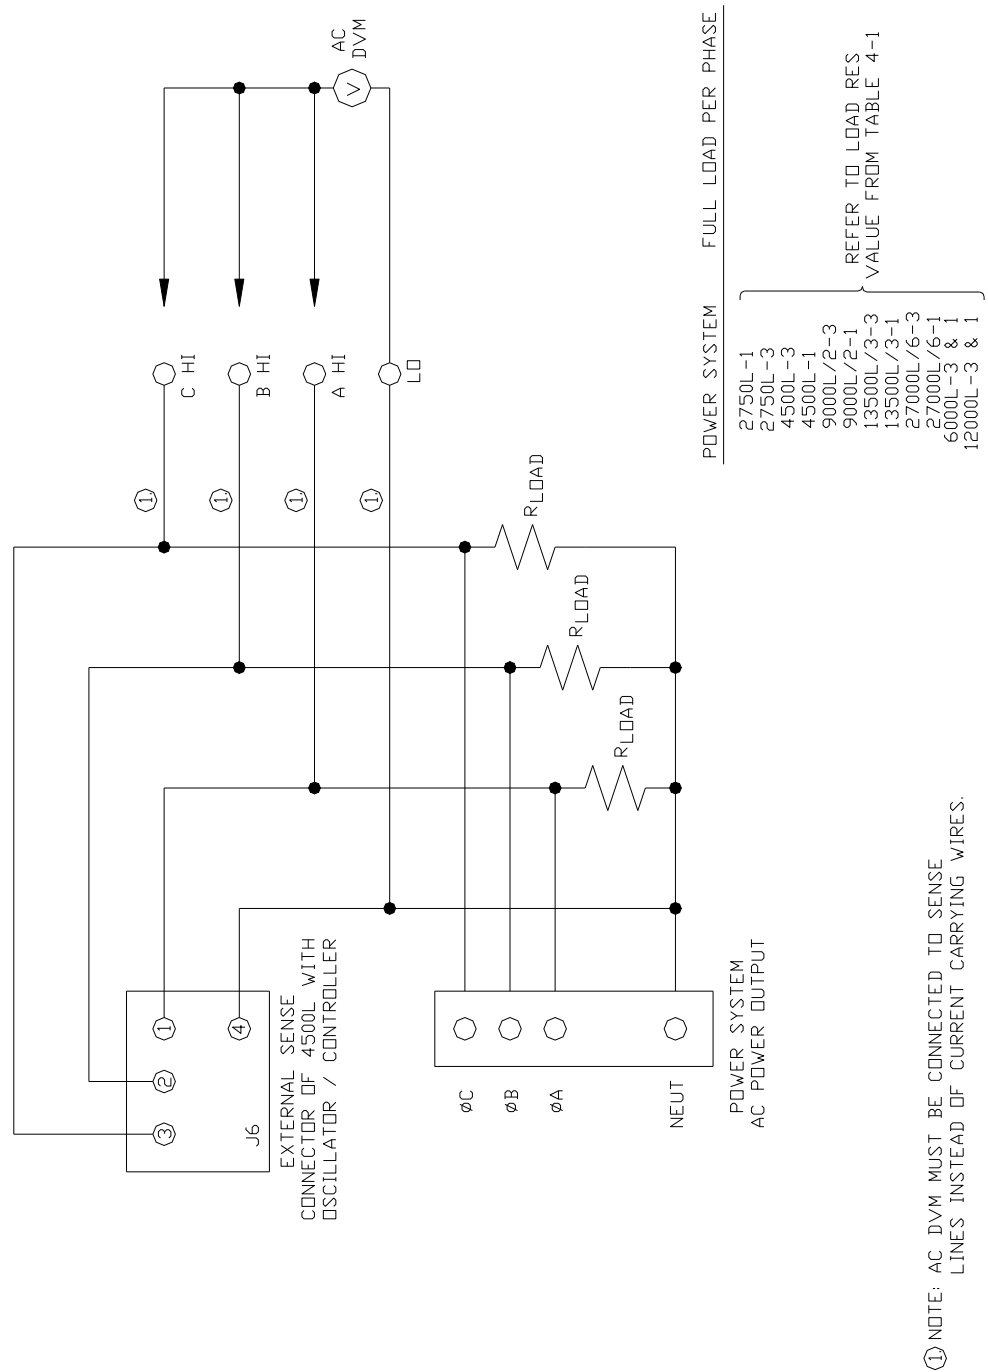

## **SECTION 3            OPERATION**

### **3.1            GENERAL**

The AC Power System may be programmed from the front panel or through the IEEE-488 external interface. The rear panel of the AC Power System holds the power input and output terminals external sense connector, system interface connector, IEEE-488 interface connector and the chassis ground stud.

### **3.2            FRONT PANEL CONTROLS**

All front panel controls are shown in Figure 3-1. A voltmeter selector switch is located at the right side of the front panel voltmeter. The three position switch changes the signal applied to the voltmeter from the three output phases.

A three-pole circuit breaker is on the left side of the front panel. The circuit breaker is used to switch power to the unit. When the circuit breaker is switched ON, the amber indicator lamp above the circuit breaker illuminates.

The front panel has a subpanel with a keypad, remote lamp, LCD display and a viewing angle adjustment. The 20-key keypad allows the power source to be manually programmed at the front panel. The knob labeled VIEW ANGLE may be turned to adjust the contrast of the front panel display. The remote lamp illuminates when the AC Power System has been addressed through the IEEE-488 interface (GPIB).

### **3.3            FRONT PANEL INDICATORS**


A lamp is located just above the input circuit breaker. It illuminates when power is applied and the circuit breaker is on.

An analog voltmeter, that indicates from 0 to 300 volts, shows the actual voltage of the phase A, B and C outputs. The phase is determined by a three position toggle switch at the right side of the meter.

An OVERTEMP lamp illuminates when the temperature of the power amplifier heatsinks has surpassed a maximum set level. When the fault is detected, the outputs are disabled and must be reprogrammed after the overtemperature condition has been eliminated.

An OVERLOAD lamp illuminates when the output current exceeds the programmed current limit value. The outputs will default to 0.0 volts and the output relays will open shortly after the condition occurs.

**Figure 3-1 FRONT PANEL CONTROLS AND INDICATORS**

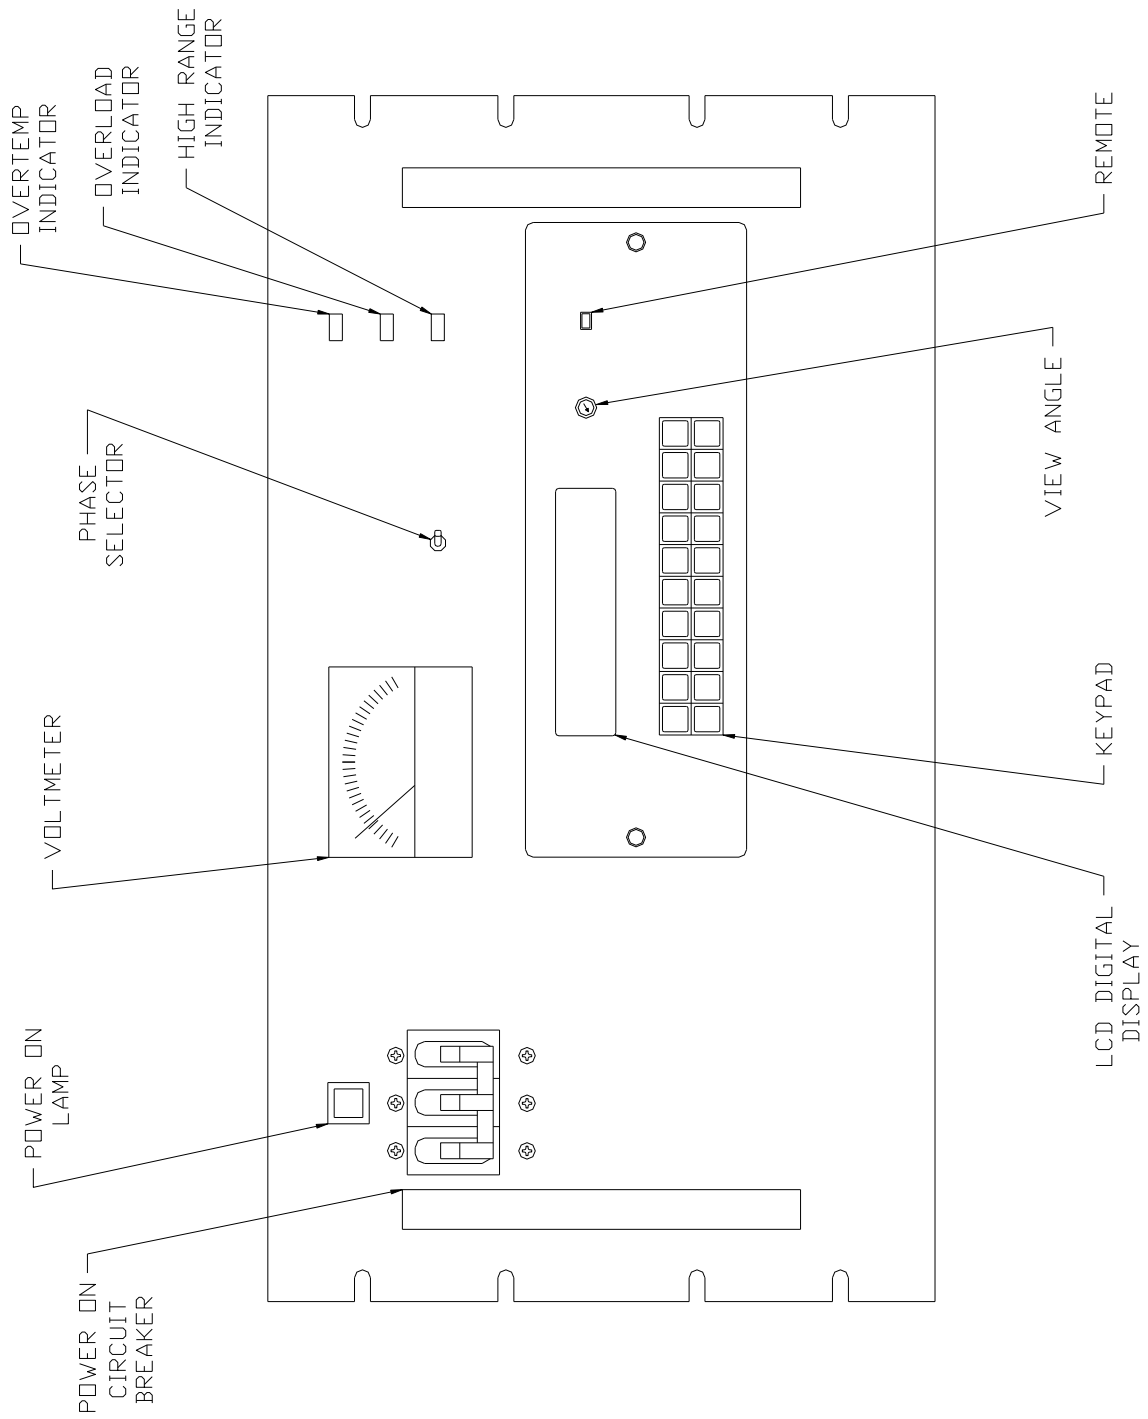

A HIGH RANGE lamp illuminates when the AC Power System is programmed to the high voltage range.

An LCD digital display shows the numeric value of all programmed output parameters. It also shows all error messages and measured values.

A REMOTE lamp illuminates when the AC Power System has been addressed from the IEEE-488 interface.

### 3.4 REAR PANEL CONNECTIONS

(Refer to Figure 3-2 for all rear panel connections.)

#### 3.4.1 POWER INPUT

TB3 is the terminal block for the 3-phase input voltage. Terminals 1, 2 and 3 connect to each leg of the 3-phase input. Terminal 5 is the chassis connection which should be connected to the input mains ground.

#### 3.4.2 POWER OUTPUT

TB1 is the power output terminal block. Refer to Table 3-1 for identification of the TB1 terminals. Terminal 3 and 4 are used for a 1-phase system. Refer to Figure 2-2 for the output of all multiple power source power systems.

TB1	DESCRIPTION
-----	-------------

1	Phase C Output HI
2	Phase B Output HI
3	Phase A Output HI
4	Output Neutral

**Table 3-1 POWER OUTPUT TERMINAL BLOCK (TB1)**

#### 3.4.3 EXTERNAL SENSE


J6 is the external sense input connector. The external sense input of the master 4500L must be connected to the respective AC Power System output. If the inputs are not connected, an AMP FAULT error message will be generated. Table 3-2 identifies the pins of connector J6.

J6	DESCRIPTION
----	-------------

1	Phase A Sense HI	Phase A Output HI
2	Phase B Sense HI	Phase B Output HI
3	Phase C Sense HI	Phase C Output HI
4	Neutral Sense	Neutral Output
5	Phase D sense HI	Phase D Output HI
6	Phase D sense LO	Phase D Output LO

**Table 3-2 EXTERNAL SENSE CONNECTOR (J6)**

Figure 3-2 REAR PANEL CONNECTIONS - 6000L/2750L/4500L

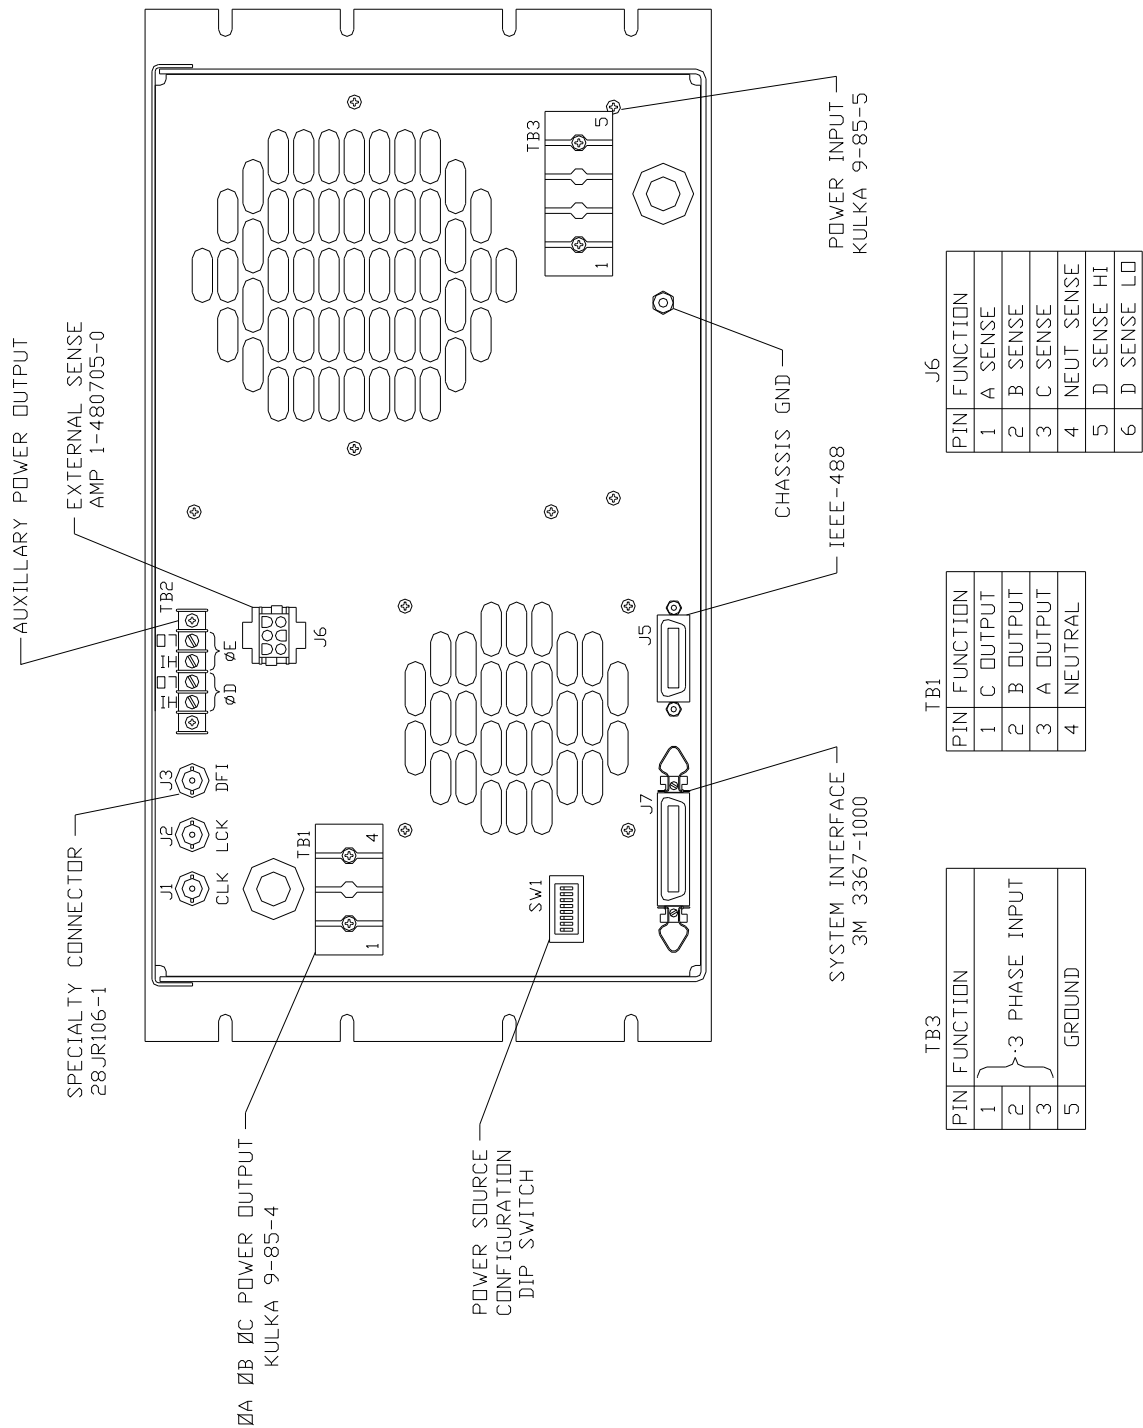

### 3.4.4 IEEE-488 CONNECTOR

J5 is the IEEE-488 (GPIB) connector for the master 4500L or the 2750L only.

### 3.4.5 SYSTEM INTERFACE

J7 is the System Interface connector. Table 3-3 identifies the pins of the System Interface connector.

J7	Description
1	Analog Common
2	MR B, Phase B amplifier input signal
3	Analog Common
4	CS B, Phase B current sum
5	CT Common, Current Transformer Common
6	OS B, Oscillator Phase B output
7	Analog Common
8	CL B, Phase B DC current limit
9	RPV, Not used
10	$\overline{\text{OVR TEMP}}$ , Overtemperature indication
11	$\overline{\text{CNF}}$ , Output relay
12	FLT C, Phase C current limit fault
13	FLT A, Phase A current limit fault
14	F STB LO, Function Sync output LO
15	EX SYNC LO, External Sync input LO
16	No connection
17	No connection
18	No connection
19	MR C, Phase C amplifier input signal
20	MR A, Phase A amplifier input signal
21	CS C, Phase C current sum
22	CS A, Phase A current sum
23	OS C, Oscillator Phase C output
24	OS A, Oscillator Phase A output
25	CL C, Phase C DC current limit
26	CL A, Phase A DC current limit
27	D COM, Digital Common
28	$\overline{\text{RNG HI}}$ , High Voltage range
29	
30	FLT B, Phase B current limit fault
31	F STB HI, Function Sync output HI
32	EX SYNC HI, External Sync input HI
36	REMOTE SHUTDOWN

**Table 3-3                      SYSTEM INTERFACE CONNECTOR (J7)**

J7-1	ANALOG COMMON: This is the common for all analog signals on the connector.
J7-2	MR B: This is the input signal to the phase B amplifier from the internal oscillator drive signal. Make no connection to this pin except for troubleshooting.
J7-3	ANALOG COMMON: See J7-1.
J7-4	CS B: Current sum for the phase B output. Make no connections to the pin.
J7-5	CT COMMON:
J7-6	OS B: This is the output from the internal phase B oscillator. Use this pin as an input if an oscillator is not installed. A 5.0 VRMS signal will generate a full- scale output voltage.
J7-7	ANALOG COMMON: See J7-1.
J7-8	CL B: A DC level from the oscillator used to set the current limit for phase B.
J7-9	RPV: This input is used for an optional Remote program of the output. With this option the output voltage may be controlled with a DC voltage.
J7-10	$\overline{\text{OVR TEMP}}$ : A logic low output to indicate an overtemperature condition. Make no condition to the pin.
J7-11	$\overline{\text{CNF}}$ : Output relay control indication. This is an output logic line that indicates the state of the output relay. A logic low indicates the output relay is open. make no connection to the pin.
J7-12	FLT C: Make no connections.
J7-13	FLT A: Make no connections.
J7-14	F STB LO: Function Sync Low signal. This is the emitter lead of an optically isolated NPN transistor. The internal power controller turns this transistor on to indicate a change of programmed values.
J7-15	EX SYNC LO: External Sync Low signal. This is the ground return for the TTL external sync input. It connects to the cathode of an LED at the input of an optocoupler. Refer to J7-32.
J7-16	No connection.
J7-17	No connection.
J7-18	No connection.
J7-19	MR C: This is the input signal to the phase C amplifier from the internal oscillator drive signal. Do not make any connection to this pin except for troubleshooting.
J7-20	MR A: This is the input signal to the phase A amplifier from the internal oscillator drive signal. Do not make any connection to this pin except for troubleshooting.
J7-21	CS C: Current sum for the phase C output. Make no connection to this pin.
J7-22	CS A: Current sum for the phase A output. Make no connection to this pin.
J7-23	OS C: This is the output from the internal phase C oscillator. Use this pin as an input if an oscillator is not installed. 5.0 VRMS on this pin will generate a full-scale output voltage.
J7-24	OS A: This is the output from the internal phase A oscillator. Use this pin as an input if an oscillator is not installed. 5.0 VRMS on this pin will generate a full-scale output voltage.

J7-25	CL C: A DC level from the oscillator used to set the current limit for phase C. Make no connection to this pin.
J7-26	CL A: A DC level from the oscillator used to set the current limit for phase A. Make no connection to this pin.
J7-27	D COM: Digital common.
J7-28	$\overline{\text{RNG HI}}$ : A logic output from the internal oscillator to control the range relays. A logic low on this pin indicates the high voltage range. If the power system is used without an oscillator, this pin is a logic input.
J7-29	Make no connection.
J7-30	FLT B: Make no connection.
J7-31	F STB HI: Function Sync High signal. This is the collector lead of an optically isolated NON transistor. The internal power controller turns this transistor on to indicate a change of programmed values. This output will sink more than 2 milliamps to a TTL low logic output level (<4 volts). The output is an open, collector optocoupler output. A pullup resistor to a + VDC must be connected to J7, pin 31. J7, pin 14, is the common output. Refer to Figure 3-3.
J7-32	EX SYNC HI: External Sync High signal. This is an input that can be used to synchronize the outputs of the AC Power System. This input requires a logic high level of at least +4.5 VDC at 5 ma. The input should have a duty cycle 50 $\pm$ 30%. J7-15 is the common input. The External Sync input is optically isolated. It must also be enabled from the SNC screen.
J7-36	REMOTE SHUTDOWN: This is a logic input that can be used to remove the programmed output voltage. A logic low on this pin will cause the output voltages to be programmed to 0.0 volts and the output relays to open. A logic high will cause the programmed output voltage to be restored at the output terminals. A contact closure between this pin and J7-27 (D COM) will simulate a logic low state.

### 3.4.6 AUXILIARY OUTPUT (AX Option)

TB2 is the terminal block for the optional Auxiliary outputs. The Auxiliary outputs are fixed 26V rms, Phase D, and a 5V rms, Phase E, output voltages. Refer to Figure 3-2 for the terminal identification for TB2.

J6 pins 5 and 6 are the External Sense input for the Phase D output. For the specified load regulation at the load, the External Sense input should be connected across the Phase D load.

### 3.4.7 CLOCK

J1 is supplied on the master power source when the LK option is ordered. This signal is used by California Instruments power controllers to synchronize oscillators in multiple power source systems. The connector is installed as an option.


### 3.4.8 LOCK

J2 is supplied on the master power source when the LK option is ordered. This signal is used by California Instruments power controllers to synchronize oscillators in multiple power source systems. The connector is installed as an option.

### 3.4.9 DFI (Discrete Fault Interrupt)

J3 is supplied when the MT option is ordered. This BNC connector is wired to a relay in the power controller. The normally closed relay contacts are held open by the power controller under normal running conditions. The contacts are allowed to close after a fault or if power is lost to the power source. The connector is installed as an option.



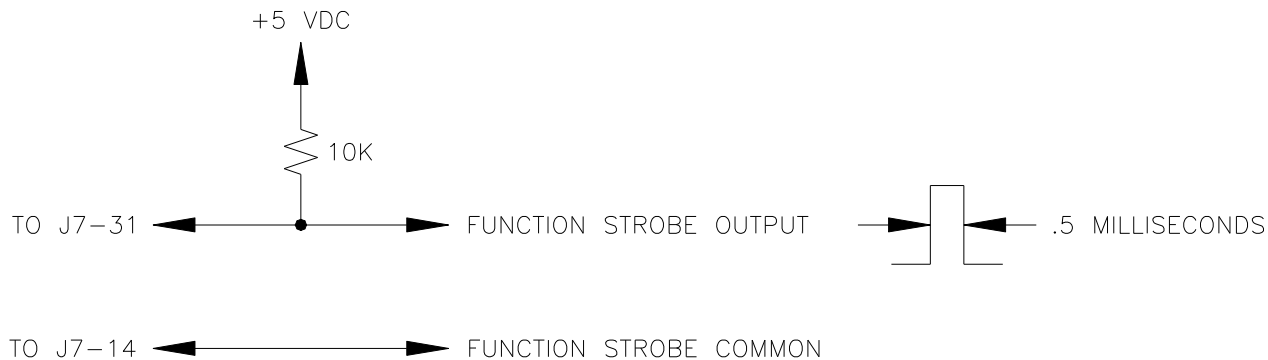

**Figure 3-3 FUNCTION STROBE CONNECTIONS**

### 3.5 FRONT PANEL PROGRAMMING

#### 3.5.1 KEYPAD

The front panel keypad is enabled whenever the REMOTE light is not lit. The AC Power System may be manually programmed by using the keypad and observing the front panel LCD display.

Figure 3-4 shows the front panel keypad. Table 3-4 lists the key and a brief description. While viewing any Output Parameter screen (Ref. Table 3-5), the screens may be viewed in increasing order by depressing the MON key and in decreasing order by depressing the PRG key. While viewing the Measurement Screens, the MON and PRG keys work in a similar fashion. For example, if the AMP parameter screen is displayed, the FRQ screen may be displayed by pressing the MON key one time. The display will be switched back to the AMP screen by pressing the PRG key.

SNW 0	SQW 1	INT 2	EXT 3	4	5	6	7	8	9
MNU ●	A	B	C	REG	↑ REC	↓ SRQ	MOD	PRG	ENT

**Figure 3-4 KEYPAD**

KEY	DESCRIPTION
SNW/0	Inputs the value "0" for all output parameters or to select screen "0" when followed by the ENT key. Also used to select the sine wave waveform.
SQW/1	Inputs the value "1" for all output parameters or to select screen "1" when followed by the ENT key. Also used to select the square wave waveform.
INT/2	Inputs the value "2" for all output parameters or to select screen "2" when followed by the ENT key. Also used to select the Internal Synchronize or Internal Clock modes of operation.
EXT/3	Inputs the value "3" for all output parameters or to select screen "3" when followed by the ENT key. Also used to select the External Synchronize or External Clock modes of operation.
4 through 9	Inputs the indicated numeric value for all output parameters or to select the corresponding screen when followed by the ENT key
MNU/.	Selects the Menu screens that show all display screens and the corresponding numeric value. The decimal point function of this key is enabled after any numeric key is depressed.
A	Used to direct any parameter change to phase A. Also used to update any quantity in the display identified as A=.
B	Used to direct any parameter change to phase B. Also used to update any quantity in the display identified as B=.
C	Used to direct any parameter change to phase C. Also used to update any quantity in the display identified as C=.
↑/REG	Used to increment the value in any output parameter screen or calibration screen. Also used to load the program register into any register identified by the preceding numeric value.
↓/REC	Used to decrement the value in any output parameter screen or calibration screen. Also used to recall the program register identified by the preceding numeric value.
CLR/SRQ	Used to clear the numerical inputs for the display screen.
MON	Used to display programmed output parameter values. Used repeatedly, it will cause the display screens of increasing numeric numbers to be displayed.
PRG	Used to program setup values in the Program Register. Used repeatedly, it will cause the display screens of decreasing numeric numbers to be displayed.
ENT	Used to transfer the contents of the program register to the actual output parameters.

**Table 3-4                      KEYPAD KEY DESCRIPTION**

### 3.5.2 DISPLAY SCREENS

A display of data on the front panel LCD display is called a screen. There are five types of screens: menu, output parameter, measurement, calibration and configuration screens.

Menu screens display the screen abbreviation with its equivalent number. The numeric value for each item in a menu screen is the code that may be used to select the screen. Tables 3-5 through 3-8 show the numeric values for all screens. Without the aid of the tables the MNU key may be used. The menu screens will display only the programmable features that are enabled and their associated screen number.

Table 3-5 shows all of the available Output Parameter screens. While viewing any of the screens, the associated output parameter may be changed from the keyboard.

Table 3-6 shows all of the Measurement screens. When accessing some Measurement screens up to three seconds may be required to display the screen.

Table 3-7 shows all of the screens for calibrating the output and measurement functions. A special code is required to access these screens. Refer to Section 4, Calibration.

Table 3-8 shows all of the Configuration screens. The only value that is user programmable is the IEEE-488 (GPIB) Listen Address.

The following are for changing the output:

<u>NO</u>	<u>SCREEN NAME</u>	<u>EXTENSIONS</u>	<u>ARGUMENT</u>	<u>ACTION TAKEN</u>
1	SNC		INT, EXT	Selects phase A to be synchronized to an external input.
*2	CLK		INT, EXT	Selects the external clock mode of operation.
*3	WVF	A, B, C	SNW, SQW	Sets the output waveform.
4	RNG		Range limit	Selects the output voltage range. Range limit values of 135 and 270 are standard.
5	AMP	A, B, C	0-RNG limit	Sets the output voltage amplitude.
6	FRQ		45-5000	Sets the output frequency.
7	PHZ	A, B, C,	0-±999.9	Sets the output phase angle.
8	CRL	A, B, C	0 to Max Current	Sets the output current limit
9	RMP A	DLY	0.001-9999	Sets the Delay between ramp steps in seconds. Four decade resolution from 0.001 to 9999 seconds.
		STP		Sets the step size of ramp parameter.
		VAL		Sets the final value of the parameter ramped.
	RMP B	STP		Same as RMPA
		VAL		Same as RMPA
28	DRP	A,B,C	0 to 5	Drop periods of sine wave
*30	MOD		PHS1 or PHS3	Selects output to be 1 phase or 3 phase

\*Optional screen.

NOTE: RMPA and RMPB screens are not accessible until AMP, FRQ, CRL or PHZ are programmed (PRG) but not yet entered (ENT).

**Table 3-5 OUTPUT PARAMETER SCREEN**

The following are for measured values.

<u>NO</u>	<u>SCREEN NAME</u>	<u>EXTENSIONS</u>	<u>ARGUMENT</u>	<u>ACTION TAKEN</u>
11	ELT	H, M, S	Hrs,Min,Sec	Reports the total accumulated run time up to 9,999 hours.
21	VLT	A, B, C	0-400.0	Measures the TRMS output voltage.
22	CUR	A, B, C	0.0-200.0 or 0.00-20.00	Measures the TRMS output current in Amps. Range depends on maximum current per phase.
23	PWR	A, B, C	0.00-27.00KW or 0-2000 watts	Measures the True output power. Range depends on output VA per phase
24	PWF	A, B, C	0-1.000	Measures the power factor of the load.
25	APW	A, B, C	0.00-27.00KVA or 0-2000 VA	Measures the apparent out put power. Range depends on output VA per phase.
26	FQM		40-5000	Measures the output frequency in hertz
27	PZM	A, B, C	0-359.9	Measures the phase angle of the output voltage relative to phase A and phase A relative to an external input

**Table 3-6 MEASUREMENT SCREENS**

<u>NO</u>	<u>SCREEN NAME</u>	<u>EXTENSIONS</u>	<u>ARGUMENT</u>	<u>ACTION TAKEN</u>
13	CAL VLT	A, B, C	Actual out put voltage	Calibrates the measured voltage to be the same as argument
14	CAL CUR	A, B, C	Actual out put current (amps)	Calibrates the measured current to be same as argument
15	CAL PWR	A, B, C	Actual out put power	Calibrates the measured power to be same as argument. The argument is in KW for power systems of more than 2000 VA per phase
20	POF	A, B, C	0-±359.9	Calibrates the programmed output phase a

**Table 3-7 CALIBRATION SCREEN**

<u>NO</u>	<u>SCREEN NAME</u>	<u>EXTENSIONS</u>	<u>ARGUMENT</u>	<u>ACTION TAKEN</u>
16	CFG	A(LSN)	0-30	Sets the IEEE-488 (GPIB) Listen Address
		B(CFG)	*28	Defines the features enabled for Power Source compatibility.
		C(PHZ)	*120	Defines the phase C initial value for power system configuration.
17	ALM	A(RNG)	0	Code that defines the default voltage range.
		B(LLM)	*135	Defines the upper limit of the lower voltage range
		C(HLM)	*270	Defines the upper limit of the higher voltage range.
18	FLM	A(FRQ)	60	Defines the default frequency.
		B(LLM)	*45	Defines the low frequency limit.
		C(HLM)	*5000	Defines the high frequency limit.
19	CLM	A(RNG)	Max Current	Defines the maximum current limit value.
		B(PRS)	*0	Defines the decimal point location for measured power.
		C(CRS)	*2	Defines the decimal point location for measured current.
29	INI	A(AMP)	0-5	Defines default voltage.
		C(CRL)	0 - Max Current	Defines the default Current Limit.

\*NOT USER PROGRAMMABLE. THE VALUES SHOWN ARE FOR A STANDARD 3-PHASE SYSTEM.

**Table 3-8 CONFIGURATION SCREENS**

### **3.5.3 TO PROGRAM OUTPUT VOLTAGE AMPLITUDE (AMP=5)**

#### **NOTE**

The external sense lines must be connected to J6 on the rear panel of the AC Power System. If they are not properly connected an AMP FAULT message will result when the output relay is closed. Refer to Figure 2-3.

The output voltage Amplitude may be programmed independently or simultaneously for each phase.

Select the Amplitude (AMP) screen by entering keystrokes:

5 ENT

The display now shows the AMP parameter screen:

AMP MON A = 0.0  
B = 0.0 C = 0.0

NOTE: The B and C values are optional and they are only displayed with either a two or three-phase configuration.

Program all outputs to 115.5 volts with the keystrokes:

115.5 PRG ENT

Program phase A to 130.0, phase B to 110.0 and phase C to 90.0 volts simultaneously.

130 A PRG 110 B PRG 90 C PRG ENT

Slowly increase the output amplitude of phase B only:

B PRG      ↑      (Hold until desired value is obtained.)

The output frequency can be programmed between 17 and 45 Hz. For operation between these frequencies, the output voltage Amplitude (AMP) is limited to values less than that described by the following formula:

$$\text{AMP} = \text{Voltage Range} * (\text{FRQ})/45$$

### 3.5.4 TO PROGRAM FREQUENCY (FRQ=6)

Select the Frequency (FRQ) screen by entering the keystrokes:

6 ENT

Program the output to 60.23 hertz:

60.23 PRG ENT

To incrementally increase the output frequency to a desired value:

↑      (Hold until desired frequency is reached.)  
↑

The output frequency may be programmed down to 17 Hz if the programmed voltage Amplitude (AMP) is less than the full scale voltage range. The low frequency limit can be determined from the following formula:

$$\text{FRQ} = 45 * (\text{AMP})/\text{Voltage Range}$$

### 3.5.5 TO PROGRAM OUTPUT PHASE ANGLE (PHZ=7)

Select the Phase (PHZ) screen by entering:

7      ENT

Program phase C to .5 degree relative the phase A:

0.5      C      PRG ENT

To enable the External Sync input and to program phase A to 90.0 degrees relative to the External Sync input, perform the following sequence:

1. Select the SNC screen:

1 ENT

2. Program EXT:

EXT PRG

At this point the phase screen must be accessed by repeatedly depressing either the MON or PRG keys. After the Phase (PHZ) screen is displayed, enter the following key sequence to simultaneously enable the External Sync and program phase A to 90 degrees:

9 0 A PRG ENT

The up (↑) and down (↓) keys may be used to increment or decrement any or all output phases.

#### NOTE

The PHZ A value is maintained in nonvolatile memory.  
The last programmed value is retained at power-up.

### 3.5.6 TO PROGRAM CURRENT LIMIT (CRL=8)

The Current Limit can be programmed independently or simultaneously for each phase of the AC Power system.

1. Select the Current Limit screen by entering:

8 ENT

2. Program all phases to 5 amps:

5 PRG ENT

### 3.5.7 TO PROGRAM VOLTAGE RANGE (RNG=4)

The RNG screen has two purposes; to select a range defined by the range pair selected in the Amplitude Limit (ALM) screen and to select an upper voltage limit less than that specified by the ALM screen, LLM or HLM values. If the range pair 135/270 has been selected in the ALM screen with LLM=135 and HLM=270, the 135 range of the power source will be programmed by the RNG screen for any value of 135 or less. The value programmed will then be the maximum value allowed to be programmed in the Amplitude (AMP) screen.

To select the 270 range and set a program amplitude limit of 250 volts, perform the key sequence below:

4 ENT 250 PRG ENT

### 3.5.8 TO PROGRAM RAMP OR STEP FUNCTIONS (RMP=9)

The Ramp (RMP) function allows any programmable parameter (AMP, FRQ, PHZ, CAL or CRL) to be Stepped (STP) with a Delay (DLY) for each step to a final value (VAL). There are three types of programs that may be specified by the RMP screen; a ramp and two types of step programs.

The step function will program the output parameter value specified by a previous screen for the time specified for the DLY value in seconds. The parameter will then return to a final value specified by the VAL value.

The ramp function will step the output parameter value specified by a previous screen with the STP value, the DLY time per step and the final VAL setup in the RMP screen. The ramp will increment if the VAL value is larger than the parameter value. It will decrement if it is less than the parameter value.

#### NOTE

The DLY, STP or VAL parameters must be specified (A, B or C key depressed) before the number value for the parameter is entered.

When ramping frequency, an error message will result with an attempt to step the frequency with greater resolution than that possible by the initial or final values.

The step program may also be used to generate a dropout to zero volts on phase A at any point on the waveform. This type of program is selected by setting the AMP value to zero before setting the DLY and VAL parameters. The point on the waveform at which the dropout occurs is specified by setting the A value in the (PHZ) screen.

The following key sequence will program 130V for 2.5 seconds and then return to a final value of 115V.

1. Select the AMP screen and enable 130 volts to be programmed:  
5      ENT    130    PRG    (\*)
2. Select the RMP screen, program a DLY of 2.5, a final VAL of 115 volts and run the program:  
9      ENT    A      2.5    PRG    C      115    PRG    ENT

The next example will illustrate a ramp program. The following sequence will ramp the frequency from 60 hertz to 400 hertz in .1 hertz steps with a delay (DLY) for each step of .003 seconds. The total time for this ramp will be  $= [(VAL-FRQ)/STP]DLY$  or 10.2 seconds.

1. Select the FRQ screen and set the starting frequency of 60 Hz:  
6      ENT    60      PRG
2. Select the RMP screen, set a DLY of .003, set the STP of .1, set the final VAL of 400 and run the program:  
9      ENT    A    0.003   PRG    B    0.1   PRG    C    400   PRG    ENT

(\*)If the ENT key is depressed at this point, the AMP would be programmed to and remain at 130 volts.

The following program will illustrate a dropout to zero volts. The program will drop the output to zero volt at 90 degrees for .002 seconds and return to 115 volts. This example will cause the Clock to stop for 0.002 seconds. For this example the output waveform will start at the same point that it stopped.

1. Select the AMP screen and program output to 115 volts:  
5 ENT 115 PRG ENT
2. Select the PHZ screen and program A to 90:  
7 ENT 90 A PRG
3. Select the AMP screen and program the dropout voltage to zero volt:  
5 ENT 0 PRG



4. Select the RMP screen. Set a delay of .002 seconds and a return value of 115 volts:

9        ENT A 0.002 PRG C 115 PRG

5. Execute the program by depressing the ENT key.

Two output parameters may be ramped simultaneously. The parameter programmed just prior to entering the RMP A screen will be the independent parameter and will be identified in that screen. The parameter loaded prior to the independent parameter will be the dependent parameter.

The following example will ramp frequency from 360 to 440 Hz at a rate of .2 Hz per .2 second, while each .2 Hz step causes the amplitude to go from 10 volts to 210 volts in .5 volt steps.

1. Select the AMP screen (dependent parameter) and program the start to 10 volts:

5    ENT    10    PRG

2. Select the FRQ screen (independent parameter) and program the start frequency of 360 Hz:

6    ENT    360    PRG

3. Select the RMPA screen and program the independent ramp parameters of STP = .2, and DLY = .2 and VAL = 440:

9    ENT    A    0.2    PRG    B    0.2    PRG    C    440    PRG

4. Select the RMPB screen and program the dependent (AMP) ramp parameters of STP = .5:

10    ENT    B    0.5    PRG

5. Start the program by pressing the ENT key.

The final value of the dependent parameter, AMP, will be determined by the number of steps of the independent parameter and the STP value, .5V specified in RMP B.

$$\begin{aligned}\text{FINAL VALUE} &= \text{INITIAL VALUE} + (\text{RMP B STP}) (\text{NO. STEPS}) \\ \text{NO. STEPS} &= (\text{DEP. PAR.}) (\text{FINAL VALUE} - \text{INITIAL VALUE}) / \text{STEP SIZE}\end{aligned}$$

In this example:

$$\text{NO. STEPS} = (440 - 360) / .2 = 400$$

$$\text{FINAL AMP VALUE} = 10 + .5 \times 400 = 210 \text{ Volts}$$

If the final value exceeds the RNG value, an error message will be generated.

#### **NOTE**

Any ramp may be terminated at any time by depressing the ENT key.

### **3.5.9 TO PROGRAM THE OUTPUT WAVEFORM (WVF=3) (SQW Option)**

The waveform selection is an option for the AC Power system. If the screen cannot be selected the option is not enabled.

The WVF screen displays the type of waveform selected, sine wave (SNW) or square wave (SQW), for each of the

three outputs. To program a square wave, depress the SQW or any odd number key followed by any combination of the A, B or C key, the PRG key and ENT key. If no phase key is depressed, the new waveform will be programmed for all outputs.

To program phase A and C to square wave:

SQW   A       C       PRG   ENT

To select the sine wave waveform for any phase depress the SNW or any even number key followed by the key sequence described above.

### **3.5.10       TO PROGRAM EXTERNAL SYNCHRONIZATION (SNC=1)**

The SNC screen displays whether the external or internal SNC mode of operation has been selected. While viewing this screen to select the external SNC mode, depress the EXT key followed by the PRG and ENT key:

Example:       EXT   PRG   ENT

While operating in the EXT SNC mode, the FRQ screen will display the frequency of the External Sync signal. The signal must be between 45 Hz and 550 Hz.

#### **NOTE**

When viewing the SNC, CLK or WVF screens, the MON or PRG keys must be used to sequence to another screen. The MNU key can also be used to return to the menu then followed by any screen selection.

To return to the internal SNC mode of operation, depress the INT key or any even numeric key followed by the PRG and ENT key while viewing the SNC screen.

Example:       INT   PRG   ENT

If the External Sync signal is not between 45 Hz and 550 Hz, the message will be 'EXT SYNC ERROR'.

In the EXT SNC mode the A value on the PHZ screen represents the angle of the A output leading the External Sync input. If the zero degree point of the power source does not match the zero degree point of the External Sync input, the POF screen may be used for calibration. Select the POF screen and enter a value for calibration.

### 3.5.11 TO PROGRAM THE EXTERNAL CLOCK (CLK=2) (LK Option)

The clock selection is an option for the AC Power System. The CLK screen displays whether the AC Power System is operating in the external (EXT) or internal (INT) CLK mode of operation. While viewing this screen to select the EXT CLK mode, depress the EXT key followed by the PRG and ENT key:

Example: EXT PRG ENT

#### NOTE

Before selecting the External clock mode, ensure that the AC Power System containing the oscillator has the proper clock and lock signals applied to the BNC connectors on the rear panel. Failure to have the proper clock and lock signals when the EXT CLK mode of operation is selected may result in an AMP FAULT error message. No output from the AC Power System will be available.

To return to the internal (INT) CLK mode of operation, depress the INT or any even numeric key followed by the PRG and ENT key while viewing the CLK screen.

Example: INT PRG ENT

### 3.5.12 TO PROGRAM REGISTERS AND RAMPS

The AC Power System has 16 registers that can be used to store setups. All of the data stored in the registers will be retained during power-down. Register operation may be chained to another register by adding the REC and register number to any setup sequence. The REC and REG keys are used for register operations. Any of the previous examples may be stored in a register by adding the extra step of entering the register number followed by depressing the PRG key. This extra step must be entered before the last ENT keystroke.

The following program will program 135 volts and 60 hertz on all outputs for 10 seconds before reducing the output to 115 volts and store the test in register 0.

1. Select the FRQ screen and program 60 hertz:  
6 ENT 60 PRG
2. Select the AMP screen and program 135 volts:  
5 ENT 135 PRG
3. Select the RMP screen and program DLY = 10 and VAL = 115  
9 ENT A 10 PRG C 115 PRG
4. Store the program in register 0:  
0 REG

To recall and perform the register operation, simply enter the register number followed by depressing the REC and ENT keys.

### 3.5.13 REGISTER LINKING

Any number of registers may be linked together by using the REC key prior to loading the register operation.

The following program will ramp the voltage from 115 volts and 60 hertz to 135 volts with .1 volts per 10 millisecond steps, remain at 135 volts for 10 seconds, return to 115 volts at the same rate but at 62 Hz. Store the program in Registers 1 and 2.

1. Select the FRQ screen and program 60 Hz:

6      ENT    60      PRG

2. Select the AMP screen and program 115 volts:

5      ENT    115      PRG

3. Select the RMP screen and program DLY = 0.01, STP = 0.1 and VAL = 135:

9      ENT    A      0.01    PRG    B      0.1      PRG    C    135    PRG

4. Link this program to Register 2:

2      REC

5. Store this program in Register 1:

1      REG    ENT

The second portion of the program will be stored in Register 2.

6. Select the FRQ screen and program 62 Hz:

6      ENT    62      PRG

7. Select the AMP screen and program 135 volts:

5      ENT    135      PRG

8. Select the RMP screen and program DLY = 0.01, STP = 0.1 and VAL = 115:

9. Store this program in Register 2:

2      REG    ENT

To initiate the program:

1      REC    ENT

### 3.5.14 TO PROGRAM SIMULTANEOUS RAMPS

Two outputs may be simultaneously ramped or stepped by enabling two parameter screens. The screen first selected will be the dependent parameter. The last parameter screen selected before entering the ramp (RMP) screen is the independent parameter. The independent parameter is used to specify the number of steps in a ramp. Since the dependent parameter has as many steps as the independent parameter, the step (STP) size must be calculated so the dependent parameter will not exceed its maximum value. The following example will specify frequency as the independent parameter and phase as the dependent parameter. Refer to paragraph 3.5.8 for more information.

The following example will ramp frequency from 360 to 440 Hz at a rate of .2 Hz per .2 second, while each .2 Hz step causes the amplitude to go from 10 volts to 210 volts in .5 volt steps.

1. Select the AMP screen and specify the starting voltage of 10 volts:

5      ENT    10      PRG

2. Select the FRQ screen and specify the starting frequency of 360 Hz.

6      ENT    360    PRG

3. Select the RMP A screen and specify the ramp parameters of the independent parameter, FRQ, of DLY = .2 seconds, STP = .2 Hz and VAL = 440 Hz:

9      ENT    A      0.2    PRG    B      0.2    PRG    C    440    PRG

4. Select the RMP B screen and specify the ramp parameter of the dependent parameter, AMP, of STP = .5 volts:

10     ENT    B      0.5    PRG

5. At this point the program may be executed by depressing the ENT key or stored in a register.

### 3.5.15      ERROR MESSAGES

Table 3-9 shows all of the possible error messages displayed on the front panel display. The cause of the error message is also shown.

### 3.5.16      TO PROGRAM FREQUENCY, VOLTAGE, VOLTAGE RANGE AND CURRENT LIMIT DEFAULT VALUES

The default values are the values that appear at power-up and after the GPIB Device Clear command.

To set any of the default values perform the following steps:

1. Depress the MNU key several times until the first menu screen is displayed as illustrated below:

SNC = 01            \*CLK = 02  
\*WVF = 03          RNG = 04

NOTE (\*) May not be displayed. Depends on options

2. Enter the key sequence: 9 5 9 ENT

<b>ERROR MESSAGE</b>	<b>CAUSE</b>
CRL FAULT	Indicate output current exceeds program current.
AMP (1) FAULT	Incorrect sense line connection. Overload on indicated output.
TEMP (1) FAULT	Amplifier overtemperature
CPU MEMORY FAULT	CPU failed self-test
DMA OVERFLOW	Remote message greater than 256 bytes.
EXT SYNC ERROR	No external sync input at System Interface connector. Signal is not between 45 and 2 or 5 KHz.
BUS LOCAL ERROR	Remote message sent while AC Power System is in local.
SYNTAX ERROR	Incorrect syntax received from IEEE-488 External Interface
AMP RANGE ERROR	Attempt to program AMP value greater than RNG value.
FRQ RANGE ERROR	Attempt to program FRQ less than 45 (2) or greater than 2 or 5 KHz.
PHZ RANGE ERROR	Attempt to program PHZ greater than $\pm 999.9$
CRL RANGE ERROR	Attempt to program CRL greater than 11.11 or 33.33.
RNG RANGE ERROR	Attempt to program RNG greater than 270.0 or other optional high voltage range.
RMPA RANGE ERROR	Attempt to program STP, DLY or VAL greater than the maximum.
DIV ERROR	Consult factory.
OVERFLOW ERROR	Consult factory.

---

(1) May be any combination of A, B or C.

(2) May be down to 17 Hz with reduced output voltage.

**Table 3-9 FRONT PANEL DISPLAY ERROR MESSAGES**

3. Depress the MNU key several times until the configuration menu screen is displayed as illustrated below:

CFG = 16	ALM = 17
FLM = 18	CLM = 19

To program the default frequency, enter the key sequence:

1 8     ENT     A

next enter the default frequency followed by depressing the PRG and ENT key.

To program the default voltage range, perform step 1 through 3. Next enter the key sequence:

1       7       ENT     A

At this point, if 0 is entered, the default voltage range is the Low Range.

If an 8 is entered, the default voltage range will be the High Range.

To make the High Range the default, continue the key sequence with:

8       PRG     ENT

To program the default voltage, perform steps 1 through 3. Next enter the key sequence:

2       9       ENT     A

At this point the default voltage from 0 to 5 may be entered. If a value of less than 5 volts is entered, the output may fault when a voltage is programmed to a value that is less than 50% of full scale.

To make 5 volts the default voltage, continue the key sequence with:

5       PRG     ENT

To program the default current limit, perform steps 1 through 3. Next enter the key sequence:

2       9       ENT     C

At this point, any value may be entered up to the maximum current available per phase.

To make 5 amps the default value, continue the key sequence with:

5       PRG     ENT

### **3.5.17     TO PROGRAM 1 OR 3 PHASE MODE (MOD=30) (MOD Option)**

The MOD selection is an option for the AC Power System. When the option is installed, the AC Power System may be programmed to either be a 1-phase or a 3-phase power system.

The MOD screen displays the output configuration of the power system, 1-phase (PHS1) or 3-phase (PHS3).

To program the power system to the 3-phase output mode, enter the following key sequences:

Select the MOD screen:       3 0       ENT

Program the 3-phase mode:     3     PRG   ENT

The last mode programmed for the power system will be the default Mode at power-up.

### **3.5.18     TO PROGRAM THE DROP PERIODS (DRP=28)**

Select the phase (PHZ) screen by entering the keystrokes:

7     ENT

The display will show the PHZ parameter screen

PHZ MON A = 0.0 B = 240.0 C = 120.0

To drop the output waveform starting at 90 degrees, enter the keystrokes 90 A PRG.

Select the Drop screen (DRP=28) by entering the keystrokes 2 8 ENT.

The display will show the DRP parameter screen.

DRP MON A = 0 B = 0 C = 0

To drop the output waveform for phase A for 3 cycles enter the keystrokes"

3     A     PRG   ENT

Verify that phase A drops at the 90 degrees point of the sine wave for 3 periods of the programmed frequency.

## **3.6     TO MEASURE THE OUTPUT**

Seven measurement screens display the output voltage, current, power, apparent power, power factor, phase and frequency. The phase A, B and C output values are shown simultaneously for 3-phase systems.

While viewing any measurement screen, except ELT, any other measurement screen may be displayed by repeatedly depressing either the MON or PRG key. The screen may also be displayed by entering its equivalent screen number followed by depressing the ENT key. Refer to Table 3-6 for all measurement screen numbers.

### **3.6.1     TO MEASURE THE OUTPUT VOLTAGE (VLT=21)**

The voltage screen displays the actual TRMS output voltage with 0.1 volt resolution. This voltage is the voltage at the External Sense connector of the AC Power System. To access the voltage screen, depress the keys:

21     ENT

### **3.6.2     TO MEASURE THE OUTPUT CURRENT (CUR=22)**

The current screen displays the actual TRMS load current. The resolution is 0.01 amp for the 4500L-3P and 2750L-3P. The resolution is 0.1 amp per phase for all other P power systems.

### **3.6.3     TO MEASURE THE OUTPUT POWER (PWR=23)**

The power screen displays the actual true power delivered to the load. The resolution is 1 watt for the 4500L-3P and 2750L-3P. The resolution is 0.01 KW per phase for all other P power systems.



#### **3.6.4 TO MEASURE THE OUTPUT POWER FACTOR (PWF=24)**

This screen displays the power factor from 0 to 1.000 with 0.001 resolution. The PWF screen will read unity for loads less than 10 digits of apparent power on the Apparent Power (APW) screen. When this screen is displayed after another screen, it takes approximately one second to update the screen.

#### **3.6.5 TO MEASURE THE OUTPUT APPARENT POWER (APW=25)**

This screen is accessed by its screen number, 25. It displays VOLT-AMPERES with a resolution of 1 VA for 4500L-3P and 2750L-3P. The resolution is 0.01 KVA per phase for all other P power systems.

#### **3.6.6 TO MEASURE THE OUTPUT FREQUENCY (FQM=26)**

This screen is accessed by its screen number, 26. It displays the measured output frequency with a resolution of 0.01 Hz, 0.1 Hz or 1 Hz up to 99.99 Hz, 999.9 or 5000 Hz, respectively.

#### **3.6.7 TO MEASURE THE OUTPUT PHASE ANGLE (PZM=27)**

This screen is accessed by its screen number, 27. It displays phase A relative to an external synchronizing input and phase B and C relative to phase A. The resolution is 0.1 degree.

#### **3.6.8 ELAPSED TIME (ELT =11)**

This screen displays the total run time accumulated on the AC Power System up to 99,999 hours.

H = Hours      M = Minutes      S = Seconds

### **3.7 REMOTE PROGRAMMING WITH ABBREVIATED PLAIN ENGLISH (APE)**

Remote programming through the IEEE-488 Interface (GPIB) consists of sending the unit address and the proper ASCII alphanumeric characters to identify the parameter and the numerical value or other argument. The description of the abbreviations for GPIB messages used in this section are listed in Table 3-10. These abbreviations must not be confused with the device dependent abbreviations used to describe the AC Power System operating parameters (ex. FRQ=Frequency, etc.).

#### **3.7.1 UNIT ADDRESS**

This is the A value (LSN) set in the CFG screen. The Unit Address 0 through 30 corresponds to the HEX value 20 through 3E. Refer to Table 3-11 for the equivalent HEX, Binary, ASCII and Decimal equivalents. The Unit Address is set at the factory to 1 but may be changed by selecting the CFG Configuration screen and setting a new value.

To select the CFG screen repeatedly depress the MNU key until menu screen #1 is displayed as illustrated below:

SNC = 01	CLK = 02
WVF = 03	RNG = 04

Enter the key sequence: 959 ENT

Repeatedly depress the MNU key until the menu screen #5 is displayed as illustrated below:

CFG = 16	ALM = 17
FLM = 18	CLM = 19

Enter the key sequence: 16 ENT

The CFG screen will now be displayed. Depress the A key to display the present Unit Address. It may be changed to any value from 0 to 30 and will be stored in non-volatile memory. The new unit address will not be updated until power is shut off and reapplied to the power system.

The following key sequence will change the unit address to 16:

16      PRG    ENT

Table 3-10

## COMMONLY USED GPIB ABBREVIATIONS

ABBREVIATION	DEFINITION
ATN	Attention. A logic line on the GPIB asserted only by the controller to indicate the data on the bus represents a bus message.
CR	An ASCII carriage return.
DCL	Device Clear. A universal bus message to initialize all instruments to their power-on states..
END	End. A message conveyed when a talker uses the EOI line with the last data byte of a data string.
EOI	End or Identify. A logic line on the GPIB asserted by a talker to indicate the last byte of a data string.
EOS	End of String. A delimiter message that consists of a data byte(s) to indicate the end of a data string.
GET	Group Execute Trigger. A GPIB message to trigger an addressed instrument.
GTL	Go To Local. A GPIB message to put an addressed instrument in the local control mode.
IFC	Interface Clear. A logic line on the GPIB asserted by the controller to clear all interfaces (ex., default to unlisten and untalk).
LF	An ASCII line feed.
LLO	Local Lockout. A GPIB message, when asserted, will inhibit the instrument from going to local if the CLR/LOC key is pressed.
REN	Remote Enable. A logic line on the GPIB asserted by the controller. REN enables an instrument to go to local when addressed
SDC	Selected Device Clear. A GPIB message to initialize an addressed instrument to it Power-on state.

**Table 3-11 UNIT ADDRESS GROUP**

ADDRESS	HEX	BINARY						DECIMAL	ASCII
		A5	A4	A3	A2	A1			
0	20	001	0	0	0	0	0	32	SP
1	21	001	0	0	0	0	1	33	!
2	22	001	0	0	0	1	0	34	"
3	23	001	0	0	0	1	1	35	#
4	24	001	0	0	1	0	0	36	\$
5	25	001	0	0	1	0	1	37	%
6	26	001	0	0	1	1	0	38	&
7	27	001	0	0	1	1	1	39	'
8	28	001	0	1	0	0	0	40	(
9	29	001	0	1	0	0	1	41	)
10	2A	001	0	1	0	1	0	42	*
11	2B	001	0	1	0	1	1	43	+
12	2C	001	0	1	1	0	0	44	,
13	2D	001	0	1	1	0	1	45	-
14	2E	001	0	1	1	1	0	46	.
15	2F	001	0	1	1	1	1	47	/
16	30	001	1	0	0	0	0	48	0
17	31	001	1	0	0	0	1	49	1
18	32	001	1	0	0	1	0	50	2
19	33	001	1	0	0	1	1	51	3
20	34	001	1	0	1	0	0	52	4
21	35	001	1	0	1	0	1	53	5
22	36	001	1	0	1	1	0	54	6
23	37	001	1	0	1	1	1	55	7
24	38	001	1	1	0	0	0	56	8
25	39	001	1	1	0	0	1	57	9
26	3A	001	1	1	0	1	0	58	:
27	3B	001	1	1	0	1	1	59	;
28	3C	001	1	1	1	0	0	60	<
29	3D	001	1	1	1	0	1	61	=
30	3E	001	1	1	1	1	0	62	>
UNL	3F	001	1	1	1	1	1	63	?

### 3.7.2 MESSAGE FORMAT

The message sent to the AC Power System must have the following format for each parameter:

HHHDXXX-----E±NND

where

H	=	Three letter mnemonic for each message header.
D	=	Optional header extension (A, B or C) to specify output (ref. Table 3-5 through 3-8)
X	=	Alpha, numeric or # for message header argument.
E	=	Optional ASCII E for exponent identification
±	=	Exponent sign
N	=	Exponent value 0 to ±63
D	=	Message string delimiter, (CR) (LF) or (LF)

More than one message header with its corresponding argument may be sent in one setup string with a common delimiter.

### 3.7.3 NUMERIC DATA FIELD

Parameter values may be sent as an unsigned value with a decimal point or a decimal point with an exponent. The phase value may be sent as a signed value.

The Decimal Point for numeric data values may be either sent or inferred. The two following ASCII strings will represent 115 volts.

AMP115  
AMP115.0

There may be any number of digits following the decimal point, not to exceed the 256 byte DAM buffer, but only the Least Significant Digit (LSD) of resolution will be recognized. The LSD for amplitude is 0.1 volts. The LSD for frequency is either 0.01, 0.1 or 1 Hz for up to 99.99, 999.9 or 5000 Hz respectively.

Any parameter's numeric value may be of a mixed form with a decimal point and exponent. The exponent may be a numeric, with or without leading zeros, up to a value of ±63. The following ASCII strings will represent 15 volts:

AMP1.15E2  
AMP1.15E+2  
AMP1.15E+02  
AMP1150E-1

A positive exponent value is represented by either an ASCII "+" or an unsigned value.

### 3.7.4 PROGRAM HEADERS

A Program Header is a mnemonic of a series of three ASCII characters used to select a function or identify the data it precedes. The header is an abbreviation of the program function it identifies. The header may be followed by a header extension to separately program each output (phase A, B or C) to different values. If an extension is not added to the header all outputs will be programmed to the header's argument. See Table 3-12 for the definition of the Program Headers and their related arguments.

Any header that is sent without an argument will cause the front display to show the corresponding screen. Refer to Figure 3-5 for a summary of all possible command sequences.

**Figure 3-5 REMOTE COMMEND SEQUENCES**  
IEEE-488 PROGRAM SYNTAX

TO PROGRAM OUTPUT PARAMETERS:

→	AMP	-	-	-(n)→	OPN	→WVF-	-	-	SNW	→	SNC	-	INT	→REC-(n) →REG-(n) →*
	FRQ		A		CLS		A		SQW		CLK		EXT	
	CRL		B				B							
	RNG		C				C							
	PHZ													
	DRP													

-----→-----→-----→-----→-----→

TO RAMP OR STEP ONE OUTPUT PARAMETERS:

→	AMP	-	-	-(n) →STP - (n) →DLY - (n) →VAL - (n) →*
	FRQ		A	
	CRL		B	→DLY - (n) →VAL - (n) -----→*
	PHZ		C	

TO RAMP OR STEP TWO OUTPUT PARAMETERS:

→	AMP	-	-	-(n)→	AMP	-	-	-(n) →STP - (n) →DLY - (n) →VAL - (n) →STP - (n) →*
	FRQ		A		FRQ		A	
	CRL		B		CRL		B	-----→DLY - (n) → VAL - (n) →VAL - (n)-----→*
	PHZ		C		PHZ		C	

TO REQUEST TALKING OF CALIBRATION COEFFICIENTS:

→ TLK → CAL --	-----	-	-	-----→*
	AMP		A	
	VLT		B	
	PWR		C	
	CUR			

TO PROGRAM THE OUTPUT MODE

→ MOD PHS >	1	-----→*
	3	

TO SPECIFY THE SERVICE REQUEST INTERRUPT:

-----→ SRQ - (n) ----→\*

TO CALIBRATE OUTPUT:

→ CAL -- | ----- | - | - | - (n) → DLY – (n) → STP – (n) → VAL - -(n) ---→\*

AMP | A | | |

B | | |

C | | | -----→\*

TO CALIBRATE MEASUREMENT:

→ CAL → | VLT | - | - | - (n) -----→\*

CUR | A | | |

PWR | B | | |

C | | |

TO REQUEST TALKING A PROGRAMMED PARAMETER OR MEASURED VALUE:

→ TLK → | AMP | - | - | -----→\*

FRQ | A | | |

CRL | B | | |

RNG | C | | |

PHZ

SNC

CLK

MNU

ELT

VLT

CUR

PWR

APW

PWF

ALM

FLM

CFG

POF

MOD

TO RECALL A REGISTER:

-→ REC – (n) -→\*

\* Represents either an IEEE-488 END or EOS message. The EOS message may be either an ASCII Carriage Return (CR), Line Feed (LF) or just LF.

N Represents a numeric value.

**Table 3-12            PROGRAM HEADERS**

<b>HEADER</b>	<b>EXTENSION</b>	<b>ARGUMENT</b>	<b>DEFINITION</b>
AMP	A, B, C	# or numeric from 0.0 to RNG value	Amplitude in volts.
CAL	A, B, C	0 to 255	Calibrate the output voltage
CAL VLT	A, B, C	Actual voltage	Calibrated measured voltage at external sense point
CAL CUR	A, B, C	Actual current	Calibrate measured current
CAL PWR	A, B, C	Actual power	Calibrate measured power.
CLK		INT, EXT	Clock source
CRL	A, B, C	0 to maximum current per phase	Current limit in amps
DLY		0.000 to 9999	Delay in seconds used as a seconds ramp parameter
DRP	A, B, C	1 through 5	Number of Drop cycles
FRQ		45.00 to 5000	Frequency in hertz
PHZ	A, B, C	0 to 999.0	Phase angle in degrees.
PRG		0 through 15	Load register with preceding data
REC		0 through 15	Recall register or specify link register if it is preceded by program argument followed by PRG and register number.
REG		0 through 15	Register load
RNG	A, B, C	0.0 to 270 or other optional range value	Amplitude range and limit value in volts
SNC		INT,EXT	Synchronize
SRQ		0, 1 or 2	Service Request disable, enable or at completion of program and measurements.
STP		From parameter minimum to maximum value	Define step size in ramp.
TLK		Any header	Set up to talk argument value or measured value when addressed to talk
TRG			Execute (Trigger) set-up parameters on GPIB "GET" message
VAL		From parameter minimum to maximum value	Final ramp or step value in volts, hertz, amps, degrees, sine wave or square wave.
WVF	A, B, C	SNW,SQW	Waveform
OPN			Open output relays
CLS			Close output relays
VLT	A, B, C		Used with TLK to request measurement of the output voltage



HEADER	EXTENSION	ARGUMENT	DEFINITION
ELT			Used with TLK to request total accumulated runtime.
CUR	A, B, C		Used with TLK to request measurement of the output load current.
MOD	PHS	1 or 3	Program the output phase configuration
PWR	A, B, C		Used with TLK to request measurement of the True output power.
APW	A, B, C		Used with TLK to request measurement of the Apparent output power
PWF	A, B, C		Used with TLK to request measurement of the output power factor.
PZM	A, B, C		Used with TLK to request measurement of the output phase angle.
FQM			Used with TLK to request measurement of the output frequency.

NOTE: If Extension does not follow the header, the argument will be applied to all phases.

### 3.7.5 TO PROGRAM OUTPUT VOLTAGE AMPLITUDE (AMP)

The AMP header with the optional A, B or C extension is used to identify the amplitude command. The argument is a numeric data field from 0.0 to the limit set by the RNG value. An attempt to program a value higher than this value will generate an error and a SRQ on the GPIB.

The following ASCII strings will program the voltage given in the left column:

A,B,C 0.0 volts	AMP0	or	AMPA0AMPB0AMPC0		
A,B,C 10.5 volts	AMP10.5	or	AMP1.05E1	or	AMP105E-1
A,B,C 100 volts	AMP100	or	AMP100.0	or	AMP1E2
A,B = 110.5, C = 115	AMPA110.5AMPB110.5AMPC115		or	AMP110.5AMPC115	

### 3.7.6 TO PROGRAM FREQUENCY (FRQ)

The FRQ header is used to identify the following numeric data as frequency.

The following string will program the frequency to 60.56 Hz.

FRQ 60.56

### 3.7.7 TO PROGRAM PHASE ANGLE (PHZ)

The PHZ header with the optional A, B or C extension is used to identify the following numeric data as phase. The PHZ header sent with no extension will program the B and C outputs in phase with phase A. The phase of the A output will lead the EXT SNC signal by the value programmed.

The following example will program the phase A output to 90 degrees relative to an external sync signal when operating in the EXT SNC mode:

PHZA 90

The following example will program phase B to 240.5 degrees and phase C to 119.3 degrees leading phase A.

PHZB 240.5 PHZ C 119.3

The PHZA value can be used to control the point of the phase A waveform where the change will occur. The following example will drop the phase A waveform at 90 degrees for 0.017 seconds before going to 115 volts.

PHZA 90 AMP0 DLY .017 VAL 115

The following example will increase the phase A output voltage to 135 volts for 0.017 seconds starting at the 90 degree point of the waveform. The voltage will return to 115 volts after the transient.

PHZA 90 AMPA 135 DLY .017 VAL 115

### **3.7.8 TO PROGRAM CURRENT LIMIT (CRL)**

The CRL header with the optional A, B or C extension is used to identify the Current Limit Command. The argument is a numeric data field from 0.0 to the maximum rated current of the power system.

The following string will program a current limit of 10.5 amps for all three phases:

CRL 10.5

### **3.7.9 TO PROGRAM CALIBRATION (CAL)**

The CAL header when used alone or followed by the header AMP, in addition to an A, B or C extension, is used to calibrate the programmed output voltage. The argument is a relative starting coefficient from 0 to 255 or the ASCII # symbol. The CAL ramp is terminated with the GPIB message Group Execute Trigger (GET). The CAL header can be used with a Delay (DLY) command to allow the external calibration AC DVM time to settle. Refer to Section 4 for additional information.

A CAL coefficient can be programmed without a ramp by using only the argument with the CAL header.

To program the CAL A coefficient to 55, use the following string:

CALA55

To calibrate phase A at 135 volts, start the CAL routing with a GPIB GET message with the CAL coefficient starting at 20 and with each step lasting 2 seconds, use the following string:

AMP135.0 CALA20 DLY2 STP1 VAL255 TRG

In this example the output will program to 135.0 and start to change the output by stepping the CAL value after a "GET" message. the ramp will terminate after a second "GET" message.

The following example will calibrate the phase A output by starting the ramp with the existing CAL coefficient and reducing the output with steps lasting one second:

AMP135.0 CALA# DLY1 STP1 VAL0

Again the ramp must be terminated with the bus "GET" message when the external AC calibration DVM indicates the correct voltage.

The CAL header is used with the headers VLT, CUR and PWR to calibrate the respective measurement function. An A, B or C extension follows the headers to designate a specific measurement channel. If the extension is omitted, the calibration coefficients for all measurement channels will be the same and will depend on only the value for phase A. The arguments is a numeric value that represents the expected measured value. It should be equal to an external precision TRMS voltmeter, ammeter or power meter.

The following ASCII string will cause the current measurement for phase A to measure the value indicated by a TRMS ammeter standard, 10.12 amps:

```
CAL CUR A 10.12
```

### **3.7.10 TO PROGRAM RAMP OR STEP OPERATIONS**

The DLY header is used with a parameter that has a numeric argument (ex. AMP, FRQ, PHZ, CRL, CAL) in a single step program. The numeric argument is in seconds with four decade resolution from 0.001 to 9999 seconds.

The STP header with VAL may be used with DLY to completely specify a ramp program.

The following string will first step the voltage to 125 volts for 2.55 seconds and return to 115 volts.

```
AMP 125 DLY 2.55 VAL 115
```

The following string will ramp the voltage from 10 volts to 115 volts with 1.5 volt/.5 sec. steps:

```
AMP 10 DLY .5 STP 1.5 VAL 115
```

When an AMP header with an argument of 0 is used, the waveform will stop and drop to zero volts at the point specified by the PHZ A value.

The following ASCII string will stop the waveform at 0 degrees for .01 seconds and return to 115 volts:

```
PHZ A 0 AMP 0 DLY .01 VAL 115
```

The STP header is used to identify a numeric value as the increment or decrement value for a FRQ, CRL, AMP, PHZ or CAL ramp.

The following example will ramp all outputs from 130 volts in 1.5 volt/.5 sec. steps to 10 volts.

```
AMP130 DLY.5 STP1.5 VAL10
```

The header VAL is used to identify the following numeric argument as the final Value of a ramp or step. If the VAL argument is larger than the initial value for the parameter to be ramped, the ramp will increment with step size defined by STP and DLY. With the VAL argument less than the initial value, the ramp will decrement from the initial parameter.

A ramp or step operation can be started at anytime by the GPIB message Group Execute Trigger (GET). The operation will wait for the Group Execute Trigger when the TRG header is added to the string.

The following example will decrement the output amplitude of phase A only from 120 in .1 volt/.2 sec steps to 100 volts after a Device Trigger.

```
AMP A 120 DLY.2 STP.1 VAL100 TRG
```

The following example will simultaneously ramp the Frequency from 400 to 500 Hz at a rate of 0.1 Hz per second and the Amplitude from 5 volts in increments of .5 volts per step:

```
RNG270 AMP5 FRQ400 STP.1 DLY1 VAL500 STP.5
```

A GPIB Service Request will be generated at the end of a ramp if SRQ2 is included in the setup string.

A ramp operation can be stopped at anytime by the GPIB Group Execute Trigger.

### **3.7.11 TO PROGRAM A REGISTER (REG)**

The REG header is used to load the register specified by the following numeric data with the preceding data. The numeric value is from 0 to 15. The PRG header is identical to the REG header and is included to standardize other AC power controllers.

The following example will load a ramp program that will step the voltage from 10 to 115 volts with 1 volt/.5 sec steps at 400 Hz into register 0.

```
FRQ400 AMP10 DLY.5 STP1 VAL115 REG0
```

### **3.7.12 TO RECALL A REGISTER (REC)**

The REC header is used to recall previously loaded data from a register identified by the following register number (0 to 15).

The following example recalls and outputs the parameters stored in register 0 by an example in paragraph 3.7.11.

```
REC0
```

The following example recalls the parameters in register 0 and outputs the parameters after the IEEE-488 "GET" message.

```
REC0 TRG
```

The following is an example of register linking. The voltage and frequency is maintained at 115 volts and 60 Hz for 5 seconds and then the program contained in register 0 is recalled and executed. The program is stored in register 1.

```
FRQ60 AMP115 DLY5 VAL115 REC0 REG1
```

The program is initiated by the following ASCII string:

```
REC1
```

### **3.7.13 TO PROGRAM VOLTAGE RANGE (RNG)**

The RNG header is used to select a range. The numeric value following the RNG header will also define the upper limit for the AMP value. The RNG value will select the higher range if the value is greater than the lower range value defined by the ALM screen which is 135 for the standard voltage range. If the range and voltage amplitude are to be programmed by the same data string the RNG header and argument must precede the AMP header or a syntax error will be generated.

The following example will select the 270 range from the 135/270 range pair with an upper amplitude limit of 210 volts.

RNG210

### **3.7.14 TO PROGRAM EXTERNAL SYNCHRONIZATION (SNC)**

The SNC header is used with the EXT argument to synchronize the phase A output to an external sync input. The phase A output will be phase referenced to the sync input with the displacement equal to the PHZ A value.

The following ASCII string will program the phase A output to 0 degree relative to the external sync input and select the external sync mode.

PHZA0 SNC EXT

Sending the ASCII string SNC INT will disable the sync input.

### **3.7.15 TO PROGRAM EXTERNAL CLOCK (CLK) (optional)**

The CLK header has an argument of either EXT or INT. The CLK header with the EXT argument will make one AC Power System a slave to another system. The slave will operate at the same frequency as the master. Phase A of the slave will be related to phase A of the master by the PHZ A value of the slave.

#### **NOTE**

The clock option is only available if the associated power systems have the LK option.

The following ASCII string will enable the CLOCK and LOCK inputs to the associated slave AC Power System:

CLK EXT

#### **NOTE**

If there is no signal at the CLOCK input at the rear panel of the associated power system, the output will go to zero volts.

The ASCII string CLK INT will return the slave AC Power System to its programmed frequency.

### **3.7.16 TO TRIGGER AN OPERATION (TRG)**

The TRG header has no argument. When the TRG mnemonic is included in a setup string, it will delay execution of the string until the GPIB Device Trigger message is sent by the bus controller. The TRG header may also be used to trigger register operations by including the TRG header with the string used to recall a register. The following example will delay execution of the program in register 1 until an IEEE-488 Device Trigger is received:

REC1 TRG

The Trigger mode may also be enabled in the local mode by programming setup parameters without depressing the ENT key. The setup values will then be programmed in the remote mode when the Device Trigger is received.

### **3.7.17 TO PROGRAM THE OUTPUT WAVEFORM (WVF) (Optional)**

The header WVF with the optional A, B or C extension is used to identify the following argument as the Sine Wave (SNW) or Square Wave (SQW) function of the Waveform.

The following example will program all outputs to the square wave function.

WVF SQW

The following example will program only output B to the square wave function:

WVFB SQW

### **3.7.18 TO OPEN (OPN) AND CLOSE (CLS) THE OUTPUT RELAY**

The OPN and CLS headers open and close the output relays in the power source. There is no argument associated with these headers. When the OPN or CLS headers is received the output voltage will be programmed to zero volts for 50 milliseconds before the output relays open or close.

### **3.7.19 TO PROGRAM DROP CYCLE (DRP)**

The DRP header is used to identify the Drop Command. The argument is a numeric data field from 1 to 5. The following string will drop the output voltage for phase B for five complete cycles and start at 0 degree of the wave form. Note that all drop angles are relative to Phase A.

PHZ A 120 DRP B

### **3.7.20 TO PROGRAM THE DEFAULT FREQUENCY (FLM A)**

The default frequency is the output frequency after power-up or after an IEEE-488 Device Clear.

The following example will program the default frequency to 400 Hz.

FLM A 400

### **3.7.21 TO PROGRAM THE DEFAULT OUTPUT VOLTAGE (INI A)**

The default voltage is the output voltage after power-up, IEEE-488 Device Clear or an Amplitude fault.

The following example will program the default voltage to 5 volts.

INI A 5

### **NOTE**

If the default voltage is programmed to a value less than 5 volts, the settling time will increase. In addition, there may be an amplitude fault when the voltage is programmed from the default voltage to a value less than 50% of full scale.

### **3.7.22 TO PROGRAM THE DEFAULT CURRENT LIMIT (INI C)**

The default current limit is the value after power-up or IEEE-488 Device Clear.

The following example will program the default current limit to 10 amps.

INI C 10

### **3.7.23 TO PROGRAM THE DEFAULT VOLTAGE RANGE (ALM A)**

The default voltage range is the voltage range after power-up or IEEE-488 Device Clear. A value of 0 designates the low-range. A value of 8 designates the high range.

The following example will program the default voltage range to the high range.

ALM A 8

### **3.7.24 TO PROGRAM 1 OR 3 PHASE MODE (MOD)**

The MOD header with the required PHS extension is used to identify the mode command. The argument is either a 1 or a 3 to specify the 1-phase or 3-phase mode respectively. A mode change by the AC Power System will cause the output voltage to go to the default values.

The following string will set the AC Power Systems to the 3-phase mode:

MOD PHS 3

### **3.7.25 TO TALK (TLK) MEASURED AND PROGRAMMED DATA**

The TLK header will setup the AC Power System to talk data. The TLK header will setup the AC Power System to report a programmed output parameter if the program header is the argument for the TLK header.

To setup the AC Power System to report a measured value, attach a measurement header as the TLK argument. The measurement headers are VLT, CUR, PWR, APW and PWF with an A, B or C extension and FQM with no extension.

The following string will setup the AC Power System to measure the phase A power output when it is talk addressed:

TLK PWR A

All arguments for the TLK header are shown in Table 3-13. Table 3-14 shows an example response for all TLK arguments with no A, B or C extension. For 1-phase systems, all responses will only include the phase A value. For 3-phase systems, if the TLK argument includes the A, B or C extension, the response message will be only for the indicated phase.

A GPIB Service Request (SRQ) will be generated at the completion of a measurement if the SRQ2 header is included with the TLK string. The following string will cause the Service Request to be generated when the power system has finished the power factor measurement.

TLK PWF SRQ2

### 3.7.26 TO TALK THE MEASURED OUTPUT VOLTAGE (TLK VLT)

VLT may be used as an argument to the header TLK with an A, B or C extension. When used as an argument, it will set up the AC Power System to measure the output voltage with 0.1 volt resolution.

When VLT is used as a header in a string with no argument, it will cause the front panel to display the measured output voltage.

### 3.7.27 TO TALK THE MEASURED OUTPUT CURRENT (TLK CUR)

CUR may be used as an argument to the header TLK with an A, B or C extension. When used as an argument, it will set up the AC Power System to measure the output current in amps with 0.01 amp resolution for the 4500L-3P and 2750L-3P. The resolution is 0.1 amps for all other models.

When CUR is used as a header in a string with no argument, it will cause the front panel to display the output current.

**Table 3-13 TLK ARGUMENTS**

ARGUMENT	EXTENSION	DATA REPORTED	DEFINITION
ALM	A B C	0000 *135.0 *270.0	Default voltage range code Low Voltage Range High Voltage Range
AMP	A,B,C	0 to 270.0	Programmed voltage Amplitude value in volts.
APW	A,B,C	0 to 2000 or 0.00 to 20.00	Output VA (4500L-3P and 2750L-3P) Output KVA (All other models)
CFG	A B C	0 to 30 * 28 * 120	IEEE-488 Listen Address Configuration Code Phase C initial Value
CLM	A  B  C	See MAX CURRENT TABLE 0 or 2   2 or 1	Defines the maximum current per phase Defines the power decimal point (0 = 4500L-3P and 2750L-3P, 2= all others) Defines the current decimal point (2 = 4500L-3P and 2750L-3P, 1 = all others)
CRL	A,B,C	0 to MAX CURRENT	Programmed output current limit.
CUR	A,B,C	0.00 to 20.0 or 0.0 to 100.0	Output current (4500L-3P and 2750L-3P) (All other models)
ELT	A B C	0000 to 9999 00 to 59 00 to 59	Total accumulated hours (H) Accumulated minutes (M) Accumulated seconds (S)
FLM	A B C	60 45 5000	Default frequency Low frequency limit High frequency limit
FQM	None	45.00 to 5000	Measured output frequency



ARGUMENT	EXTENSION	DATA REPORTED	DEFINITION
FRQ	None	45.00 to 5000	Programmed frequency
INI	A C	0000 to 005.0 O to CRL	Default voltage Default current limit
SNC	None	INT or EXT	Programmed external sync mode
WVF	A, B, C	INT or EXT	Programmed waveform
PHZ	A, B, C	0.0 to 359.9	Programmed output phase angle
PWR	A, B, C	0 to 2000 or 0.00 to 27.00	Output watts (4500L-3P and 2750L-3P) Output KW (all other models)
PZM	A, B, C	0 to 359.9	Measured phase B and C output phase angle relative to A. A is always 0.0
REG	0 to 15	Contents of Reg	Talk contents of register
RNG	None	0 to 270.0	Programmed range and limit
SRQ	None	0, 1 or 2	Programmed SRQ status
VLT	A, B, C	0.0 to 400.0	Measured output voltage
THD	A, B, C	0 to 20	Programmed total harmonic distortion

(\*) Standard values shown. Values will be different for other ranges, output power and options.

NOTE: If the A, B or C Extension is not sent with the argument, all phases will be reported

#### VOLTAGE RANGE PAIR

MODEL	135/270	156/312	67.5/135	200/400
2750L-3P	7.40	6.40	14.82	5.00
2750L-1P	22.22	19.24	44.44	15.00
4500L-3P	12.34	10.68	24.70	8.34
4500L-1P	37.04	32.06	74.08	25.00
9000L/2-3P	24.68	21.36	49.38	16.66
9000L/2-2P	37.04	32.06	74.08	25.0
9000L/2-1P	74.08	64.12	148.2	50.0
13500L/3-3P	37.04	32.06	74.08	25.0
13500L/3-1P	111.2	96.18	222.2	75.0
27000L/6-3P	74.08	64.12	148.2	50.0
27000L/6-1P	222.2	192.4		150.0

#### MAX CURRENT TABLE

**Table 3-14      EXAMPLE TALK RESPONSE (3-PHASE SYSTEM)**

ASCII STRING SENT		RESPONSE AFTER ADDRESSED TO TALK		
TLK	ALM	ALMA0000	B135.0	C270.0
TLK	AMP	AMPA000.0	B000.0	C000.0
TLK	APW	APWA1003	B0985	C1507
TLK	CFG	CFGA0001	B0028	C0120
TLK	CLM	CLMA11.12	B0002	C0000
TLK	CRL	CRLA11.12	B11.12	C11.12
TLK	CUR	CURA06.14	B05.12	C06.71
TLK	ELT	ELTH0147	M0051	S0033
TLK	FLM	FLMA0060	B0045	C0550
TLK	FQM	FQM59.97		
TLK	FRQ	FRQ60.00		
TLK	CLK	CLK INT (*)		
TLK	SNC	SNC INT		
TLK	PHZ	PHZA000.0	B240.0	C120.0
TLK	PWF	PWFA1.000	B1.000	C1.000
TLK	PWR	PWRA0.737	B0.620	C0.806
TLK	PZM	PZMA000.0	B242.1	C118.9
TLK	REG0	ACTUAL CONTENTS OF REGISTER 0		
TLK	RNG	RNGA 135.0	B135.0	C135.0
TLK	VLT	VLTA120.1	B119.8	C120.0
TLK	WVF	WVFA SNW	B SNW	C SNW (*)

(\*) If function is not enabled, a syntax Error message will be generated

### **3.7.28      TO TALK THE MEASURED OUTPUT POWER (TLK PWR)**

PWR may be used as an argument to the header TLK with an A, B or C extension. When used as an argument, it will set up the AC Power System to measure the output power in watts with 1 watt resolution for the 4500L-3P and 2750L-3P. The power is measured in kilowatts with 0.01 KW resolution for all other models.

When PWR is used as a header in a string with no argument, it will cause the front panel to display the output power.

### **3.7.29      TO TALK THE MEASURED OUTPUT POWER FACTOR (TLK PWF)**

PWF may be used as an argument to the header TLK with an A, B or C extension. When used as an argument, it will set up the AC Power System to measure the output power factor from 0 to 1.000.

When PWF is used as a header in a string with no argument, it will cause the front panel to display the output power factor.

### **3.7.30 TO TALK THE MEASURED OUTPUT APPARENT POWER (TLK APW)**

APW may be used as an argument to the header TLK with an A, B or C extension. When used as an argument, it will set up the AC Power System to measure the Apparent Power output in VA with 1 VA resolution for the 4500L-3P and 2750L-3P. The apparent power is measured in KVA with 0.01 KVA resolution for all other models.

When APW is used as a header in a string with no argument, it will cause the front panel to display the measured output Apparent Power.

### **3.7.31 TO TALK THE MEASURED OUTPUT FREQUENCY (TLK FQM)**

FQM may be used as an argument to the header TLK. There are no extensions for this argument. When FQM is used as an argument, it will set up the AC Power System to measure the output frequency in hertz.

When FQM is used as a header, it will cause the front panel to display the measured output frequency.

### **3.7.32 TO TALK THE MEASURED OUTPUT PHASE ANGLE (TLK PZM)**

PZM may be used as an argument with an extension A, B or C for the header TLK. When used as an argument, PZM will set up the AC Power System to measure the phase angle of phase B and C relative to phase A. The measurement is made at the External Sense terminals. Phase A is the reference phase and will always be reported as 000.0 degrees unless the AC Power System is operating in the external sync mode.

When PZM is used as a header, it will cause the front panel to display the phase measurement screen.

### **3.7.33 MESSAGE SEPARATORS**

A complete message consists of a header and an argument. Since more than one message can be sent in a setup string, message separators included in the string between the message will make it more readable to the human operator. Three message separators are recognized: the comma (,), semicolon (;) and a space. Since these separators are ignored, they may be dispersed throughout a setup string.

The following are two examples of ASCII strings with separators:

PHZA90;FRQ60;AMP115

CRL,90;FRQ50;AMP,120

### **3.7.34 SERVICE REQUEST**

After power-up the GPIB Service Request (SRQ) will be generated after any error (example. syntax, output fault, etc.). This SRQ output can be inhibited by the SRQ header followed by the single digit "0". The SRQ can be reenabled by the SRQ header followed by 1. Sending SRQ2 causes an SRQ to be generated after the execution of a setup string or when data is available after request of measurements. The setup string can be of any type: ramp, calibration, etc.

The following example disables GPIB SRQ.

SRQ0

### **3.7.35 SERIAL POLL STATUS BYTE**

Once the bus controller has detected the SRQ, it must determine the instrument needing service by the Serial Poll. During the polling routine the instrument needing service will return a Status Byte (STB) greater than decimal 63. The Status Byte values for various faults are given in Table 3-15.

### **3.7.36 END OF STRING**

The End of String (EOS) delimiter recognized by the AC Power System is the ASCII Line Feed (LF). Carriage Return (CR) followed by Line Feed may also be used for EOS. The End or Identify (EOI) IEEE-488 message END will also be recognized. The END message is sent by setting the IEEE-488 End or Identify line true with the last data byte.

### **3.7.37 ERROR MESSAGES**

Table 3-15 shows all of the possible error messages that can be generated by the AC Power System. These messages will also be displayed on the front panel of the AC Power System.

### **3.7.38 GROUP EXECUTE TRIGGER**

The trigger mode is enabled when the mnemonic TRG is added to a setup string. The trigger command may be inserted anywhere in the string. When the mnemonic is detected, it will delay execution of the new setup values until the GPIB Device Trigger is sent by the bus controller.

A GPIB Device Trigger will also terminate a programmed ramp or other program.

The following setup string will recall the values from register 9 and delay execution until the GET message is received. (Note: GET is the abbreviation for the GPIB Group Execute Trigger message and does not represent a series of ASCII characters. (See Table 3-10).

REC9TRG

**Table 3-15 STATUS BYTE VALUES**

SRQ		REPORTED MESSAGE	CAUSE
1	0		
64	0	AMP A FAULT	Overload or sense line fault
65	1	AMP B FAULT	Overload or sense line fault
66	2	AMP AB FAULT	Overload or sense line fault
67	3	AMP C FAULT	Overload or sense line fault
68	4	AMP AC FAULT	Overload or sense line fault
69	5	AMP BC FAULT	Overload or sense line fault
70	6	AMP ABC FAULT	Overload or sense line fault
71	7	CRL FAULT	Output current exceeds program value
72	8	TEMP A FAULT	Amplifier overtemperature
73	9	TEMP B FAULT	Amplifier overtemperature
74	10	TEMP AB FAULT	Amplifier overtemperature
75	11	TEMP C FAULT	Amplifier overtemperature
76	12	TEMP AC FAULT	Amplifier overtemperature
77	13	TEMP CB FAULT	Amplifier overtemperature
78	14	TEMP ABC FAULT	Amplifier overtemperature
90	26	RNG RANGE ERROR	RNG value greater than highest range
91	27	AMP RANGE ERROR	AMP value greater than RNG value
92	28	FRQ RANGE ERROR	FRQ value is less than 45 or greater than 2000 Hz
93	29	PHZ RANGE ERROR	PHZ value greater than $\pm 999.0$
94	30	CRL RANGE ERROR	CRL value greater than maximum value
95	31	RMPA RANGE ERROR	DLY, STP or VAL values wrong
96	32	SYNTAX ERROR	Wrong string SYNTAX
97	33	BUS LOCAL ERROR	Remote message sent while in local mode
98	34	EXT SYNC ERROR	No external sync input or signal not between 45 and 2000 Hz
99	35	CPU MEMORY FAULT	CPU failed self-test
100	36	DMA OVERFLOW ERROR	Remote message greater than 256 bytes
63			The response after SRQ2 is included in a setup string and the execution of the string or measurement is completed.
40		STA OK	No problems

### 3.8 REMOTE OPERATION WITH MATE CIIL

The 4500L-3P and 2750L-3P are the only Power System configuration with the MATE CIIL option. When the 4500L-3P or the 2750L-3P is configured to operate with CIIL as the principal language, the alternate language is APE. Refer to Section 3.7 for information on the APE program syntax. Using CIIL, the power source will accept OP codes, the noun ACS (AC SIGNAL) and noun modifiers to program the operating parameters of voltage, frequency, phase and current limit in a setup string. In addition, a number of OP codes cause the power source to perform a specific task such as reset and confidence testing. Figure 3-6 is a summary of the CIIL program syntax.

### 3.8.1 CIIL ELEMENTS

The Control Interface Intermediate Language (CIIL) elements are:

OP-CODES:	FNC, SET, SRX, SRN, CLS, OPN, RST, CNF, IST, INX, FTH, STA, GAL
NOUN:	ACS
NOUN MODIFIERS:	VOLT, FREQ, PANG, CURL, SYNI, POWR, APOW, CURR, TRSC
CHANNEL DESIGNATORS	:CH00, :CH01, :CH02, :CH03

The only noun recognized by the power source is ACS for AC Signal. The only non-operational code (no-op) in a string is an ASCII space. Numeric expressions may be represented by explicit decimal values (e.g., 115.0) or exponential values (e.g., 0.115E3). The exponent field may be either a one-digit or two-digit form (e.g., E1 or E01) signed or unsigned with a range from E-24 to E+24.

	*
--	---

\*NOTE: There is no value for SET SYNI

```

----->-->CL5->----->:CH00->-----<CR><LF>
      ->OPN->                ->:CH01->
                                ->:CH02->
                                ->:CH03->

```

----->----->GAL----->-----><CR><LF>  
->CNF->  
->IST->  
->STA->

```
----->INX->----->VOLT->-----<CR><LF>
->FTH->                ->FREQ->
                        ->PANG->
                        ->CURR->
                        ->APOW->
                        ->POWER->
```

-69-

### 3.8.2 CHANNEL DESIGNATORS

The channel designator consists of a colon (:) followed by the syntax CH and a single-digit or two-digit channel number. The general form for the channel designator is CHnn and may be any of the following;

- :CH00 Designates all outputs.
- :CH01 Designates Phase A.
- :CH02 Designates Phase B.
- :CH03 Designates Phase C.

Channel designators and their applicable noun modifiers are listed in Table 3-17.

### 3.8.3 OP-CODES

Each of the OP-codes listed is described in following paragraphs.

#### 3.8.3.1 FNC

All set-up strings must begin with OP-code FNC followed by the noun ACS, and the channel designator :CHnn (e.g., FNC ACS :CH03).

#### 3.8.3.2 SET

The SET (set-up) OP-code must be sent when a characteristic included in the output string is to be programmed. The noun modifiers that may follow the SET OP-code are VOLT, FREQ, SYNI, CURL, TRSC and PANG. A SET OP-code is always followed by a noun modifier. A SET string has the following string elements:

FNC ACS :CHnn SET<NOUN-MOD><NUMERIC> <CR> <LF>

An example of a setup string where the phase A output is set to 115.0 volts is as follows:

FNC ACS :CH01 SET VOLT 115.0 <CR><LF>

Note that all strings end with ASCII <CR><LF>. The power source is configured to recognize this series of ASCII characters as indicating end-of-string (EOS).



Table 3-16

CHANNEL DESIGNATORS AND NOUN MODIFIERS

CHANNEL DESIGNATOR	MODIFIER	FUNCTION
:CH00	VOLT	Simultaneously set amplitude for Phase A, Phase B and Phase C
:CH01	VOLT	Set Phase A Amplitude
:CH02	VOLT	Set Phase B Amplitude
:CH03	VOLT	Set Phase C Amplitude
:CH00	FREQ	Set Frequency
:CH01	FREQ	Set Frequency
:CH02	FREQ	Set Frequency
:CH03	FREQ	Set Frequency
:CH00	PANG	Syntax error with :CH00
:CH01	PANG	Set Phase A phase angle
:CH02	PANG	Set Phase B phase angle
:CH03	PANG	Set Phase C phase angle
:CH00	CURL	Simultaneously set Phase A, Phase B and Phase C current limit.
:CH01	CURL	Set Phase A current limit
:CH02	CURL	Set Phase B current limit
:CH03	CURL	Set Phase C current limit
:CH00	SYNI	Set sync to external signal
:CH00	POWR	Send power measurement data for Phase A, Phase B and Phase C to Bus Controller
:CH01	POWR	Send power measurement data for Phase A to Bus controller
:CH02	POWR	Send power measurement data for Phase B to Bus Controller
:CH03	POWR	Send power measurement data for Phase C to Bus Controller
:CH00	APOW	Send apparent power measurement data for Phase A, Phase B and Phase C to Bus Controller
:CH01	APOW	Send apparent power measurement data for Phase A to Bus Controller
:CH02	APOW	Send apparent power measurement data for Phase B to Bus controller
:CH03	APOW	Send apparent power measurement data for Phase C to Bus Controller
:CH00	CURR	Send output current measurement data for Phase A, Phase B and Phase C to Bus Controller
:CH01	CURR	Send output current measurement data for Phase A to Bus Controller
:CH02	CURR	Send output current measurement data for Phase B to Bus Controller
:CH03	CURR	Send output current measurement data for Phase C to Bus Controller

### 3.8.3.3 SRX and SRN OP-CODES

The SRX (set maximum) OP-code sets the maximum value of the programmable noun modifiers VOLT, FREQ, PANG and CURL. It is always accompanied by a noun modifier. An example of setting the maximum output amplitude of all phases to 135 volts and the output to 115 volts follows:

```
FNC ACS :CH00 SRX VOLT 135 SET VOLT 115.0 <CR> <LF>
```

The SRN OP-code sets the minimum value. For example, to set the minimum value of the output amplitude to 5.0 volts and the output to 20 volts, the following string is transmitted:

```
FNC ACS :CH00 SRN VOLT 5 SET VOLT 20 <CR> <LF>
```

### 3.8.3.4 OPN and CLS

The CLS (Close) OP-code closes the relay between the amplifier outputs and the output connector. The CLS Op-code must be followed by a valid channel designator. (:CH00, :CH01, :CH02 or :CH03), but all channels close simultaneously for any valid designator. A programmed amplitude will not be generated at the output of the power source until the relays have been closed.

CLS :CH00 <CR> <LF> Closes relay

If an output voltage been programmed prior to the CLS OP-code, the output will appear after CLS has been sent. If the power source has the MT option, do not program a voltage greater than 30 volts without closing the output relays or the confidence loads in the power source may be damaged.

The OPN (open) OP-code opens the relay at the power source output. Prior to opening the relay, the output of the power source is reduced to zero.

OPN :CH00 <CR> <LF> Opens relay

### 3.8.3.5 RST

The RST (reset) OP-code resets the power source to its default values as follows:

Output Amplitude	5.0 Volts
Frequency	Selected default frequency
Phase A Phase Angle	0 Degrees*
Phase B Phase Angle	240 Degrees
Phase C Phase Angle	120 Degrees
Sync	Internal
Current Limits	Maximum current of power system
Power Source Relays	Open
[*Relative to External Sync.]	

In addition, all non-catastrophic error messages (SYNTAX and RANGE errors) are cleared. All other error messages are not affected.

OP-code RST must be followed by ACS and any one of the valid channel designators :CH00 through :CH03 (e.g., RST ACS :CH00 <CR> <LF>).

### 3.8.3.6 CNF and IST

The CNF (confidence) OP-code instructs the power source to perform a confidence test of the entire power system. The OP-code stands by itself. The confidence test flow diagram is shown in Figure 3-7. If confidence testing detects a fault, an appropriate message is transmitted to the Bus Controller on receipt of an STA OP-code (see paragraph 3.8.3.9). The output relays of the power source are opened during confidence testing.

During confidence testing, the power source generates the following:

Amplitude A, B, C	115 Volts
Frequency	400 Hz
Current Limit	Maximum and 5% of Maximum
B Phase Angle	240 degrees
C Phase Angle	120 degrees

The power source compiles a message after the confidence test and the receipt of a STA OP-code. The power source responds with the appropriate message as shown in Figure 3-7. The reference designators shown in Figure 3-6 are for the subassemblies most likely to be at fault.

The IST (internal self test) OP-code produces the same response described for CNF.

### 3.8.3.7 INX

The INX (initialize) OP-code is a request for data from the power source. A request for the time required to measure the voltage of all phases consists of the following strings:

```
FNC ACS VOLT :CHnn <CR> <LF>  
INX VOLT <CR> <LF>
```

The power source then responds with:

```
<SP> 5 <CR> <LF>
```

The power source response indicates that 5 seconds will be required to perform the measurement. The measurement time values are stored in read-only memory in the power source.

Note that the INX OP-code must be preceded by an FNC OP-code string containing the noun modifier for which INX will request data.



### **3.8.3.8 FTH**

The FTH (fetch) OP-code function fetches data from the power source for the parameter indicated by the noun modifier of the previous string. For example, the following FNC string is first sent:

FNC ACS VOLT :CH01 <CR> <LF>

Then the measurement value is requested with:

FTH VOLT <CR> <LF>

Assuming that the output of phase A is 115.5 volts, the power source responds with:

<SP> 115.5 <CR> <LF>

The FTH OP-code may be repeated for the same FNC noun modifier.

An INX string may be inserted between the two strings as described in 3.8.3.7, if the time to accomplish the measurement is required.

If the channel indicator in the above example had been :CH00, the power source would have responded with the values of all three phases in the order of A, B and C.

### **3.8.3.9 STA**

The STA (status) OP-code instructs the power source to transfer its output message to its output buffer. The message is then transmitted to the Bus Controller when the power source is addressed to talk. Table 3-17 lists all of the possible status messages generated outside of confidence testing. All confidence testing messages are shown in Figure 3-7.

If the power source is operating correctly and the following OP- code is sent:

STA <CR> <LF>

The power source responds with:

<SP> <CR> <LF>

### **3.8.3.10 GAL**

The GAL (go to alternate language) OP-code instructs the power source to discontinue use of the CIIL language and start accepting commands in the Abbreviated Plain English (APE) language. While operating in the APE language mode, sending ASCII characters CIIL will return operation to the CIIL language. When power is removed and then restored, the power source reverts to the native language.

**Table 3-17 NON-CNF STATUS MESSAGES**

CONDITION	DEVICE RESPONSE
Loaded output Fault	F07ACS01 <SP> (DEV): <SP>OUTPUT CH01/02/03 VOLT FAULT <CR><LF>
Source Temperature Fault	F07ACS01 <SP> (DEV): <SP> SOURCE CH01/02/03 TEMPERATURE <CR><LF>
Program out of range for VOLT, FREQ, PANG or CURL	F07ACS01 <SP> (MOD): <SP> VOLT/FREQ/PANG/CURL RANGE ERROR <CR> <LF>
Unrecognizable OP-code or missing OP-code	F07ACS01 <SP> (MOD): <SP>SYNTAX ERROR <CR><LF>
Good Status	<SP><CR><LF>

### 3.8.4 NOUN MODIFIERS

Noun modifiers are a CIIL mnemonic indicating the characteristic of the signal to be described.

#### 3.8.4.1 VOLT

The VOLT (voltage) noun modifier may be contained in a string as an instruction to the power source with SET, SRX or SRN. Depending on the OP-code, an output voltage (or voltages) may be programmed or set as an upper or lower limit in 0.1-volt increments up to the range limit. The channel indicator which precedes the modifier determines which phase (or phases) will be so set. The number which follows the modifier in the string determines the amplitude to be programmed. For example, to set the output voltage of all three phases to 110 volts, the following string is transmitted:

```
FNC ACS :CH00 SET VOLT 110 <CR> <LF>
```

The noun modifier may also be used in a string that uses the sensor (measurement) capability of the power source. An example of requesting the measurement of power source phase A output voltage follows. Note that the noun modifier precedes the channel indicator.

```
FNC ACS VOLT :CH01 <CR> <LF>
FTH VOLT <CR> <LF>
```

When the output voltage of phase A is 110.0 the power source responds with:

```
<SP> 110.0 <CR> <LF>
```

#### 3.8.4.2 FREQ

The FREQ (frequency) noun modifier may be contained in a string as an instruction to the power source with SET, SRX or SRN. The channel indicator which precedes the modifier determines which phase (or phases) will be so set. Any one of the four channel indicators may be used in the string. The number which follows the modifier in the string determines the frequency to be programmed. For example, to program all phases to 440 Hertz, the following string is transmitted:

```
FNC ACS :CH00 SET FREQ 440 <CR><LF>
```

The FREQ modifier may also be used to instruct the power source to measure the output frequency as follows. Note

that the noun modifier precedes the channel indicator:

```
FNC ACS FREQ :CH00 <CR><LF>
```

Followed by string:

```
FTH FREQ <CR> <LF>
```

The response from the power source when the frequency is 380.0 Hz is then:

```
<SP> 380.0 <CR> <LF>
```

#### **3.8.4.3 PANG**

The PANG (phase angle) noun modifier may be contained in a string as an instruction to the power source with SET, SRX or SRN. Depending on the OP-code, an output phase angle (or phase angles) may be programmed or the upper or lower limit set in one-tenth degree increments. The channel indicator which precedes the modifier determines which phase (or phases) will be so set. The number which follows the modifier in the string determines the phase angle to be programmed.

```
FNC ACS :CH02 SET PANG90 <CR> <LF>
```

As with the FREQ and VOLT modifiers, the INX OP-code may be used to request time for PANG measurement:

```
FNC ASC PANG :CH02 <CR><LF>  
INX PANG :CH01 <CR> <LF>)
```

When addressed to talk, the power source responds with the maximum time required to make the measurement in seconds:

```
<SP> 5 <CR> <LF>
```

When operating in the external sync mode, the phase angle of phase A relative to the external sync input may be programmed as follows:

```
FNC ASC :CH01 SET PANG90 SET SYNI <CR><LF>
```

The phase A output will still track the SYNC input, but will be offset by 90 degrees. The phase angles of phases B and C will still be relative to phase A.

#### **3.8.4.4 CURL**

The CURL (current limit) noun modifier may be contained in a string as an instruction to the power source with SET, SRX or SRN. Depending on the OP-code, an output current limit (or limits) may be programmed or set as to upper or lower limit in or 0.01 ampere increments up to the power source maximum current. The channel indicator which precedes the modifier determines which phase (or phases) will be so set. The number which follows the modifier in the string determines the current limit to be programmed.

```
FNC ACS :CH00 SET CURL 2.5 <CR> <LF>
```

#### **3.8.4.5 SYNI**

SET SYNI enables the external SYNC input. The power source returns to the internal sync mode in the absence of the SYNI noun modifier from any set-up string. Any channel indicator may be used in the set-up string that includes SYNI. SYNI may be used with PANG to program the phase A phase angle relative to the sync signal. The following string enables the power source to track the frequency and phase of the external sync signal:

FNC ACS :CH00 SET SYNI <CR> <LF>

Note that other noun modifiers may be included in the above string.

While operating in the external synchronize mode, the power source tracks the frequency and phase of the external signal. Note that its phase may be offset from the SYNC input (see paragraph 3.8.4.3). The frequency of the external signal is reported with the following set of strings:

(L) FNC ACS FREQ :CH00 <CR> <LF>  
(L) INX FREQ <CR> <LF>  
(T) <SP> "default time-out value reported" <CR> <LF>  
(L) FTH FREQ <CR> <LF>  
(T) <SP> "measured value of external sync frequency reported" <CR> <LF>

In the above, (L) indicates the power source is listen addressed and (T) that it is talk addressed. The INX OP-code in the above series of strings may be omitted if the time data is not required.

#### 3.8.4.6 CURR

The CURR (current measurement) noun modifier's single function is to measure current. The strings to initiate the current measurement of Phase B are as follows:

FNC ACS CURR :CH02 <CR> <LF>  
FTH CURR <CR> <LF>

The current of Phase A, B or C can be measured with channel designators :CH01, :CH02 or :CH03, respectively.

#### 3.8.4.7 POWR

Noun modifier POWR (power measurement) is included in a string to instruct the power source to measure the power output of the power source. The strings to initiate the power measurement are as follows:

FNC ACS POWR :CH01 <CR> <LF>  
FTH POWR <CR> <LF>

The response from the power source is:

<SP> 80.5 <CR> <LF>

The foregoing assumes an output power on phase A of 80.5 watts. The power of either Phase A, B or C may be measured.

#### 3.8.4.8 APOW

Noun modifier APOW (apparent power measurement) included in a string instructs the power source to measure the apparent power output of the power source in volt-amperes (VA). The strings to initiate the measurement are as follows:

FNC ACS APOW :CH01 <CR> <LF>  
FTH APOW <CR> <LF>

The response from the power source is:

<SP> 65.5 <CR> <LF>



The foregoing assumes an apparent output power on phase A of 65.5 VA.

### 3.8.5 NORMAL CONDITION RESPONSES

All normal condition responses of the power source to requests from the bus controller (either status or measurement requests) begin with an ASCII space <SP>. In the following examples of bus controller/power source exchange, (L) indicates the power source is listen addressed and (T) indicates it is talk addressed.

When the power source is requested to measure one of the parameters identified by a noun modifier (e.g., VOLT), the following strings are sent and received by the bus controller:

```
(L) FNC ACS VOLT :CH01 <CR> <LF>
(L) INX VOLT <CR> <LF>
(T) <SP> "default time out" <CR> <LF>
(L) FTH VOLT <CR> <LF>
(T) <SP> 115.5 <CR> <LF>
```

When the power source receives an STA OP-code after a CNF OP-code, its normal response is an ASCII space <SP>. An example of the strings transmitted and received is:

```
(L) CNF <CR> <LF>
(L) STA <CR> <LF>
(T) <SP> <CR> <LF>
```

The power source accepts the STA OP-code after any string which is sent to it. For example:

```
(L) FNC ACS :CH00 SET VOLT115 SRX VOLT 135 SRN VOLT5 <CR><LF>
(L) STA
(T) <SP> <CR> <LF>
```

### 3.8.6 ABNORMAL CONDITION RESPONSE

When an abnormal condition has been detected by the power source, its response to the STA OP-code will begin with an ASCII F. The abnormal condition may be in the power source or specifically in the power source controller. In the examples that follow, (MOD) is an abbreviation for MODULE and refers to the power controller; (DEV) is an abbreviation for DEVICE and refers to the power source excluding the power controller. The response string for an abnormal condition is:

```
F07ACS01 <SP> (DEV): <SP> "message"<CR> <LF>
```

The status contained in "message" may be similar to the following:

```
OUTPUT CH01&02&03 VOLT FAIL
OUTPUT CH01&02&03 TEMPERATURE FAIL
CONTROLLER CH01&02&03 FREQ FAIL
```

Where a & means "and".

When an STA OP-code is transmitted after any string, the complete abnormal response may be similar to:

```
F07ASC01 <SP> (MOD) : <SP> "message"<CR> <LF>
```

The status contained in "message" may be any of the following for non-CNF messages:

```
SYNTAX ERROR
VOLT RANGE ERROR
```

FREQ RANGE ERROR  
CURL RANGE ERROR  
PANG RANGE ERROR

The response of the power source under a short circuit condition is as follows:

F07ACS01<SP>(DEV): <SP> OUTPUT CH01&02&03 VOLT FAULT <CR> <LF>

A setup string can always be followed by another string with the STA OP-code. In the event of a syntax, range or system error, an error message will be returned to the bus controller when the power source is addressed to talk. The value of the last parameter in a setup string is the one displayed on the front panel of the power source.

### 3.8.7 DISCRETE FAULT INTERRUPT

A discrete fault condition is one that would pose a hazard to equipment or personnel. A Discrete Fault Interrupt (DFI) is supplied with the MT power source option. The DFI relay contacts are connected to the BNC connector, J3, on the power source rear panel. Under normal operating conditions, the DFI relay contacts are open; when a fault is detected, the contacts close. The user may connect any type of indicator or alarm circuit to the DFI connector provided the applied signal is limited to 0.1 amps and 26 volts.

The conditions which will cause the discrete fault interrupt are listed in Table 3-18.

**Table 3-18 DISCRETE FAULT INTERRUPT CONDITIONS**

FAULT	CONDITION
OVERLOAD OUTPUT	The full rated power capability is exceed on any phase where programmed output voltage is not maintained.
PROGRAMMABLE CURRENT	The load draws more current than the programmed current limit point on any phase.
OVERTEMPERATURE	Excess heatsink temperature in power supply or output amplifier due to high ambient temperature or internal component failure.
CONTROLLER FAILURE	The AC Power Controller has a CPU failure which is monitored by a watch dog timer.
POWER OFF	Power remains off - input breaker off.

### 3.8.8 PROGRAM EXAMPLES

Table 3-19 lists some typical CIIL strings. Each one illustrates the versatility in programming which is a feature of the power source. The strings listed transmit the information with the fewest possible characters. Decimal points need not be included when followed by zeros. Spaces may not be included anywhere in the string.

**Table 3-19 SAMPLE PROGRAMMING STRINGS**

PROGRAM	STRING
All three phase to 115 volts and current limit to 2 amperes and enable external sync	FNC ACS :CH00 SET CURL2 SET FREQ400 SET VOLT 115 SET SYNI <CR><LF>
Phase B to 100 volts and current limit to 2 amps	FNC ACS :CH02 SET CURL.2E1 SET FREQ4E2 SET VOLT100 <CR><LF>
To power-up state open relay	RST ACS :CH00 <CR><LF>
Phase B to 90 degrees	FNC ACS :CH02 SET PANG90 <CR><LF>
Freq. to 65.23 Hz	FNC ACS :CH00 SET FREQ65.23 <CR><LF>
All three phases to 2.5 amps average current limit	FNC ACS :CH00 SET CURL2.5 <CR><LF>
Phase C current limit to 2 amps average	FNC ACS :CH03 SET CURL2 <CR><LF>
Confidence test	CNF <CRL><LF>
For status msg	STA <CR><LF>
Output relay closed	CLS :CH00 <CR><LF>
To measure output voltage only of Phase A	FNC ACS VOLT :CH01 <CR><LF>
Output relay opened	OPN :CH00 <CR><LF>
To measure Freq.	FNC ACS FREQ :CH00 <CR><LF> FTH FREQ <CR><LF>
To measure output voltage of all phases	FNC ACS VOLT <CR><LF>
Query time of measurement of voltage	FNC ACS VOLT <CRI><LF> INX VOLT <CR><LF>

## SECTION 4 CALIBRATION PROCEDURE

### 4.1 GENERAL

The calibration is divided into two categories; a periodic and a nonperiodic calibration. The periodic calibration should be performed at a 1 year interval. The nonperiodic calibration should only be performed if the periodic calibration cannot be performed or if an adjustable subassembly is replaced.

The following is a listing of paragraphs that may be performed to fix an indicated problem. Any AC Power System with a 1-phase output or that has more than one chassis will have paralleled amplifiers.

PARAGRAPH	TITLE	PAGE
4.3.1	OUTPUT VOLTAGE CALIBRATION ----- This is a periodic calibration of the output voltage.	88
4.3.2	VOLTAGE MEASUREMENT CALIBRATION ----- This is a periodic calibration of the voltage measurement function.	88
4.3.3	CURRENT MEASUREMENT CALIBRATION----- This is a periodic calibration of the current measurement function.	91
4.3.4	POWER MEASUREMENT CALIBRATION ----- This is a calibration of the power measurement function.	91
4.3.5	REMOTE MEASUREMENT CALIBRATION -----	92
4.4.1	OUTPUT FREQUENCY CALIBRATION ----- This is a nonperiodic calibration of the output frequency.	96
4.4.2	AMPLIFIER GAIN BALANCE ADJUSTMENT ----- These are nonperiodic adjustments of the output amplifier assembly 4009-423. The adjustments may have to be performed for the following reasons:  1. An output amplifier has been repaired. 2. For all power systems except 2750L-3P, 4500L-3P and 6000L-3P unable to obtain rated output current. 3. There is an output current from an amplifier used in any power system, except 2750L-3P, 4500L-3P and 6000L-3P when there is no load on the system output.	96
4.4.3	GAIN BALANCE FOR PARALLEL AMPLIFIERS ----- These are nonperiodic adjustments. The adjustments are required if it is impossible to perform the current or power measurement calibration (Ref. Paragraph 4.3.3 and/or 4.3.4 page 91).	96
4.4.4	CURRENT TRANSFORMER ADJUSTMENT----- This is a nonperiodic adjustment. The adjustment is required if the rated output current is not available from an AC Power System.	97
4.4.5	LOAD BALANCE ADJUSTMENT ----- This is a nonperiodic calibration. The calibration is required if the available output current is not equal to the programmed current limit value. The available output current may exceed the programmed value by 10%.	98

4.4.6	OUTPUT PHASE ANGLE CALIBRATION -----	101
	This is a nonperiodic calibration. The calibration is required if there is an error in the phase B or C output phase angle relative to phase A.	
4.4.7	OUTPUT PHASE ANGLE CALIBRATION -----	103

## 4.2 TEST EQUIPMENT

The following equipment or their equivalents are required to completely test the AC Power System.


### TEST EQUIPMENT FOR PERIODIC CALIBRATION

1. Digital Voltmeter: Fluke Model 8840A (modified per CIC005) or equivalent.
2. 100 Amp Current Transformer: Pearson Model 3468
3. Resistive Loads: See LOAD RES value from Table 4-1

### ADDITIONAL TEST EQUIPMENT

1. Two additional Digital Voltmeters
2. Frequency Counter: Philips PM 6671
3. Phase Angle Meter: Krohn-Hite 6500A

**Figure 4-1 INTERNAL ADJUSTMENTS AND JUMPER LOCATIONS**  
Internal Adjustments and Jumper Locations

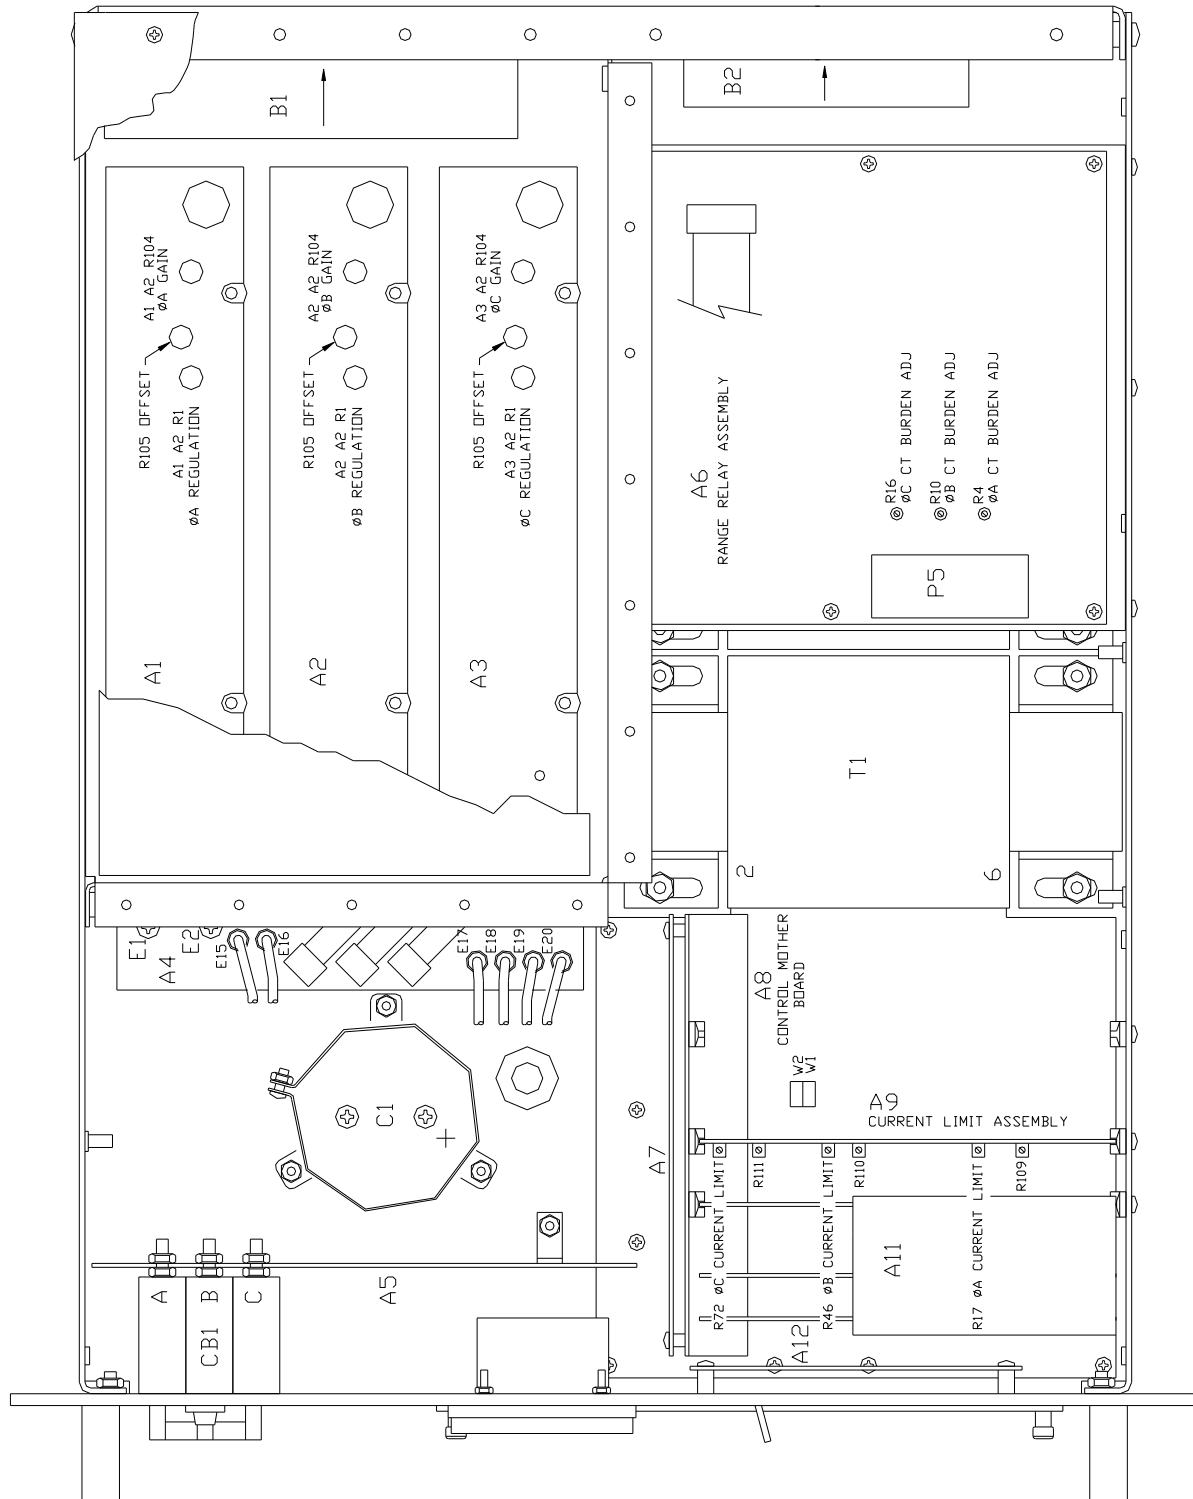

# CAUTION

Voltages up to 480 VAC are available in certain sections of this power source. This equipment generates potentially lethal voltages.

# DEATH

on contact may result if personnel fail to observe safety precautions. DO NOT touch electronic circuits when power is applied.

	MODEL	4500L/1-3	9000L/2-3	4500L/1-1 9000L/2-2 <u>13500L/3-3</u>	9000L/2-1  <u>27000L/6-3</u>	13500L/3-1	27000L/6-1
	VA Per Phase	1667	3333	5000	10000	15000	30000
135/270 RANGE "	LOAD RES	10.9	5.46	3.64	1.82	1.21	0.607
	CURRENT LIMIT:						
	PROGRAM VALUE	10	20	30	60	90	180
	SET VALUE	10.7	21.5	32	64.5	96.8	194
156/312 RANGE "	LOAD RES	14.59	7.3	4.86	2.43	1.62	0.811
	CURRENT LIMIT:						
	PROGRAM VALUE	7.4	15	22.4	44.9	67.3	154
	SET VALUE	8	16.1	24	48.3	72.4	165
67.5/135 RANGE "	LOAD RES	2.73	1.36	0.91	0.455		
	CURRENT LIMIT:						
	PROGRAM VALUE	20	41	61	121		
	SET VALUE	21.4	43.8	65.2	129.4		
200/400 RANGE	LOAD RES	24	12	8	4	2.66	1.33
	CURRENT LIMIT:						
	PROGRAM VALUE	6.6	13.3	20	40	60	120
	SET VALUE	7	14	21.4	42.8	64	129

**Table 4-1          SETUP LOAD VALUES**



	MODEL	2750L/1-3	2750L/1-1	6000L-3	12000L-2-3	6000L-1 18000L/3-3	18000L/3-1
	VA PER PHASE	1000	3000	2000	4000	6000	18000
135/270 RANGE "	LOAD RES.	18.2	6.07	9.11	4.55	3.03	1.01
	CURRENT LIMIT:						
	PROGRAM VALUE	6	18	12	24	36	100
	SET VALUE	6.4	19.3	12.8	25.6	38.5	107
156/312 RANGE "	LOAD RES.	24.3	8.1	12.13	6.05	4.05	1.35
	CURRENT LIMIT:						
	PROGRAM VALUE	4.5	13.5	10	20	30	90
	SET VALUE	4.8	14.4	10.7	21.5	32	96.8
67.5/ 135 RANGE "	LOAD RES.	4.55	1.51				
	CURRENT LIMIT:						
	PROGRAM VALUE	12	36				
	SET VALUE	12.8	38				
200/400 RANGE "	LOAD RES.	40	13.3	20	10	6.6	2.2
	CURRENT LIMIT:						
	PROGRAM VALUE	4	12	8	16	24	72
	SET VALUE	4.3	13	8.7	17.3	26	78

**Table 4-1                  SETUP LOAD VALUES (continued)**

### 4.3 PERIODIC CALIBRATION

The following periodic calibration adjustments should be performed on a 1 year interval.

#### 4.3.1 VOLTAGE CALIBRATION

Apply power top the AC Power System and allow at least fifteen minutes for temperature stabilization. Program the output to 60 Hz, 135 volts and perform the following steps:

1. Connect the AC voltmeter to the phase to be calibrated.
2. Depress the MNU key several times until the first menu screen is displayed as illustrated below.

SNC = 01	*CLK = 02
*WVF = 03	RNG = 04

\*May not be displayed. Depends on configuration.
3. Enter the key sequence: 959 ENT
4. Depress the MNU key several times until the configuration menu screen is displayed as illustrated below:

CFG = 16	ALM = 17
FLM = 18	CLM = 19
5. Select the CAL screen with the key sequence: 12 ENT
6. Depress the A, B or C key for the output phase to be calibrated. Verify that the other phases are in the MON mode. The A, B, or C keys will switch the respective phase between the MON and PRG mode. If the output voltage is greater than the programmed output, depress and hold the ↓ key until the correct output voltage has been reached. The ↑ key is used if the output is less than the programmed value.
7. Repeat step 6 for other outputs to be calibrated.

#### 4.3.2 VOLTAGE MEASUREMENT CALIBRATION

For calibration of voltage measurement first perform the output voltage calibration and then perform the followings steps:

1. Remove the load from the AC Power System and program 60 Hz and 135.0 volts.
2. Depress the MNU key several times until the Menu screen is displayed as illustrated below:

SNC = 01	*CLK = 02
*WVF = 03	RNG = 04

\*May not be displayed. Depends on configuration.
3. Enter the key sequence: 959 ENT.

4. Depress the MNU key several times until the configuration menu screen is displayed.

CFG = 16	ALM = 17
FLM = 18	CLM = 19

5. Enter the key sequence 13 ENT to access the CAL VLT screen.
6. If all phases of the voltage measurement are to be calibrated to 135.0, enter the key sequence:


135 PRG ENT

After about 5 seconds, the volt measurement function will be calibrated for all three phases.

If only one phase is to be calibrated to 135.0 volts (ex., phase A) enter the key sequence:

135 A PRG ENT

Figure 4-2 EQUIPMENT HOOKUP FOR PERIODIC CALIBRATION

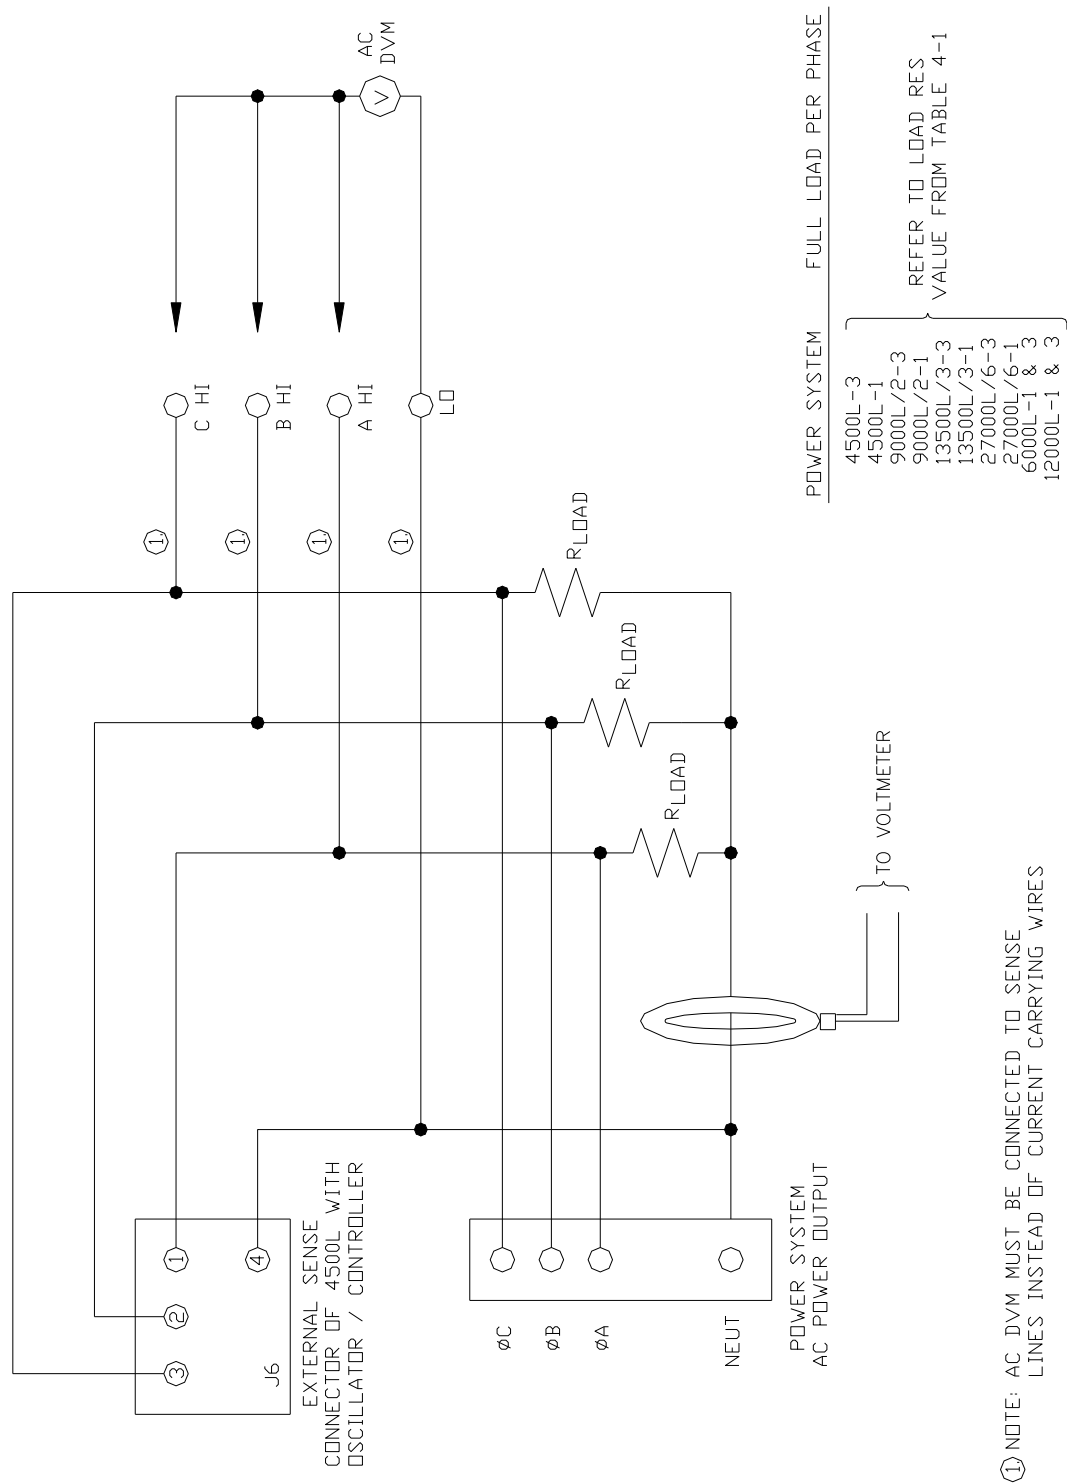

### 4.3.3 CURRENT MEASUREMENT CALIBRATION

For calibration of current measurement perform the following steps:

1. Program 60 Hz, 135.0 volts and the maximum Current Limit value.
2. If any calibration screen is already displayed, the Current Calibration screen (CAL CUR) may be displayed by repeatedly depressing either the MON or PRG keys and then skip to step 6. If a calibration screen is not displayed, press the MNU key several times until the screen shown below is displayed:

SNC = 01	*CLK = 02
*WVF = 03	RNG = 04

3. Enter the key sequence: 959 ENT
4. Depress the MNU key several times until the configuration menu screen is displayed, as shown below:

CFG = 16	ALM = 17
FLM = 18	CLM = 19

5. Enter the key sequence: 14 ENT to access the CAL CUR screen.  
  
Determine the full load resistive value from the LOAD RES value from Table 4-1.
6. Apply the load to the phase A output only. Measure the phase A output current with the AC Digital Voltmeter and Current Transformer.
7. On the keypad enter the key sequence:

(Measured phase A current. Example 11.05) A PRG ENT

After about 5 seconds the current measurement function for phase A will be calibrated.

8. Repeat step 6 for phase B.
9. Repeat step 7 except enter the key sequence:

(Measured phase B current) B PRG ENT

10. Repeat step 6 for phase C.
11. Repeat step 7 except enter the key sequence:

(Measured phase C current) C PRG ENT

### 4.3.4 POWER MEASUREMENT CALIBRATION

For calibration of power measurement perform the following steps:

1. Program 60 Hz and 135.0 volts and the maximum Current Limit value.
2. If any calibration screen is already displayed, the Power Calibration screen (CAL PWR) may be displayed by depressing either the MON or PRG keys and then skip to step 6. If a calibration screen is not displayed, depress the MNU key several times until the screen shown below is displayed:

SNC = 01                      \*CLK = 02  
\*WVF = 03                    RNG = 04

3. Enter the key sequence: 959 ENT
4. Depress the MNU key several times until the configuration menu screen is displayed as shown below:  
  
CFG = 16            ALM = 17  
FLM = 18            CLM = 19
5. Enter the key sequence 15 ENT to access the CAL PWR screen.
6. Apply the LOAD RES value from Table 4-1 to the phase A output only. Measure the phase A output current with the AC Digital Voltmeter and Current Transformer. Measure the phase A voltage from the phase A sense to neutral sense. Multiply the voltage and current values to determine the power value. (Note: The load must be resistive for the correct power value.)
7. On the keypad enter the key sequence:  
  
(Measured phase A power) A PRG ENT
8. Repeat step 6 for phase B.
9. Repeat step 7 except enter the key sequence:  
  
(Measured phase B phase) B PRG ENT
10. Repeat step 6 for phase C.
11. Repeat step 7 except enter the key sequence:  
  
(Measured phase C power) C PRG ENT

#### 4.3.5 REMOTE MEASUREMENT CALIBRATION

The measurement function of the AC Power System may be remotely calibrated. The equipment hookup is the same as before except an IEEE-488 Controller must be used to program the AC Power System. The values for the VLT, CUR and PWR strings must be derived from the external AC Digital Voltmeters and Current Transformer.

To calibrate the measured voltage, first program the AC Power System to 135.0 volts and 60 Hz. Send the following calibration string:

CAL VLT (1)      (Desired voltage value for phase (1))

To calibrate the measured current send the following string:

CAL CUR (1)      (Desired current value for phase (1))

To calibrate the measured power value send the following string:

CAL PWR (1) (Desired power value for phase (1))

NOTE: (1) May be blank or include an A, B or C extension.


#### **4.3.6 REMOTE OUTPUT VOLTAGE CALIBRATION**

The ASCII # symbol can be used with a remote calibration to greatly reduce the calibration time. The ASCII # is used in place of a calibration coefficient to begin the CAL ramp to start at the existing CAL coefficient and ramp up or down for a VAL argument of 255 or 0 respectively.


The following string will cause the CAL coefficient to ramp down with a delay of .2 seconds per step:

CAL # DLY.2 VAL0

**Figure 4-3 FLOW DIAGRAM A REMOTE CALIBRATION**

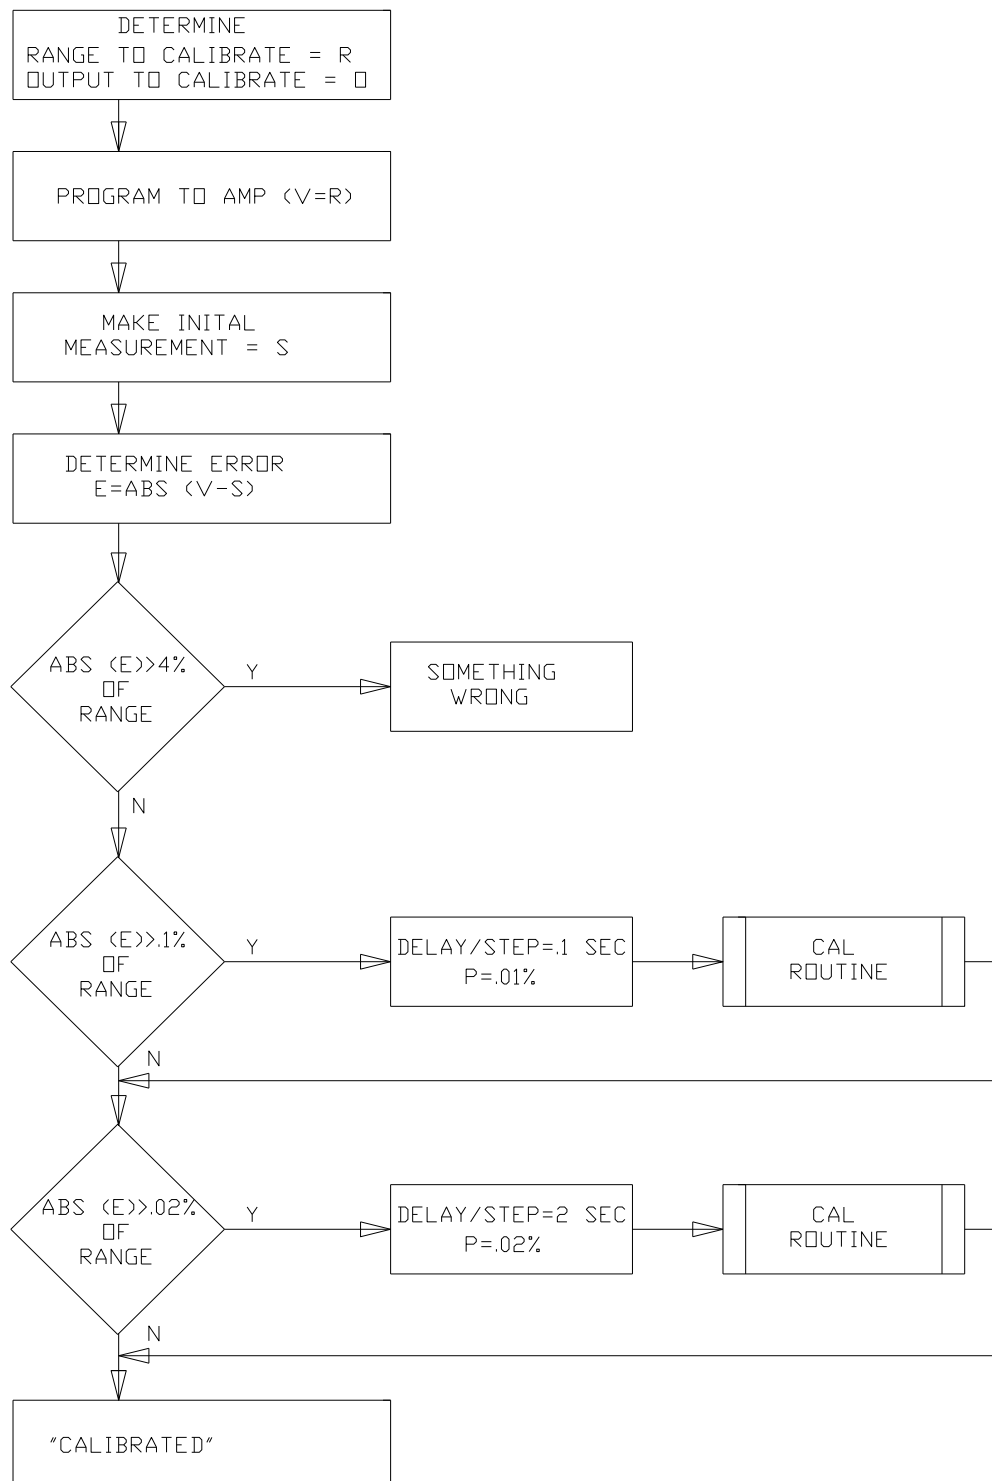



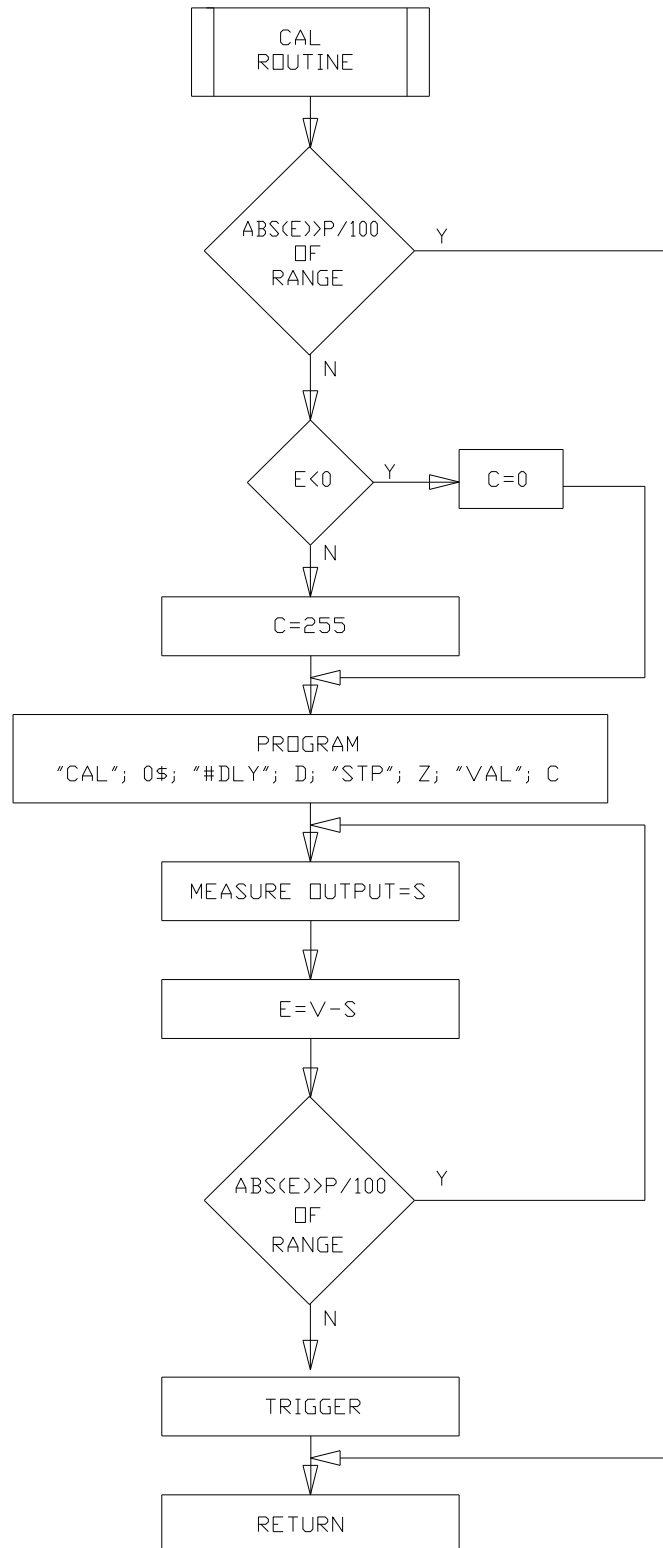

**Figure 4-3 FLOW CHART (continued)**

## 4.4 NONPERIODIC CALIBRATION

If adjustments are required for these nonperiodic calibrations, the top cover of the AC Power System will have to be removed. A nonperiodic calibration will only be required if a related assembly is repaired or if the performance is out of specification.

### 4.4.1 OUTPUT FREQUENCY CALIBRATION

Connect the Frequency Counter to the phase A output. Program the output to 135.0 volts and 400.0 Hz. Engage the low-pass filter on the Frequency Counter to obtain the output frequency.

If the Frequency Counter does not indicate  $400.000 \pm 0.004$  Hz, adjust C43 for the correct frequency. Refer to Figure 4-1.

### 4.4.2 GAIN BALANCE ADJUSTMENT

#### CAUTION

The Gain Balance Adjustment should not be made unless an amplifier assembly has been repaired. Each amplifier has been adjusted at the factory for an exact full scale output voltage (135, 67.5, 156 or 200 volts for standard, LV, HV or EHV voltage ranges) with a 5.000 VRMS amplifier input voltage. The amplifier input voltage may be checked at TP4, TP5 and TP6 on the Current Limit Board for Phase A, B and C amplifiers respectively. TP1 is the reference test point.

The following adjustment is for all power system models except the 2750L-3P, 4500L-3P and 6000L-3P. The 2750L-3P, 4500L-3P and 6000L-3P do not require a gain balance adjustment. Before performing the adjustment, the top cover of each power source must be removed.

### 4.4.3 GAIN BALANCE FOR PARALLEL AMPLIFIERS

If applicable, program the output to the 1-phase mode. The following table shows the test point that will be used to measure the circulating current between the amplifiers under a no-load condition. Jumper W2 on the Current Limit Board must be installed for 4500L-1, 6000L-1, 9000L-1, 12000L-1, 13500L-1, 18000L-1 and 18000L-3.

AMPLIFIER	CURRENT LIMIT BOARD TEST POINT (TP1 is ground)
A	TP10
B	TP2
C	TP3

Program 100 VAC. Measure the current from the B and C amplifier by measuring the voltage at TP2 and TP3 respectively. Adjust the amplifier GAIN adjustment (R104) on the respective amplifier for the lowest voltage (current) at the respective test point. Use test point TP2 for making the gain adjustment (R104) for amplifier B. Use TP3 for amplifier C.

For all slave power sources adjust the amplifier GAIN adjustments for the A, B and C amplifier. Use TP10 for amplifier A.

1. Check all of the amplifiers for the system being tested.

For the output from each amplifier of a given phase, the AC DVM should display less than 0.25 VAC while the DVM is on the 200 VAC range.

2. If any measurement from the GAIN BALANCE check is out of specification, the gain of the amplifier with the AC DVM input LO test lead connected must first be checked.

To check the gain of the amplifier, connect the AC DVM between the Output Neutral and Output High of the corresponding output. Connect an additional AC DVM HI input test point of the Current Limit Board indicated below. Connect the LO input to TP1.

OUTPUT	TEST POINT	ADJUSTMENT
A	TP4	R105 PHASE A AMP
B	TP5	R105 PHASE B AMP
C	TP6	R105 PHASE C AMP

3. Program the output to 135.0 or the maximum voltage allowed on the corresponding Voltage Range.
4. With exactly 135.0 volts, or the maximum voltage allowed on the range, the Current Limit test point must be  $5.000 \pm 1\text{mV}$ .
5. Adjust R105 so that the voltage at the test point is 5.000 volts or  $= V_{\text{out}}(5/V_{\text{max}})$  if  $V_{\text{max}}$  is not 135 volts.
6. Repeat step 1) and adjust R105 of the amplifier for the respective output so that the output balance voltage is at a minimum.
7. Remove the input power and reinstall jumper W2 on the Current Limit Board in all power sources.
8. Reconnect the outputs as shown in Figures 2-2 and 2-3.

#### 4.4.4 CURRENT TRANSFORMER ADJUSTMENT

The following adjustments must be made with jumper W2, on the Current Limit Assembly, removed. If the output of any power source is connected to the output of any other power source (ex. 9000L/2-1, 9000L/2-3, 13500L/3-1, 27000L/6-3, 27000L/6-1), remove the connection.

The External Sense input to the Master power source must remain connected.

For the following adjustments a load resistor must be connected to each output of every power source in the system. The load resistor must be capable of loading an amplifier to approximately 9 amps (4 amps for the 2750L). Only one amplifier at a time needs to be loaded.

1. Monitor the phase A output current with the Current Transformer and AC DVM. Measure the phase A voltage between TP10 and TP1 on the Current Limit Assembly.
2. Turn on the AC input to the AC Power System. Program 60 Hz and an output voltage that generates an output circuit of approximately 9 amps (4 amps for the 2750L).
3. Apply the resistive load to the output. Adjust R4 on the Range Relay assembly for the correct voltage at TP10 for the load current: (1 volt = 10 Amps). Remove the load before loading the next output to be calibrated.
3. Repeat steps 1 through 3 for A, B and C outputs of all power sources. Refer to the following table for the adjustments and test points.

#### CURRENT TRANSFORMER ADJUSTMENTS

OUTPUT	ADJUSTMENT	TEST POINTS (TP1 is Gnd.)
--------	------------	---------------------------

	(Range Relay Assy)	(Current Limit Assy)
A	R4	TP10
B	R10	TP2
C	R16	TP3

5. Reinstall jumper W2 on all Current Limit Assemblies if it has been removed. Reconnect all outputs as shown in Figures 2-2 and 2-3.

#### 4.4.5 LOAD BALANCE ADJUSTMENT

##### CAUTION

The Load Balance Adjustment should not be made unless an amplifier assembly has been repaired. Each amplifier has been adjusted at the factory for an output regulation with a 1500 watt load. 6000L amplifiers are adjusted for -0.37%. All other amplifiers are adjusted for -1.5%.

The following adjustment procedure is for all power systems except the 2750L-3P, 4500L-3P and 6000L-3P. The power system must be connected as shown in Figure 2-2. A load resistor, see LOAD RES. in Table 4-1, must be connected to the phase A,B or C output of the power system.

For the following adjustments, two external AC DVMs must be used. The DVMs must be connected to test points on the Current Limit Board, A9. The input LO for the DVM is TP1 of the respective Current Limit Board. For all test points and adjustments, refer to Table 4-2 for the respective power system.

1. Program the output to the low voltage range and the output to the low voltage range and the output voltage to 80% of range. Program the frequency to 200 Hz and the maximum current limit. Apply the LOAD RES identified in Table 4-1 for the respective power system. Check the voltages listed in Table 4-2. Check that the voltage at the respective test points are within  $\pm 0.1$  volts of the reference test point.
2. Program the output to the maximum voltage and recheck the Table 4-2 test points. If they differ by more than  $\pm 0.2$  volts from the reference, readjust the adjustments at this full load current.

Table 4-2

## AMPLIFIER LOAD BALANCE ADJUSTMENTS

SYSTEM	LOAD	SOURCE	TEST POINT	ADJUSTMENT (Current Limit Board)	ADJUST FOR: ( $\pm 0.1V$ ) IF NEEDED
2750L-1 4500L-1 6000L-1	A " "	MASTER " "	TP10 TP2 TP3	None R1 AMP B R1 AMP C	Monitor voltage for reference Same voltage as TP10 "
9000L/2-1 12000L/2-1	A " " " " "	MASTER " " SLAVE " "	TP10 TP2 TP3 TP10 TP2 TP3	None R1 AMP B R1 AMP C R1 AMP A R1 AMP B R1 AMP C	Monitor voltage for reference Same voltage as MASTER TP10 " Same voltage as MASTER TP10 " "
9000L/2-3 and 18000L/4-3	A " B " C "	MASTER SLAVES MASTER SLAVES MASTER SLAVES	TP10 TP10 TP2 TP2 TP3 TP3	None R1 AMP A None R1 AMP B None R1 AMP C	Monitor voltage for reference Same voltage as MASTER TP10 Monitor voltage for reference Same voltage as MASTER TP2 Monitor voltage for reference Same voltage as MASTER TP3
13500L/3-1 18000L/3-1	A " " " " " " "	MASTER " " SLAVE #1 " " SLAVE #2 " "	TP10 TP2 TP3 TP10 TP2 TP3 TP10 TP2 TP3	None R1 AMP B R1 AMP C R1 AMP A R1 AMP B R1 AMP C R1 AMP A R1 AMP B R1 AMP C	Monitor voltage for reference Same voltage as MASTER TP10 " Same voltage as MASTER TP10 " Same voltage as MASTER TP10 " Same voltage as MASTER TP10 "
13500L/3-3 9000L/2-2 18000L/3-3	A " "	MASTER " "	TP10 TP2 TP3	None R1 AMP B R1 AMP C	Monitor voltage for reference Same as MASTER TP10 "
Not for 9000L/2-2}	B " "	SLAVE #1B " "	TP10 TP2 TP3	None R1 AMP B R1 AMP C	Monitor voltage for reference Same as SLAVE 1B TP10 "
	C " "	SLAVE #1C " "	TP10 TP2 TP3	None R1 AMP B R1 AMP C	Monitor voltage for reference Same as SLAVE 1C TP10 "
27000L/6-1	A "	MASTER "	TP10 TP2	None R1 AMP B	Monitor voltage for reference Same voltage as MASTER TP10

SYSTEM	LOAD	SOURCE	TEST POINT	ADJUSTMENT (Current Limit Board)	ADJUST FOR: ( $\pm 0.1V$ ) IF NEEDED	
	"	"	TP3	R1 AMP C	"	"
	"	SLAVE #1	TP10	R1 AMP A	"	"
	"	"	TP2	R1 AMP B	"	"
	"	"	TP3	R1 AMP C	"	"
	"	SLAVE #2	TP10	R1 AMP A	"	"
	"	"	TP2	R1 AMP B	"	"
	"	"	TP3	R1 AMP C	"	"
	"	SLAVE #3	TP10	R1 AMP A	"	"
	"	"	TP2	R1 AMP B	"	"
	"	"	TP3	R1 AMP C	"	"
	"	SLAVE #4	TP10	R1 AMP A	"	"
	"	"	TP2	R1 AMP B	"	"
	"	"	TP3	R1 AMP C	"	"
	"	SLAVE #5	TP10	R1 AMP A	"	"
	"	"	TP2	R1 AMP B	"	"
	"	"	TP3	R1 AMP C	"	"
27000L/6-3	A	MASTER	TP10	None	Monitor voltage for reference Same voltage as MASTER TP10	
	"	"	TP2	R1 AMP B		
	"	"	TP3	R1 AMP C		
	"	SLAVE #1A	TP10	R1 AMP A	"	"
	"	"	TP2	R1 AMP B	"	"
	"	"	TP3	R1 AMP C	"	"
	B	SLAVE #1B	TP10	None	Monitor voltage for reference Same voltage as SLAVE #1B TP10	
	"	"	TP2	R1 AMP B		
	"	"	TP3	R1 AMP C		
	"	SLAVE #2B	TP10	R1 AMP A	"	"
	"	"	TP2	R1 AMP B	"	"
	"	"	TP3	R1 AMP C	"	"
	C	SLAVE #1C	TP10	None	Monitor voltage for reference Same voltage as SLAVE #1C TP10	
	"	"	TP2	R1 AMP B		
	"	"	TP3	R1 AMP C		
	"	SLAVE #2C	TP10	R1 AMP A	"	"
	"	"	TP2	R1 AMP B	"	"
	"	"	TP3	R1 AMP C	"	"

#### 4.4.6 CURRENT LIMIT CALIBRATION

1. Select the Current Limit (CRL) screen (Screen 8) and program the Current Limit PROGRAM VALUE from Table 4-1.
2. Monitor the power system phase A output current with the external current transformer and AC DVM. Connect an oscilloscope to the output.
3. Program the low voltage range and the voltage to 80% of range. Program the frequency to 60 Hz.
4. Apply the LOAD RES value from Table 4-1 to the power system phase A output only.
5. Increase the output amplitude slowly until the external AC current transformer indicates SET VALUE from Table 4-1. Slowly turn A9-R17 on the Current Limit Assembly in a counterclockwise direction until the output OVERLOAD indicator starts to illuminate.
6. Slowly readjust R17 in a clockwise direction just to a point that the OVERLOAD extinguishes. Repeat this step for all ADJUSTMENTS listed in Table 4-3 for phase A.
7. Remove the load for phase A and repeat steps 2) through 6) for phase B and C. Adjust the controls specified in Table 4-3 for phase B and C.
8. Program the CRL value to 5 amps and full voltage. Verify the output faults when any phase has the LOAD RES load value.

Table 4-3

## CURRENT LIMIT ADJUSTMENT

SYSTEM	PHASE LOADED	ADJUSTMENT	POWER SOURCE
4500L-3,2750L-3, 6000L-3	A	R17	MASTER
	B	R46	"
	C	R72	"
2750L-1,4500L-1,6000L-1 9000L/2-1,12000L/2-1,13500L/3-1, 18000L/3-1, 27000L/6-1	A	R17	MASTER & SLAVES
	A	R46	" "
	A	R72	" "
9000L/2-3, 12000L/2-3	A	R17	MASTER & SLAVES
	B	R46	" "
	C	R72	" "
13500L/3-3, 27000L/6-3 9000L/2-2, 18000L/3-3	A	R17	MASTER
	A	R46	MASTER
	A	R72	MASTER
	B	R17	ALL SLAVES FOR PHASE B
	B	R46	" "
	B	R72	" "
	C	R17	ALL SLAVES FOR PHASE C
	C	R46	" "
	C	R72	" "



#### 4.4.7 OUTPUT PHASE ANGLE CALIBRATION

The phase calibration values for phases B and C are entered on the Phase Offset (POF) screen.

To calibrate the output phase angle, connect either a Phase Meter or an oscilloscope between the phase to be calibrated and the phase A output. Program the phase B or C value to be calibrated from the Phase screen (PHZ). If an oscilloscope is used the calibration is best performed with a programmed angle of 0 degrees.

To calibrate the output phase angle, program 120.0 volts and 60 Hz.

To access the POF screen perform the following key sequences:

1. Access the Phase screen (PHZ).
2. Depress the MNU key several times until the following screen is displayed:  
SNC = 01                      CLK = 02  
WFV = 03                      RNG = 04
3. Enter the key sequence: 959 ENT
4. Depress the MNU key several times until the Configuration menu screen is displayed:  
CFG = 16                      ALM = 17  
FLM = 18                      CLM = 19
5. To display the POF screen enter the key sequence: 20 ENT

If an oscilloscope is used and the respective phase is programmed to 0 degrees and 200 Hz, a 3 degree error is represented by 41 microseconds of the 0 volt point of the two signals.

The POF values may be either a positive or negative value. A negative value is entered by depressing the period key (.) two times after the numerical value is entered before the PRG key is depressed.

(This page left intentionally blank)

## **SECTION 5            THEORY OF OPERATION**

### **5.1            GENERAL**

An explanation of the circuits within the AC Power System is given in this section. Refer to Figure 5-1 for a block diagram of the AC Power System.

### **5.2            OVERALL DESCRIPTION**

Input power from the rear panel is routed through the circuit breaker to the Input Power Supply (A5). DC voltages from the Input Power Supply are routed to the Power Mother Board (A4), the Control Mother Board (A8) and the Auxiliary Power Supply (A7).

The Programmable Oscillator assembly (A11) generates the oscillator waveforms and power source control and measurement signals. The oscillator assembly is connected to the rest of the power source through the Control Mother Board, A10.

The three amplifier modules are A1, A2 and A3. They take their DC supply voltages and input signal from the Power Mother Board, A4. They produce the high power outputs for the primary of the output transformers, T1, T2 and T3. The outputs are routed through the Power Mother Board to the output transformers.

The Range Relay Board is identified as A6. This board assembly configures the secondaries of the output transformers for the correct output voltage range. The outputs from the AC Power System are taken from the Range Relay Board. This board also has relays that switches the output to the 1-phase mode and opens the outputs. There is also a circuit on the board that senses for incorrect sense line connections.

The board assemblies are described in more detail in the following paragraphs.


### **5.3            INPUT POWER SUPPLY**

This assembly is identified as A5. It generates the high power +300 VDC supply. This supply voltage is connected to the filter capacitor, C1, and to the Power Mother Board. C1 is mounted on the bottom cover of the AC Power System.

The Input Power Supply also has circuits that generate the DC voltages identified as  $\pm 18V$ ,  $\pm 15VSW$ , +8VSW and +8V.

The  $\pm 18V$  supplies are used for the Oscillator Module and the Current Limit Board. The +8V supply is used for the Oscillator Module. The  $\pm 15VSW$  supplies are used for the three Amplifier Modules.

**Figure 5-1 AC POWER SYSTEM BLOCK DIAGRAM**

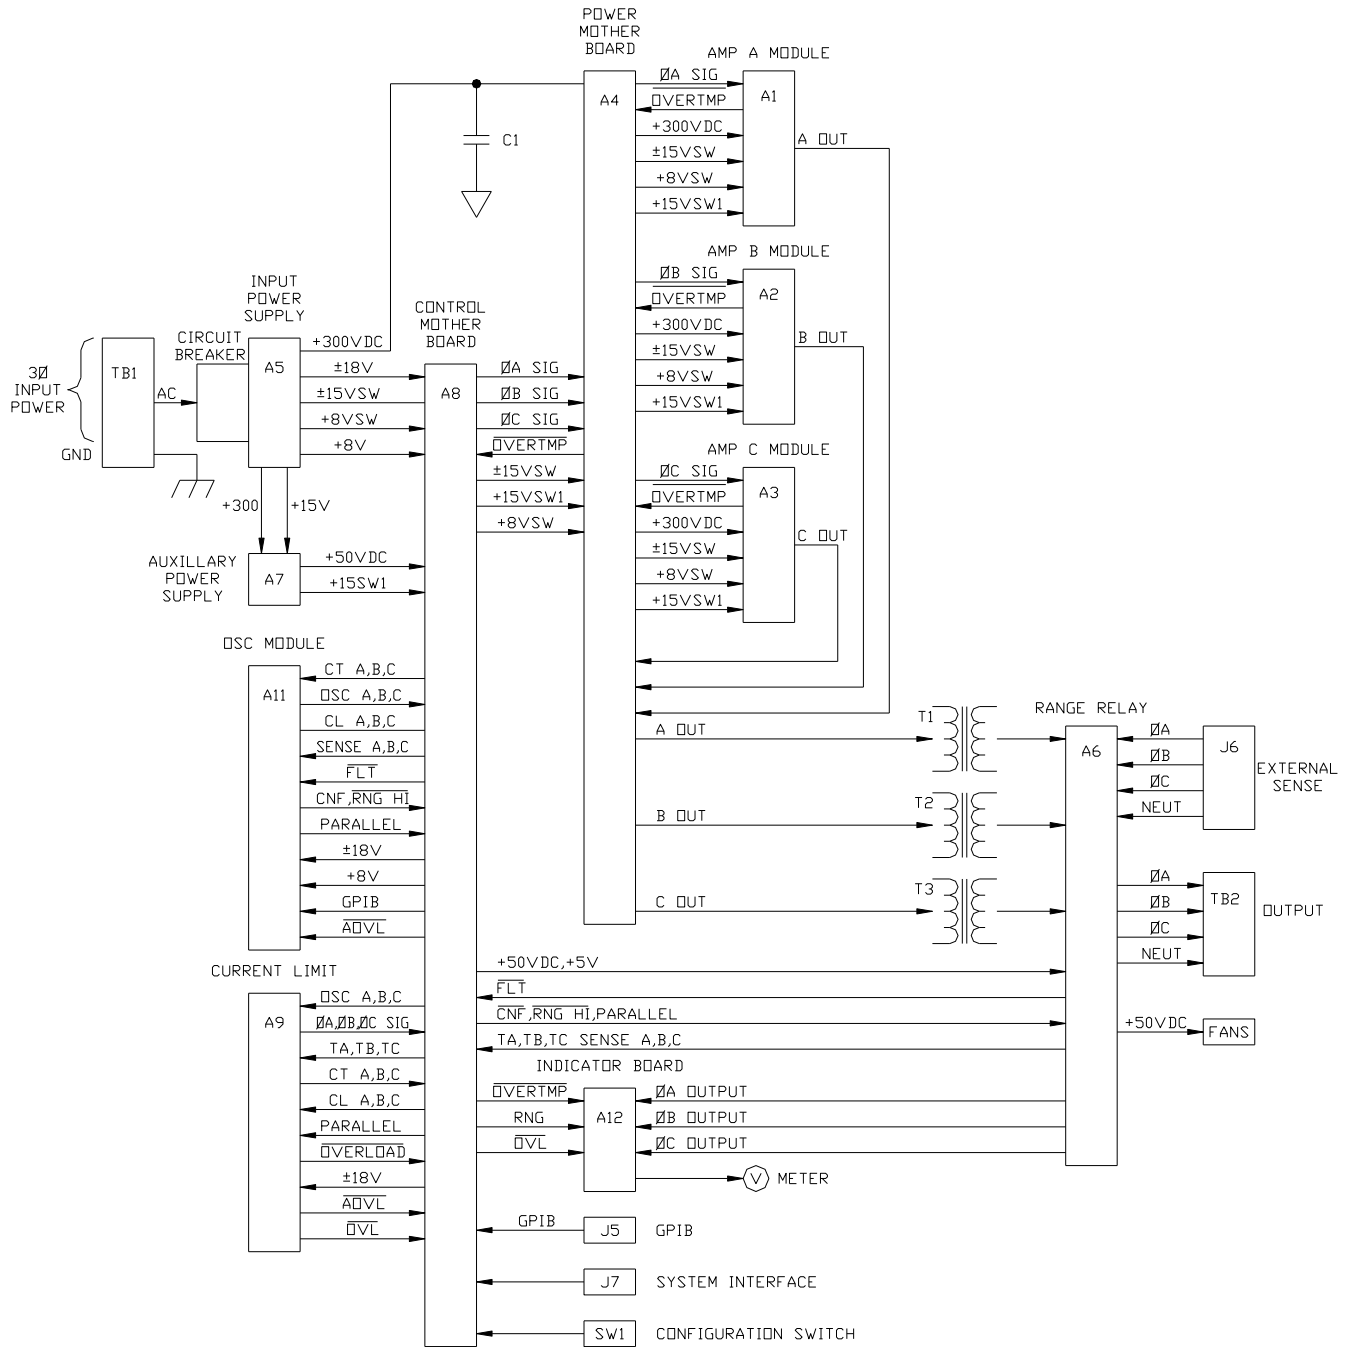

## **5.4 AUXILIARY POWER SUPPLY**

The Auxiliary Power Supply receives the +300 supply voltage from the Input Power Supply. The +300 supply voltage is then changed to the +50 VDC supply voltage for operating the fans and relays. In addition to the +50 VDC supply, +15VSW1 is also generated. This supply voltage is used for the gate drive signal in the Amplifier Modules.

## **5.5 CURRENT LIMIT BOARD**

The Current Limit Board receives the oscillator signals identified as OSC A, B and C from the Oscillator Module. Analog switches on this board direct the oscillator signals to the respective amplifier module. The analog switches switch the OSC A signal to the three amplifier inputs during 1-phase operation. For 3-phase operation, OSC A, B and C are switched to the amplifiers A, B and C inputs respectively. Gain adjustments are located on this board to match the gains of the 3 Amplifier Modules.

The current limit circuits are also located on the Current Limit Board. These circuits receive a DC signal from the Oscillator Module, CLA, B and C, that is proportional to the current limit value. This DC signal is compared to the output current. The output current signal is identified as TA, TB and TC. This signal is routed to the Current Limit Board from current transformers on the Range Relay Board. If the output current exceeds the programmed value, an attenuator will limit the output voltage to a value that will cause the AC Power System to operate at a constant current. If the output current limits the output voltage to 10% of the programmed voltage amplitude value, the output will default and an AMP FAULT error message will be displayed. The error message will also be reported through the IEEE-488 (GPIB) interface.

The Current Limit Board has analog switches and summing amplifiers that are used for current measurements. The outputs from the summing amplifiers, CT A, B and C, are routed to the Oscillator Module for measurement. In the 1-phase mode the current from all three output current transformers are summed together for measurement. This signal is identified as CT A.

## **5.6 INDICATOR BOARD**

The Indicator Board has the reference designator, A12. This board has LED indicators for the HI RANGE, OVERTEMP and OVERLOAD conditions.

A front panel selector switch is mounted on the Indicator Board. This switch is used to connect the front panel analog meter, M1, to either the phase A, B or C output.

## **5.7 RANGE RELAY BOARD**

The Range Relay Board has all of the AC Power System relays. These Relays are operated from +50 VDC. The output relay is opened by a logic low on the CNF control line. The range relay is switched to the high voltage range by a logic low on the  $\overline{\text{RNG HI}}$  control line. The output is in the 1-phase mode when the PARALLEL control line is driven to approximately +10 VDC.

There are three current transformers on the Range Relay board. These transformers generate an AC voltage that is proportional to the output current. The voltages are identified as TA, TB and TC. A 10 amp load current is represented by a 1.00 VAC signal in the 3-phase mode.

## **5.8 AMPLIFIER MODULES**

The AC Power System has three Amplifier Modules. In the 3- phase mode, one amplifier is used for each of the three outputs. In the 1-phase mode, the three outputs are paralleled at the secondaries of the output transformers.

The Amplifier Modules operate in a switch mode to obtain high efficiency. These switch mode amplifiers operate at 200 KHz.

Each Amplifier Module obtains its input signal from the Current Limit Board. These three input signals are identified as  $\phi$  A SIG,  $\phi$  B SIG and  $\phi$  C SIG. A 5.00 VRMS input signal will generate a full scale output voltage at the output of the AC Power System and 100.0 VRMS on the primary of the output transformer.


Each Amplifier Module requires +300 DC,  $\pm 15$  VSW, and the +15 VSW1 supplies. The +300 VDC supply comes from the Input Power Supply through a 15 amp fuse on the Power Mother Board.

The Amplifier Module has a thermoswitch mounted on its heatsink. If the heatsink temperature reaches 100°C, a control signal is sent to the Oscillator Module. A logic low on the OVER TMP control line will cause the error message TEMP FAULT to be generated.

## 5.9 OSCILLATOR MODULE

The Oscillator Module is identified with the reference designator, A11. The module consists of three printed circuit assemblies. These three assemblies are interconnected with a small mother board, A11A2. The oscillator Display Assembly connects to the Oscillator Module with a short ribbon cable. The Display Assembly is mounted on the front panel. The block diagram of the Oscillator Module is shown in Figure 5-2.

**Figure 5-2 OSCILLATOR MODULE BLOCK DIAGRAM**

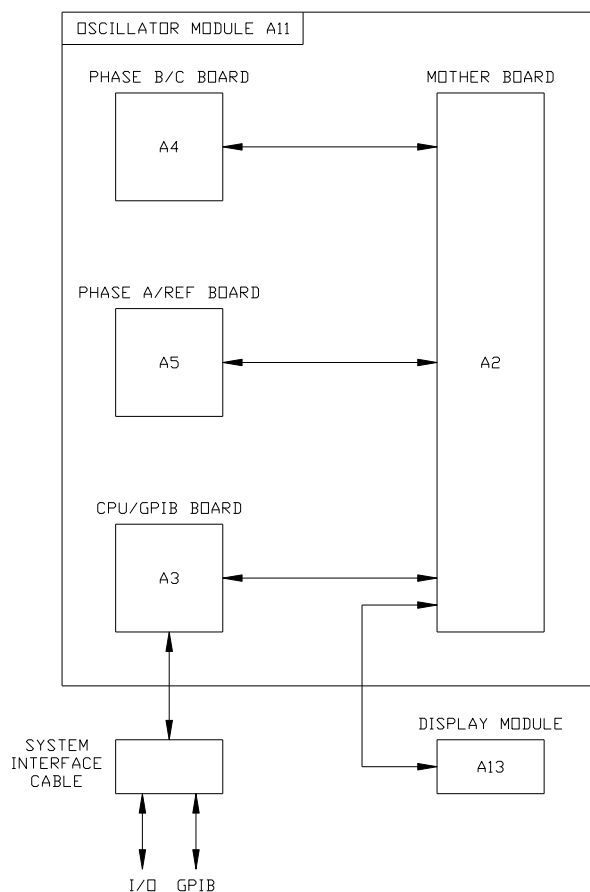

## 5.10 CPU/GPIB BOARD

The CPU/GPIB board, A11A3, provides the control and measurement functions of the module. A microprocessor circuit accepts commands from the GPIB on the front panel keyboard. It sends digital programming information to set the output parameters of the power source. Data from measurement circuits are accepted and reported to the display and GPIB. Measurement calibration coefficients are stored in a memory backed up by a battery. The battery has a 10

year life expectancy.

Measurement circuits on the CPU/GPIB board monitor voltage, current, power, frequency, and phase angle. Voltage from the rear panel sense connector is scaled, converted to a DC voltage by a true-rms-converter, and sent to the microprocessor by the analog-to-digital converter.

Current sensed by internal current transformers is scaled, converted to a DC voltage by a true-rms-converter, and sent to the microprocessor by the analog-to-digital converter.

The scaled voltage and current waveforms are applied to the inputs of a multiplier. The multiplier output is filtered to a DC level and digitized by the analog-to-digital converter.

Frequency is computed from the measured time intervals between zero crossings of the Phase A waveform. Phase is computed from the differences of measured zero crossings between the Phase A signal and the Phase B or Phase C signal.

A digital-to-analog converter on the CPU/GPIB board sets the DC voltages that are used for the programmable current limit function.

## **5.11 PHASE A/REF BOARD**

The Phase A/Ref Board, A11A5, serves several purposes. A programmable clock sets the output frequency of the power source. Digital-to-analog converters program references to set the output amplitude of Phases A, B and C. A sine wave generator creates a 1024 step waveform which is filtered to provide the Phase A oscillator signal. A external sense amplifier controls the Phase A output amplitude.

## **5.12 PHASE B/C BOARD**

The Phase B/C Board, A11A4, uses the DC voltage references and programmable clock from the Phase A/Ref board to generate the Phase B and C oscillator waveforms. External sense circuits control the Phase B and C output amplitudes.

## **5.13 DISPLAY MODULE**

The Display Board, A11A13, is held to the power source by a small panel and is connected through a short ribbon cable. It holds the 20 button keyboard and a 32 character LCD display. A knob on the board allows the display viewing angle to be adjusted.

This page left intentionally blank



## **SECTION 6                      MAINTENANCE AND TROUBLESHOOTING**

### **6.1                      GENERAL**

This section describes the suggested maintenance and troubleshooting procedures. Table 6-1 lists the paragraph titles and page numbers for the Troubleshooting section. If the AC Power System does not appear to function normally, use this section to isolate the problem. If the problem cannot be found using these steps, consult the factory.

**Table 6-1                      TROUBLESHOOTING**

<b>PARAGRAPH</b>	<b>PROBLEM</b>	<b>PAGE</b>
6-2	Poor Voltage Accuracy	111
6-3	Poor Output Voltage Regulation	111
6-4	Overtemperature Lamp On	111
6-5	Overload Lamp On	111
6-6	Can't Program AC Power System on GPIB	112
6-7	Distorted Output	112
6-8	No Output	113

### **6.2                      POOR VOLTAGE ACCURACY**

If the power source exhibits poor programmed voltage accuracy, the following item may be at fault:

1.        The calibration is incorrect.

SOLUTION:     Calibrate the output. Refer to Paragraph 4.3.1 page 82 .

### **6.3                      POOR OUTPUT VOLTAGE REGULATION**

If the AC Power System exhibits poor voltage regulation the following item may be at fault:

1.        The External Sense lines are not connected at the same point monitored by the external voltmeter used for load regulation check.

SOLUTION:     Connect AC voltmeter to External Sense lines.

### **6.4                      OVERTEMPERATURE LAMP ON**

If the power source OVERTEMP lamp is on, the following may be at fault:

1.        Ambient temperature is too high.

SOLUTION:     Operate power source between 0 and 35° C.

2.        Fan or ventilation holes are blocked.

SOLUTION:     Remove obstructions.

3.        Fan not working.

SOLUTION:     Replace fan. Consult factory.

### **6.5                      OVERLOAD LAMP ON**

The OVERLOAD lamp comes on when the output load current has exceeded the programmed current limit value. For all power systems except the 2750L-3P and the 4500L-3P, mis-adjustment of either the Amplifier Gain or Load Balance will cause the OVERLOAD Lamp to illuminate. If the AC Power System OVERLOAD lamp is on, the following items may be at fault:

1. The output is overloaded.  
SOLUTION: Remove the overload.
2. The programmable current limit level is set too low for the load being driven.  
SOLUTION: Compute and reprogram the correct programmable current limit level.
3. The programmable current limit is incorrectly calibrated.  
SOLUTION: Perform the calibration in paragraph 4.4.5. page 98.
4. The adjustment of the Amplifier Gain Balance or Load Balance is incorrect.  
SOLUTION: Perform the adjustments in paragraph 4.4.2 and 4.4.4. page 82.
5. Incorrect AC Power Source configuration. Check the ELT screen. It should show more than 24 hours of operation. If it shows less than 24 hours consult the factory.

## **6.6 CAN'T PROGRAM AC POWER SYSTEM ON GPIB**

If the power source does not respond to IEEE-488 GPIB programming, the following items may be at fault:

1. The power source unit address is wrong.  
SOLUTION: Update address. See paragraph 3.7.1. page 47.
2. GPIB cable is loose at power source rear panel.  
SOLUTION: Check connection, tighten jack screws.
3. The oscillator has failed.  
SOLUTION: Replace the oscillator. See Paragraph 6.10. page 113.

## **6.7 DISTORTED OUTPUT**

The AC Power System output may have a distorted sine wave from the following causes:

1. The power source output is overloaded.  
SOLUTION: Remove the overload or program the current limit to a higher value. Observe power source capabilities. See Section 1. page 1.

2. The crest factor of the load current exceeds 2.5. With this condition the distortion will be much higher at frequencies above 100 Hz.

SOLUTION: Reduce the load or program the current limit to a higher value.

## 6.8 NO OUTPUT

If the AC Power System has no output at the rear panel terminal block, TB1, the following items may be at fault:

1. If the External Sense lines are not connected correctly, there will be no output. The error message AMP FAULT will also be generated.

SOLUTION: Correctly connect the sense lines. Refer to Paragraph 2.5. page 20.

2. When the output is overloaded an error message will be generated and the output relays will open. The error message would be AMP FAULT.

SOLUTION: Remove the overload. Observe the output power capabilities. Refer to Section 1, page 1.

3. There is no input to the power amplifiers from the oscillator. Check the oscillator signals at the system interface connector:

J7-24	Oscillator Phase A
J7-6	Oscillator Phase B
J7-23	Oscillator Phase C
J7-7	Oscillator common/return

Program 135.0 volts on the 135 volt range. The three signals should be  $5.0 \pm 0.10$  VAC.

SOLUTION: If there is no signal at the Systems Interface connector replace the oscillator. Refer to paragraph 6.9. page 113.

SOLUTION: If the signal at the System Interface connector is greater than 5.0 VAC, it may be necessary to replace the respective amplifier. Refer to paragraph 6.11. page 114.

4. One of the internal fuses, F1, F2 or F3 has failed.

SOLUTION: Replace the fuse. Remove the input power and discharge capacitor C1 before replacing the fuse. Refer to paragraph 6.11. page 114.

## 6.9 MODULE REMOVAL

Figure 6-1 shows the location of the internal modules and assemblies. The figure shows the Amplifier Modules, A1, A2 and A3, with the insulator removed.

## 6.10 OSCILLATOR MODULE REMOVAL/REPLACEMENT

If a fault is found that requires the replacement of the Oscillator Module (assembly 4009-425) perform the following steps and refer to Figure 6-1 for the module locations:

1. Turn off the front panel circuit breaker.
2. Remove the power system's top cover.
3. Remove the Keyboard/Display assembly by loosening the two captive screws on its front panel.

4. Unplug the ribbon cable from the Keyboard/Display assembly.
5. Remove the Oscillator Module, A11, by pulling up the package of PC assemblies.
6. The module is now removed. To replace the module follow these steps in reverse order. Make sure the ribbon cable that plugs into the Keyboard/Display assembly runs between PC assembly, A12, and the front panel.

## **6.11 AMPLIFIER REMOVAL/REPLACEMENT**

If a fault has been found that indicates the failure of an amplifier module (assembly 4009-423), check the condition of the +300 VDC fuses before replacing the amplifier. Refer to Figure 6-1 for the location of the fuses. Fuse F1 is for phase A, F2 for phase B and F3 is for phase C.


### **CAUTION**

Capacitor C1 may have up to +350 VDC after the input circuit breaker has been turned off. Before inspecting fuses F1, F2 and F3, discharge C1. C1 may be discharged through a 5 ohm power resistor.

If it is determined that an amplifier module must be replaced perform the following procedure:

1. Turn off the input circuit breaker.
2. Remove the AC Power System top cover.
3. Remove the four #6 screws that hold the insulator that covers the amplifier module, A1, A2 and A3.
4. Remove any of the three amplifiers by sliding it up and over the guide posts.
5. The amplifier may be replaced by following this procedure in reverse order.
6. Check the amplifiers associated 10 amp and fuse and replace it if necessary. Refer to Figure 6-1 for the location of the fuse. F1, F2 and F3 are for the phase A, B and C amplifiers respectively.
7. After an amplifier has been replaced, readjust its gain and the 1-phase adjustment. Refer to Section 4, page 82.

**Figure 6-1 MODULE LOCATION**

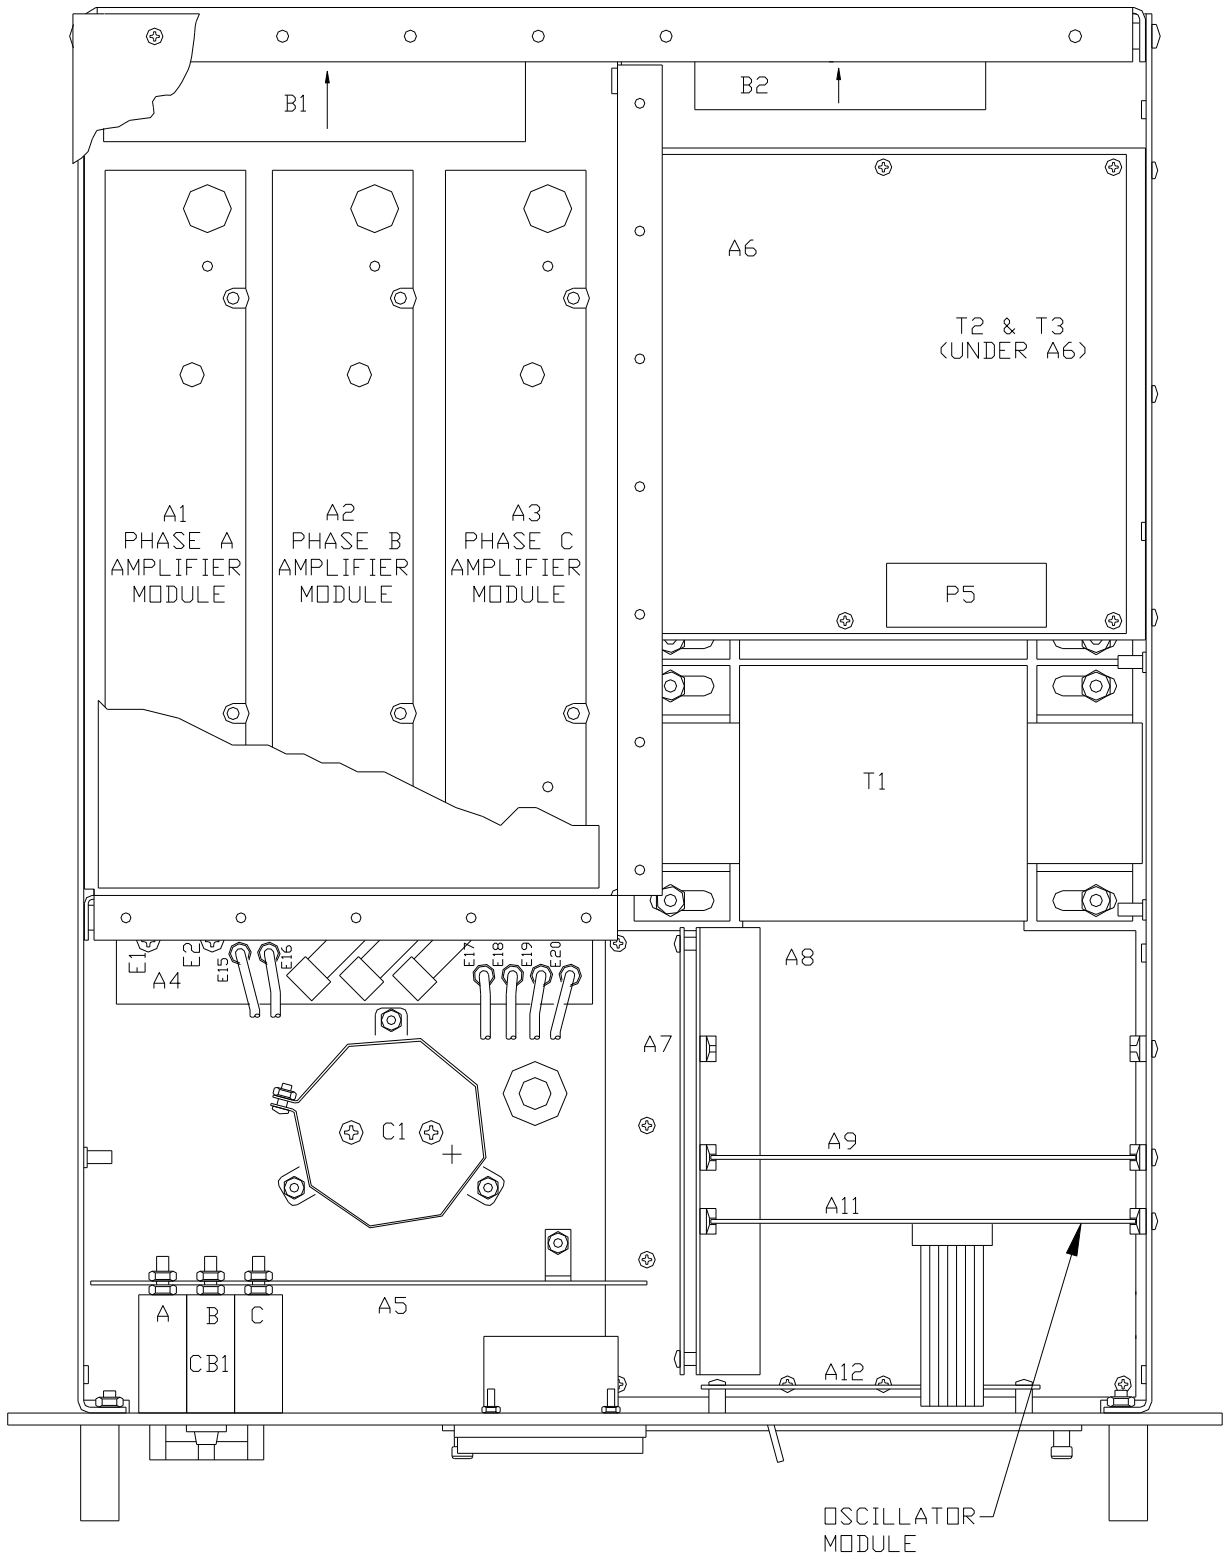

[This page left intentionally blank]

## **SECTION 7            REPLACEABLE PARTS**

### **7.1            GENERAL**

This section contains ordering information and a complete list of replaceable parts. The parts are listed by their major assembly in alpha-numeric order by their reference designators. The list includes the parts description, manufacturers' identification (see Appendix A for list of manufacturers), and California Instruments' part numbers.

### **7.2            ORDERING INFORMATION**

In order to ensure prompt, accurate service, please provide the following information, when applicable, for each replacement part ordered.

- a.        Model number and serial number of the instrument.
- b.        California Instruments part number for the subassembly where component is located (PARENT ITEM NO.).
- c.        Component reference designator (SEQ NO.).
- d.        Component description (DESCRIPTION TRUNCATED).
- e.        Component manufacturer's FSCM number (VENDOR).
- f.        California Instruments part number (COMPONENT ITEM NO.).

All replacement part orders should be addressed to:

California Instruments  
Attention: Parts Department  
9689 Towne Centre Drive  
San Diego, California 92121-1964

TOP ASSEMBLY REPLACEABLE PARTS  
4500L-P TOP ASSEMBLY NO: 4009-471-1  
6000L-P TOP ASSEMBLY NO: 4009-471-4  
TOP ASSEMBLY NO. WITH (-UP) OPTION:  
4500L-P TOP ASSEMBLY NO: 4009-472-5  
6000L-P TOP ASSEMBLY NO: 4009-472-8

SEQ NO	ITEM NO.	COMPONENT DESCRIPTION	VENDOR	QTY
A1	4009-456-2	HEATSINK ASSY, SW AMP	16067	1.0
A2	4009-456-2	HEATSINK ASSY, SW AMP	16067	1.0
A3	4009-456-2	HEATSINK ASSY, SW AMP	16067	1.0
A4	4009-724-1	PC ASSY, MOTHER	16067	1.0
A5	4009-739-1	PC ASSY, POWER SUPPLY	16067	1.0
A5 UP OPTION	4009-727-2	PC ASSY, LOW VOLT POWER SPLY	16067	1.0
A6	4009-733-1	PC ASSY, RANGE	16067	1.0
A7	4009-740-1	PC ASSY, AUX POWER SUPPLY	16067	1.0
A7 UP OPTION	4009-743-1	PC ASSY, INPUT PWR SUPPLY	16067	1.0
A8	4009-732-1	PC ASSY, MOTHER, CTRL	16067	1.0
A9	4009-738-3	PC ASSY, CURRENT LIMIT	16067	1.0
A11	4009-425-5	MODULE ASSY, OSC	16067	1.0
A12	4009-707-1	PC ASSY, INDICATOR	16067	1.0
B1	241178	FAN, 6", 48VDC, .45A	63227	1.0
B2	241175	FAN, 4", 48VDC	23936	1.0
C1	611295	CAP, AL, 3900µF, 400V	80031	1.0
A4F1	270176	FUSE, 20A, 250V	71400	1.0
A4F2	270176	FUSE, 20A, 250V	71400	1.0
A4F3	270176	FUSE, 20A, 250V	71400	1.0

TOP ASSEMBLY REPLACEABLE PARTS  
2750L-P TOP ASSEMBLY NO: 4009-471-7  
TOP ASSEMBLY NO. WITH (-UP) OPTION:  
2750L-P TOP ASSEMBLY NO: 4009-472-2

SEQ NO	ITEM NO.	COMPONENT DESCRIPTION	VENDOR	QTY
A1	4009-456-2	HEATSINK ASSY, SW AMP	16067	1.0
A2	4009-456-2	HEATSINK ASSY, SW AMP	16067	1.0
A3	4009-456-2	HEATSINK ASSY, SW AMP	16067	1.0
A4	4009-724-1	PC ASSY, MOTHER	16067	1.0
A5	4009-739-1	PC ASSY, POWER SUPPLY	16067	1.0
A5 UP OPTION	4009-727-2	PC ASSY, LOW VOLT POWER SPLY	16067	1.0
A6	4009-733-1	PC ASSY, RANGE	16067	1.0
A7	4009-740-3	PC ASSY, AUX POWER SUPPLY	16067	1.0
A7 UP OPTION	4009-743-1	PC ASSY, INPUT PWR SUPPLY	16067	1.0
A8	4009-732-1	PC ASSY, MOTHER, CTRL	16067	1.0
A9	4009-738-6	PC ASSY, CURRENT LIMIT	16067	1.0
A11	4009-425-5	MODULE ASSY, OSC	16067	1.0
A12	4009-707-1	PC ASSY, INDICATOR	16067	1.0
B1	241178	FAN, 6", 48VDC, .45A	63227	1.0
B2	241175	FAN, 4", 48VDC,	23936	1.0
C1	611295	CAP, AL, 3900TF, 400V	80031	1.0
A4F1	270176	FUSE, 20A, 250V	71400	1.0
A4F2	270176	FUSE, 20A, 250V	71400	1.0
A4F3	270176	FUSE, 20A, 250V	71400	1.0



## **SECTION 8            MIL-STD-704D**

### **8.1            GENERAL**

The MIL-704D option is capable of performing all sections of MIL-STD-704D. It will perform all tests in the order listed below or part of the test. There is a 5 second delay between tests to allow the operator to evaluate the result of the test.

### **8.2            INITIAL SETUP**

Nominal parameters for the AC Power Source shall be as follows:

OUTPUT VOLTAGE:	115 L-N
OUTPUT FREQUENCY:	400
OUTPUT PHASE ANGLE:	B 240 C 120

### **8.3            TEST PERFORMED**

#### **8.3.1            STEADY STATE TEST (Refer to MIL-704D Doc. Table 1)**

1. Voltage per Figure 1, page 151
2. Voltage unbalance per Figure 2, page 151
3. Voltage phase difference per Figure 3, page 151
4. Waveform distortion factor per Figure 4, page 151
5. Frequency per Figure 5, page 151

#### **8.3.2            TRANSIENT**

1. Voltage Transient (Refer to MIL-704D Doc. Figure 5.)  
    High voltage Transient per Figure 6, page 152  
    Low voltage Transient per Figure 7, page 152
2. Frequency Transient (Refer to MIL-704D Doc. Figure 6)  
    High frequency Transient per Figure 8, page 153  
    Low frequency Transient per Figure 9, page 153

#### **8.3.3            ABNORMAL OPERATION**

1. Abnormal voltage (Refer to MIL-704D Doc. Figure 7).  
    Overvoltage per Figure 10, page 154  
    Undervoltage per Figure 11, page 154
2. Abnormal frequency (Refer to MIL-704D Doc. Figure 8)  
    Overfrequency per Figure 12, page 155  
    Underfrequency per Figure 13, page 155

#### 8.3.4 EMERGENCY OPERATION (Refer to MIL-704D Doc. 5.2.5)

1. Voltage per Figure 14, page 156
2. Frequency per Figure 15, page 156

#### 8.4 KEYPAD ENTRY (Refer to page 31 for Keyboard flow chart)

To perform a test from the key board, the following key sequence is required:

704 ENT

The following screen will appear:

MIL704D:SelA,B,C  
ENT=all CLR=EXIT

Pressing the A, B, C or any combination selects the phase in test. Press ENT without the phase select for simultaneous three-phase test.

The following screen appears for a short time.

TEST A,B,C  
CLR to Reselect

The next screen is:

Apply Nom Output  
Press ENT

When ENT is selected the following screen appears:

Press MNU to  
Select Test

The MNU screen has two lines of selection shown at a time.

There are 3 different types of operations that can be selected from a MENU screen. If the word MENU appears for the item selected, another MENU screen will be displayed. If the word TEST appears for the item selected, the test will start. The display will return to the previous screen if the word RETURN appears for the item selected.

The Main Menu will appear as follows:

1=Steady St Menu  
2=Transient Menu  
3=Abnormal Menu  
4=Emergency Menu  
5=MIL704D Test  
6=Return

If key 1 is selected "Steady State: from the Main Menu, the following Menu will appear:

1=Voltage Test  
2=Unbalance Test  
3=Phase dif Test  
4=Wave dist Test  
5=Frequency Test

6=Steady St Test  
7=Return

If key 2 is selected "Transient" from the Main Menu, the following Menu will appear:

1=Volt Trns Menu  
2=Freq Trns Menu  
3=Transient Test  
4=Return

If key 1 is selected from the Transient Menu the following Menu will appear:

1=High Volt Test  
2=Low Volt Test  
3=Volt Trns Test  
4=Return

If key 2 is selected from the Transient Menu the following Menu will appear:

1=High Freq Test  
2=Low Freq Test  
3=Freq Trns Test  
4=Return

If key 3 is selected "Abnormal" from the Main Menu, the following Menu will appear:

1=Abnl Volt Menu  
2=Abnl Freq Menu  
3=Abnormal Test  
4=Return to Main Menu

If key 1 is selected from the "Abnormal" Menu, the following Menu will appear:

1=Overvolt Test  
2=Undervolt Test  
3=Abnl Volt Test  
4=Return

If key 2 is selected from the "Abnormal" menu, the following Menu will appear:

1=Overfreq Test  
2=Underfreq Test  
3=Abnl Freq Test  
4=Return

If key 4 is selected "Emergency" from the Main Menu, the following Menu will appear:

1=Emrg Volt Test  
2=Emrg Freq Test  
3=Emergency Test  
4=Return

## 8.5 GPIB OPERATION (Refer to page 150 for syntax diagram)

The following command will be used to execute the appropriate part of all of the test.

MIL704D[A][B][C]Test all MIL704D Sections  
MIL704D[A][B][C] :STEady state  
MIL704D[A][B][C] :STEady state :VOLTage  
MIL704D[A][B][C] :STEady state :VOLTage :UNBalance  
MIL704D[A][B][C] :STEady state :PHASe :DIFFerence  
MIL704D[A][B][C] :STEady state :WAVEform :DISTortion  
MIL704D :STEady state :FREQuency

MIL704D[A][B][C] :TRANsient  
MIL704D[A][B][C] :TRANsient :VOLTage  
MIL704D[A][B][C] :TRANsient :VOLTage :HIGH  
MIL704D[A][B][C] :TRANsient :VOLTage :LOW  
MIL704D :TRANsient :FREQuency  
MIL704D :TRANsient :FREQuency:HIGH  
MIL704D :TRANsient :FREQuency:LOW

MIL704D[A][B][C] :ABNormal  
MIL704D[A][B][C] :ABNormal :VOLTage  
MIL704D[A][B][C] :ABNormal :VOLTage :OVER  
MIL704D[A][B][C] :ABNormal :VOLTage :UNDER  
MIL704D :ABNormal :FREQuency  
MIL704D :ABNormal :FREQuency :OVER  
MIL704D :ABNormal :FREQuency :UNDER

MIL704D[A][B][C] :EMERgency  
MIL704D[A][B][C] :EMERgency :VOLTage  
MIL704D :EMERgency :FREQuency

All lower case letters are option. [A],[B],[C] represent phase A, B, C. They are optional if they are omitted; the test will be applied to all three phases.

## 8.6 TEST SPECIFICATION

### 8.6.1 STEADY STATE

1. Steady state voltage test (Figure 1).

MIL704D[A][B][C] :STEady state :VOLTage

This test will change the output voltage simultaneously from 115 volts to 108 volts for 5 seconds to 118 volts for 5 seconds. The unselected phases will remain at 115 volts.

2. Steady state voltage unbalance test (Figure 2).

MIL704D[A][B][C] :STEady state :VOLTage :UNBalance

This test will change the output for phase A from 115 volts to 112 volts for 5 seconds and to 118 volts for 5 seconds. The test will repeat itself for phase B and phase C if they are selected.

3. Steady state voltage phase difference test (Figure 3).

MIL704D[A][B][C] :STEady state :PHASe :DIFFerence

This test will change phase B program phase angle, if it is selected, from 240 degrees to 236 degrees for 5 seconds and to 244 degrees for another 5 seconds. The test will be repeated for phase C, if it is selected.

4. Steady state waveform distortion (Figure 4).

MIL704D[A][B][C] :STEady state :WAVEform :DISTortion

This test will generate a 5% distortion on the selected phase for 5 seconds.

5. Steady state frequency test (Figure 5).

MIL704D :STEady state :FREQuency

This test will change the programmed frequency from 400 Hz to 393 Hz for 5 seconds then to 407 Hz for 5 seconds.

6. Steady state test

MIL704D[A][B][C] :STEady state

This test will perform all the above five tests in the same order above. A 5 second pause between tests is asserted.

#### 8.6.2. TRANSIENT

1. Transient high voltage test (Figure 6).

MIL704D[A][B][C] :TRANSient :VOLTage :HIGH

This test requires a 180 volts range. A range change will take place if the power source is not set for the high range. The output voltage will drop temporarily to allow for range change and after 5 seconds the test will begin.

The output will go to 180 volts for 10 msec and will drop gradually to 115 volts in 81.25 msec. After 5 seconds, a range change will take place to the original setup. This is a simultaneous test to all selected phases.

2. Transient low voltage test (Figure 7).

MIL704D[A][B][C] :TRANSient :VOLTage :LOW

The output voltage will drop to 80 volts for 10 msec. It will gradually rise to 115 volts in 81.25 msec. This test is a simultaneous test to all selected phases.

3. Transient voltage test

MIL704D[A][B][C] :TRANSient :VOLTage

This test will combine High voltage transient and Low voltage transient. There will be a pause of 5 seconds between tests. If the voltage range is below 180 volts, the High voltage transient test will not take place.

4. Transient high frequency test (Figure 8).

MIL704D :TRANSient :FREQuency:HIGH

This test will step up the frequency from 400 Hz to 425 Hz. The frequency will step down to 400 Hz in the following sequence:

425 Hz for 1 second  
420 Hz for 4 seconds  
410 Hz for 5 seconds  
407 Hz for 4 seconds

5. Transient low frequency test (Figure 9).

MIL704D :TRANSient :FREQuency:LOW

This test will step down the frequency from 400 Hz to 375 Hz. The frequency will step up to 400 Hz in the following sequence:

375 Hz for 1 second  
380 Hz for 4 seconds  
390 Hz for 5 seconds  
393 Hz for 4 seconds

6. Transient frequency test

MIL704D :TRANSient :FREQuency

This test will combine the high frequency transient and the low frequency transient. There is a pause of 5 seconds between tests.

### 8.6.3. ABNORMAL

1. Abnormal overvoltage test (Figure 10).

MIL704D[A][B][C] :ABNormal :VOLTage :OVER

This test requires a 180 volt range. A range change will take place if the power source is not set for the high range. The output voltage will drop temporarily to allow for the range change and after 5 seconds the test will begin.

The output will go to 180 volts for 50 msec and will drop gradually to 125 volts in 450 msec. The output voltage will remain at 125 volts for 9.5 seconds before it drops to 115 volts. After 5 seconds, a range change will take place to the original setup. This is a simultaneous test to all selected phases.

2. Abnormal undervoltage test (Figure 11).

MIL704D[A][B][C] :ABNormal :VOLTage :UNDer

The output voltage will drop to 0 volts for 7 seconds. It step up to 100 volts for 3 seconds before it will go to 115 volts. This is a simultaneous test for all selected phases.

3. Abnormal voltage test

MIL704D[A][B][C] :ABNormal :VOLTage

This test will combine Abnormal overvoltage and Abnormal undervoltage. There will be a pause of 5 seconds between tests. If the voltage range is below 180 volts the Abnormal overvoltage test will not take place.

4. Abnormal overfrequency test (Figure 12)

MIL704D :ABNormal :FREQuency :OVER

This test will step up the frequency from 400 Hz to 480 Hz. The frequency will step down to 400 Hz in the following sequence:

480 Hz for 5 seconds  
425 Hz for 5 seconds

5. Abnormal underfrequency test (Figure 13)

MIL704D :ABNormal :FREQuency :UNDER

This test will step down the frequency from 400 Hz to 0 Hz. The frequency will step up to 400 Hz in the following sequence:

0 Hz for 5 seconds  
375 Hz for 5 seconds

6. Abnormal frequency test

MIL704D :ABNormal :FREQuency

This test will combine the Abnormal overfrequency and the Abnormal underfrequency . There is a pause for 5 seconds between tests.

#### 8.6.4. EMERGENCY

1. Emergency voltage test (Figure 14).

MIL704D[A][B][C] :EMERgency :VOLTage

This test will step down the voltage to 104 volts for 5 seconds. Also it will step up the voltage to 122 volts for another 5 seconds.

2. Emergency frequency test (Figure 15).

MIL704D :EMERgency :FREQuency

This test will step down the frequency to 360 Hz for 5 seconds then will step up the frequency to 440 Hz for 5 seconds.

3. Emergency test

MIL704D[A][B][C] :EMERgency

This test will combine the voltage emergency test and the frequency emergency test. A pause of 5 seconds between tests is asserted.


#### **8.6.5 MIL704D TEST**

MIL704D[A][B][C]


This test will combine all the tests listed above in one test in the sequence listed. A 5 second time delay separate the parts of the test. Tests will be performed on the selected phases only.



## 704D FLOW CHART

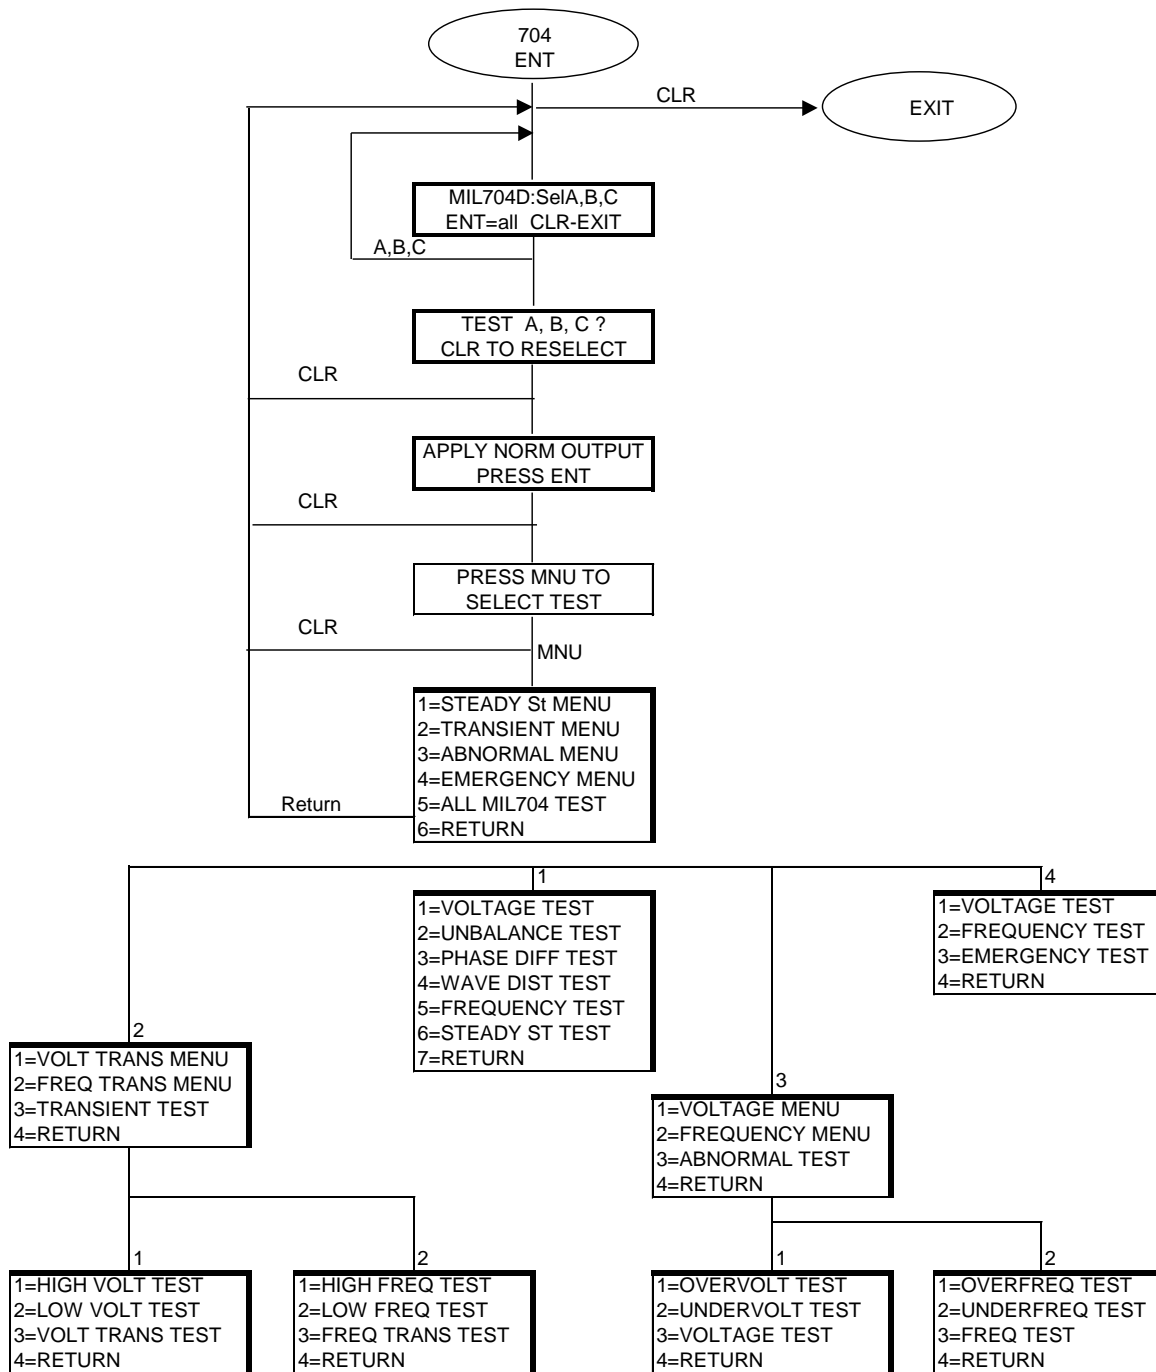

## 704D SYNTAX FLOW

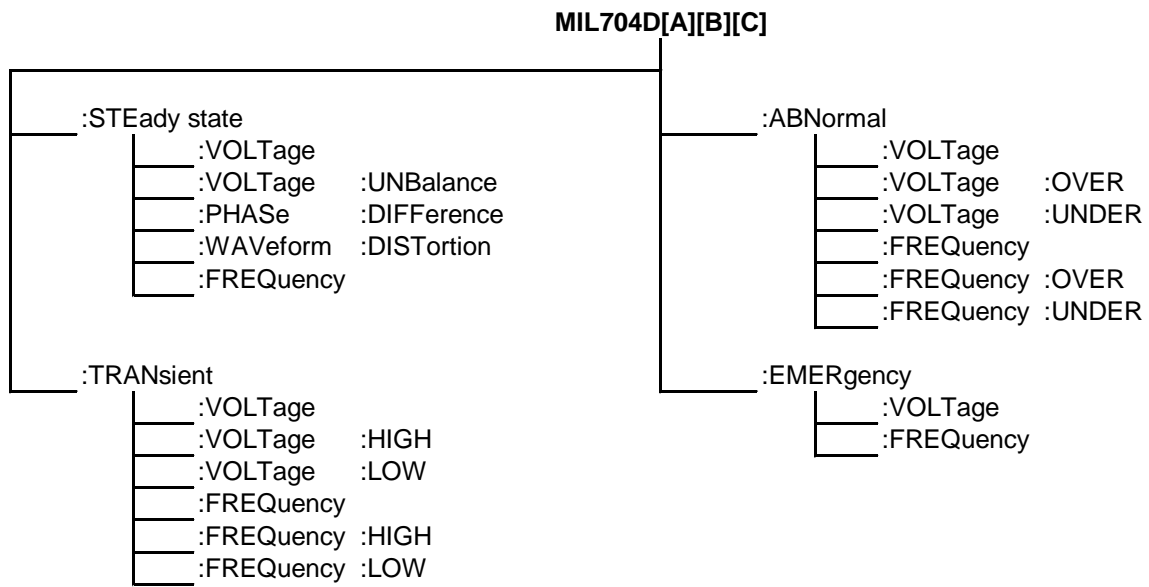

**Figure 1**      **STEADY STATE VOLTAGE**

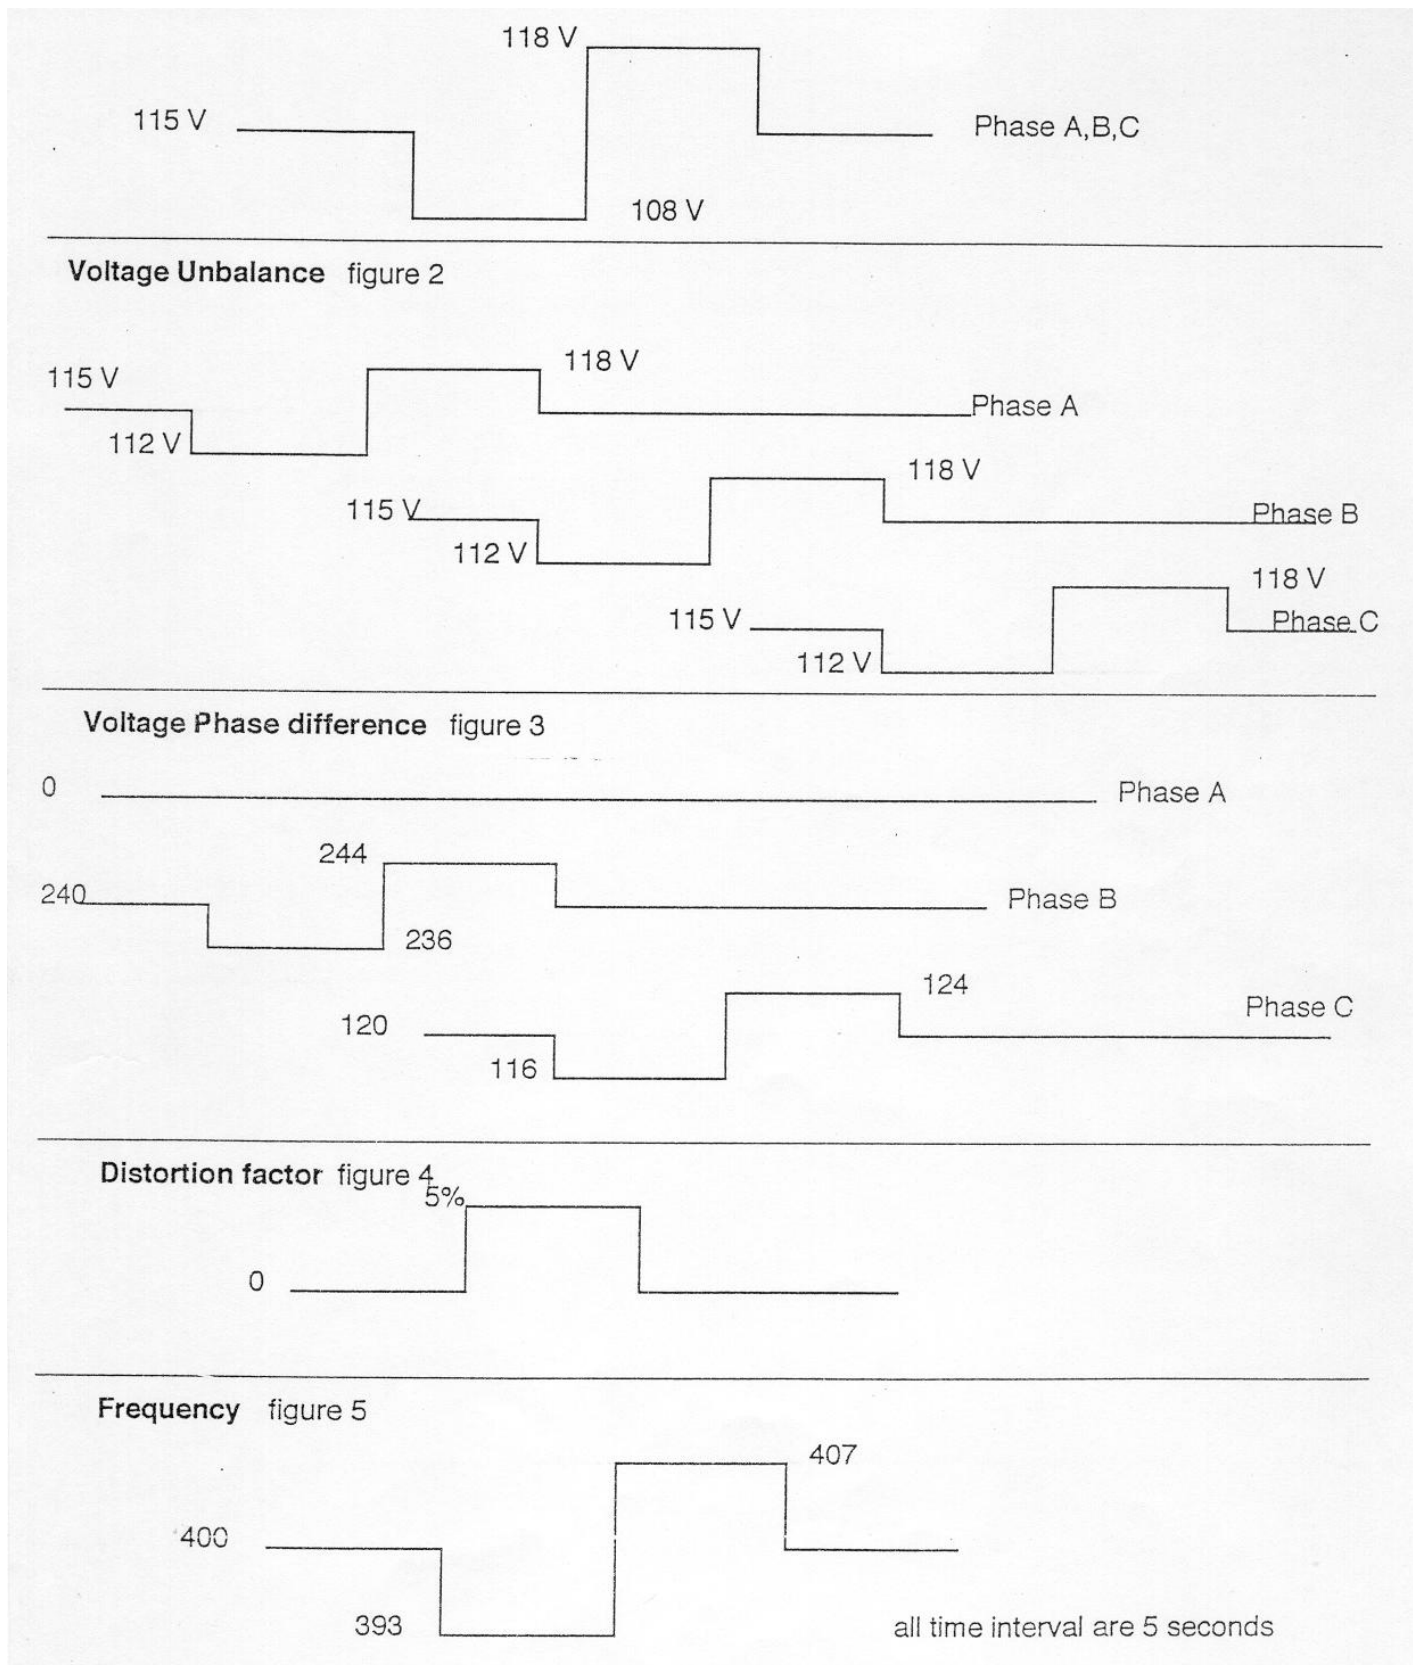


Figure 6, 7      VOLTAGE TRANSIENT

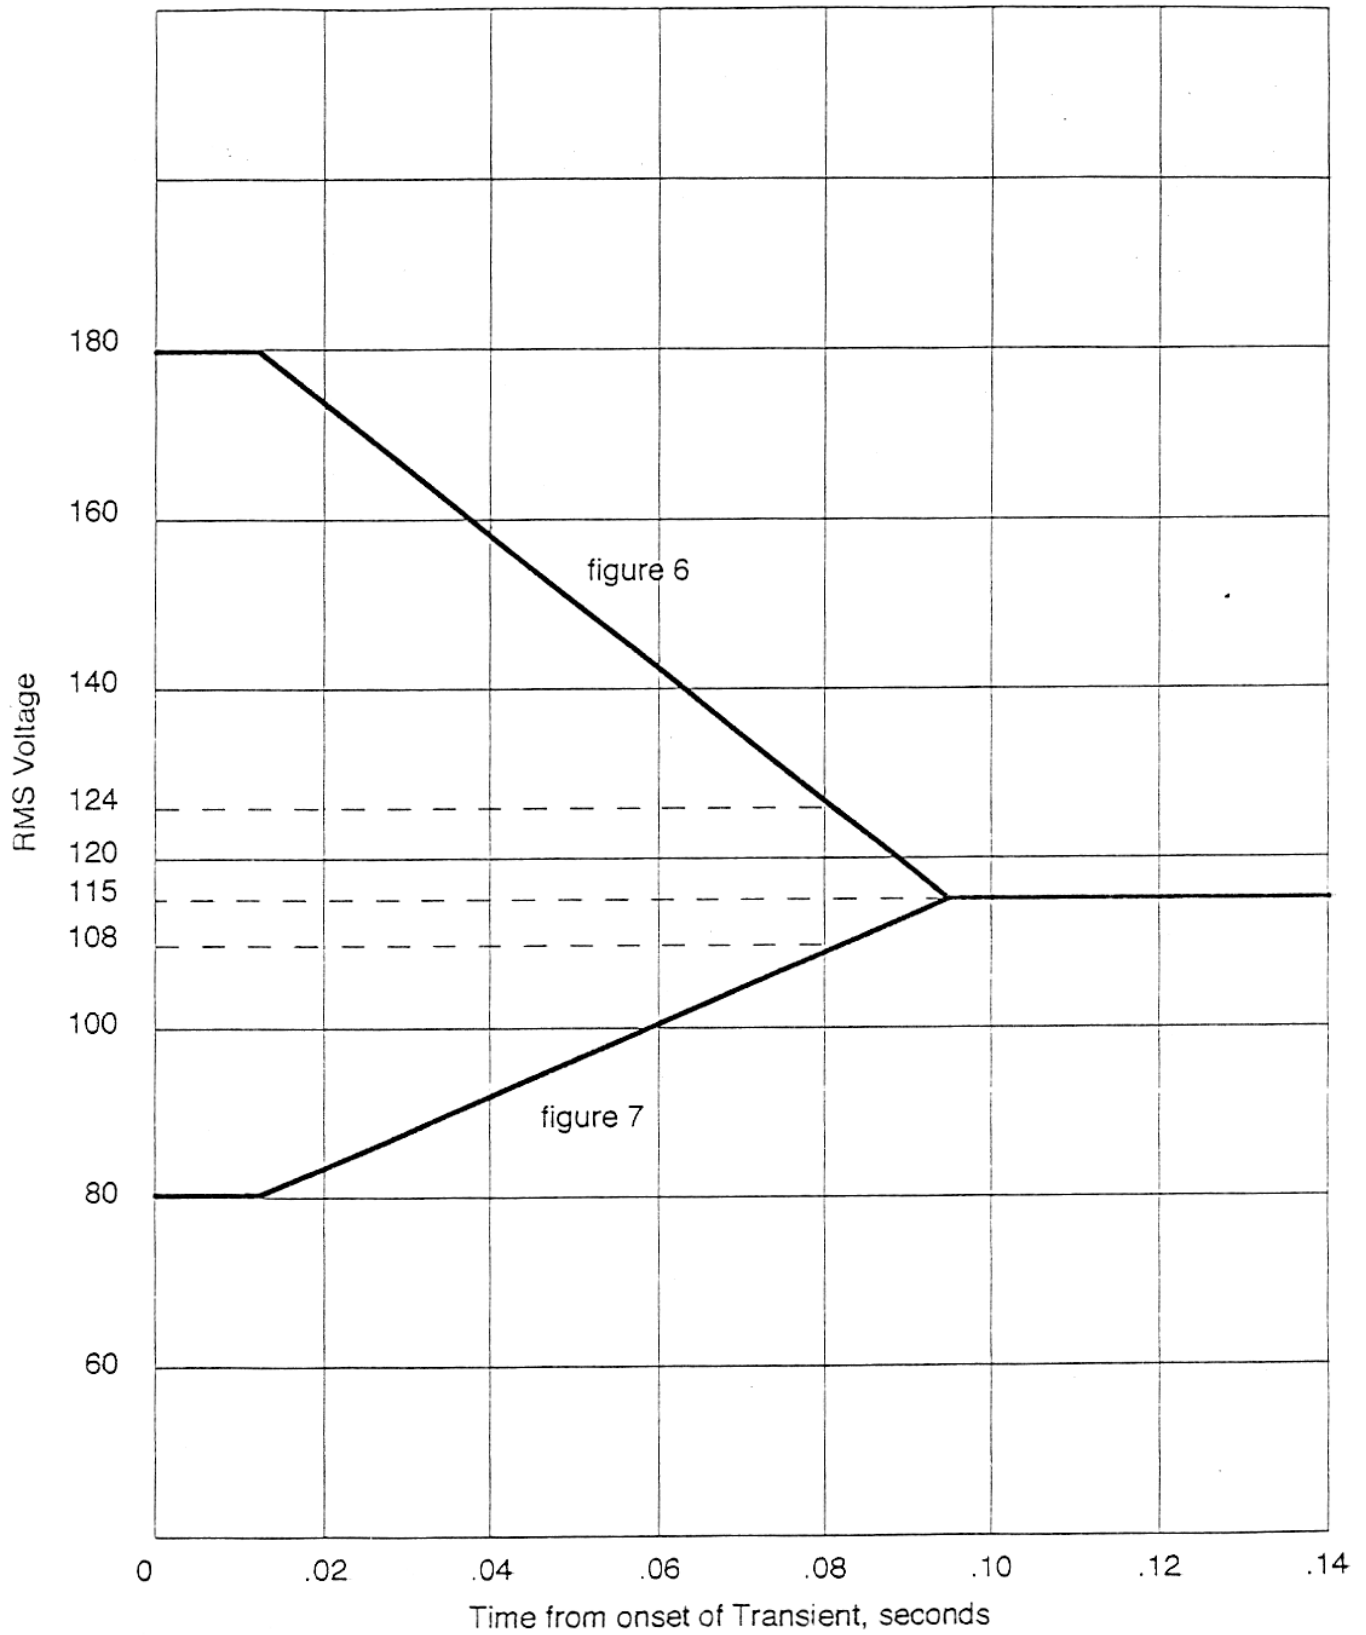


Figure 8, 9

FREQUENCY TRANSIENT

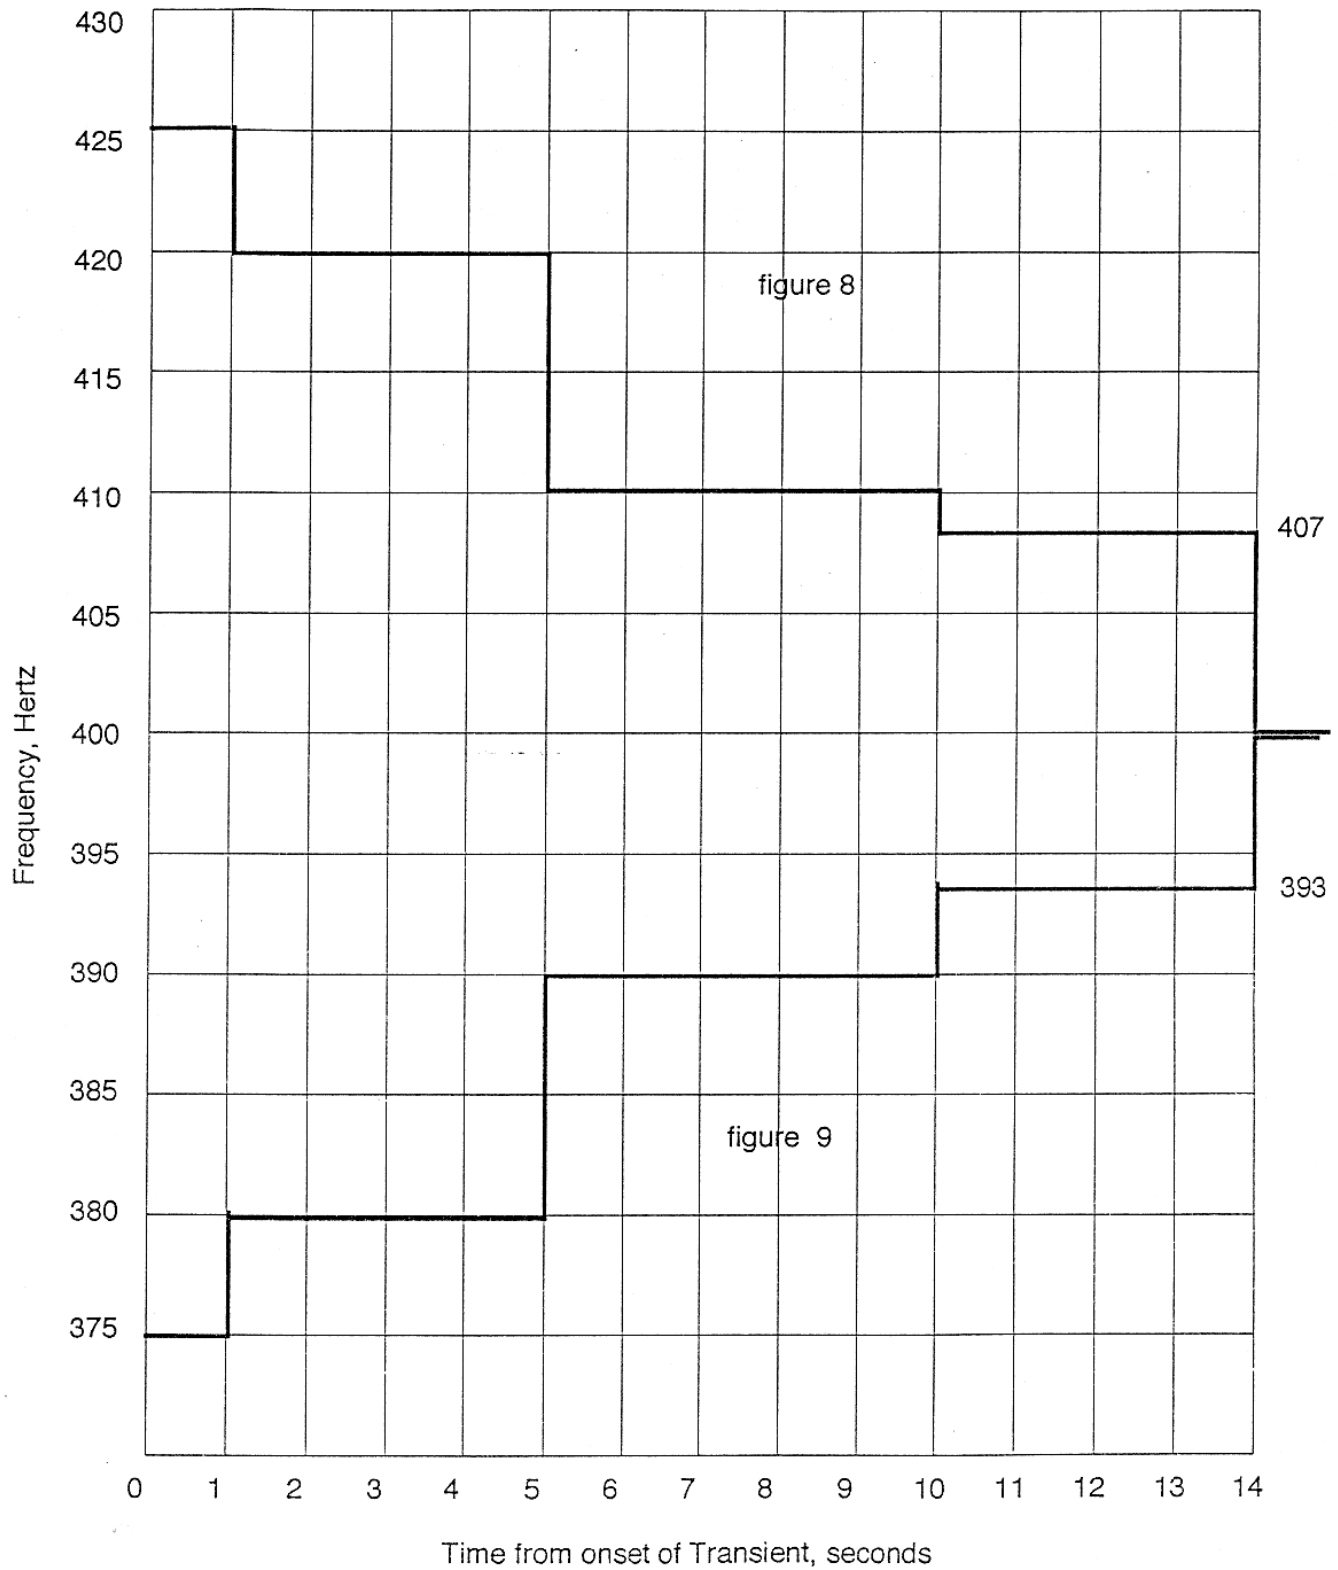


Figure 10, 11 ABNORMAL OPERATION

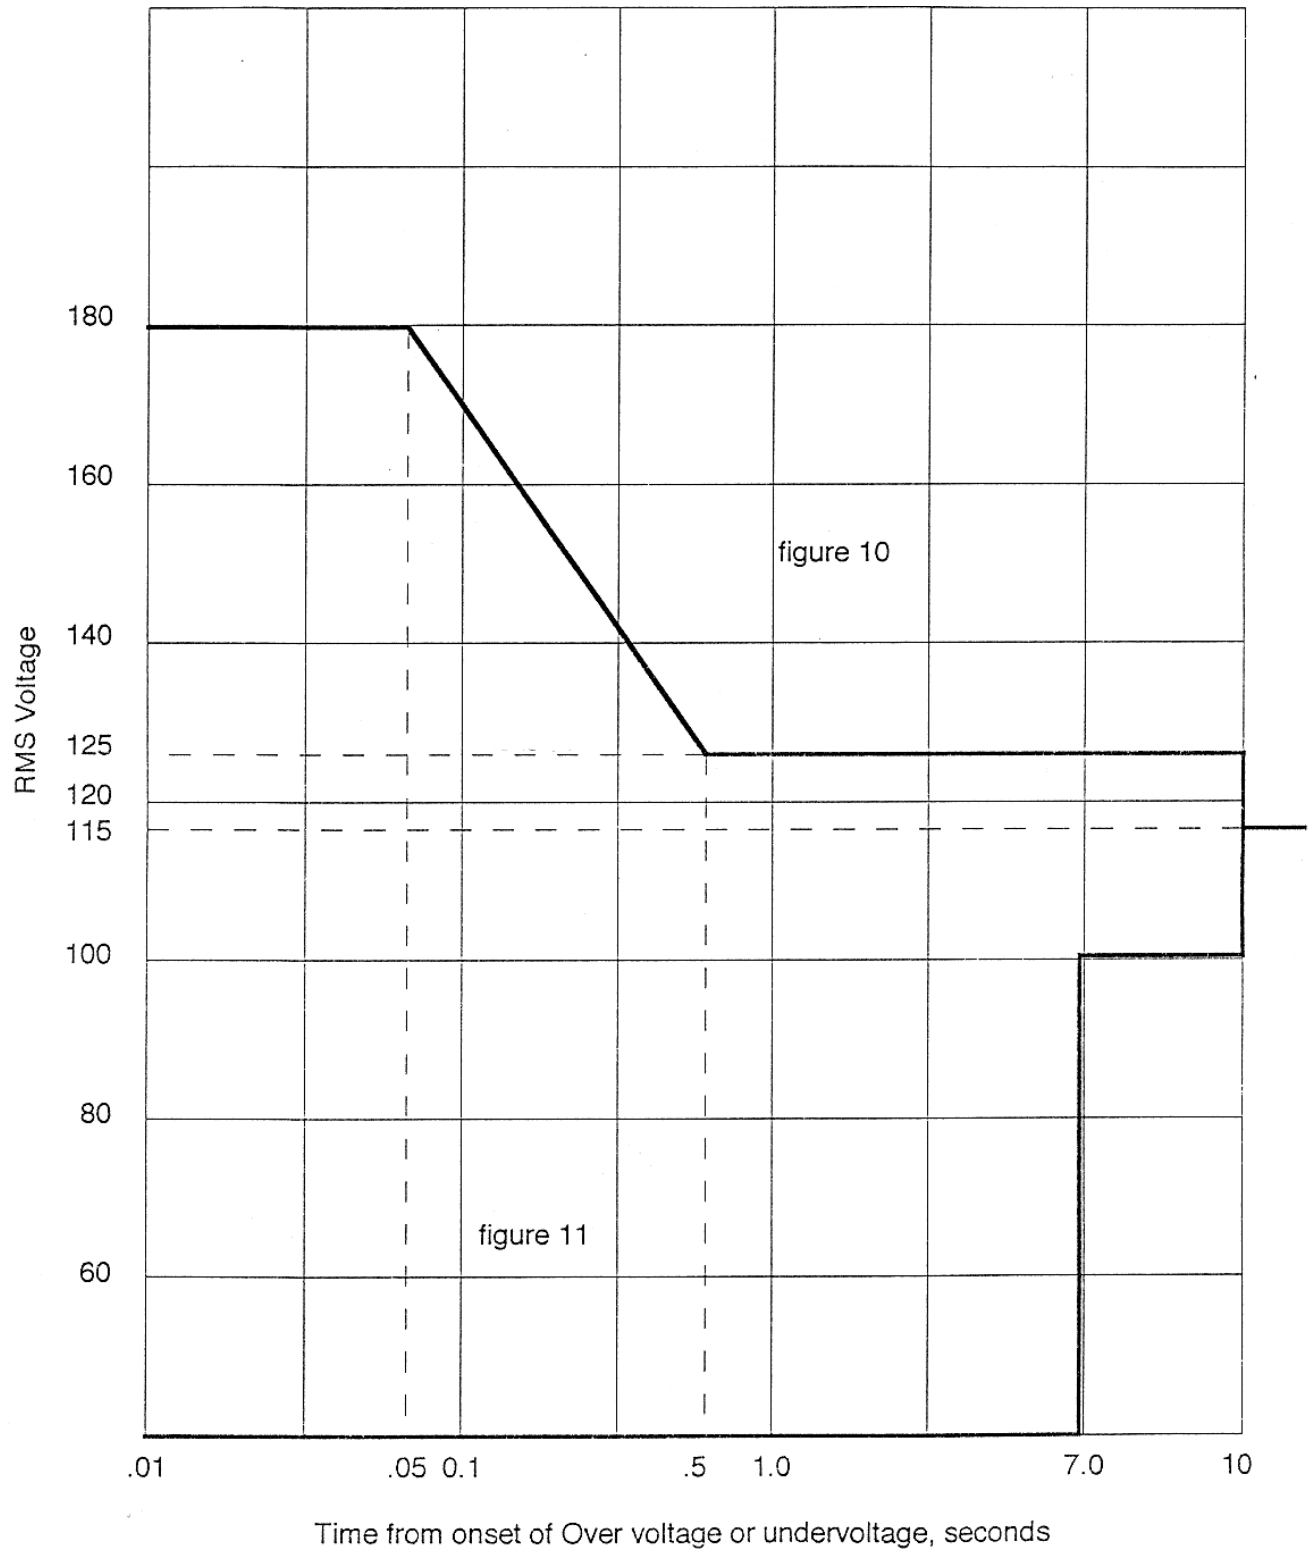


Figure 12, 13 ABNORMAL FREQUENCY



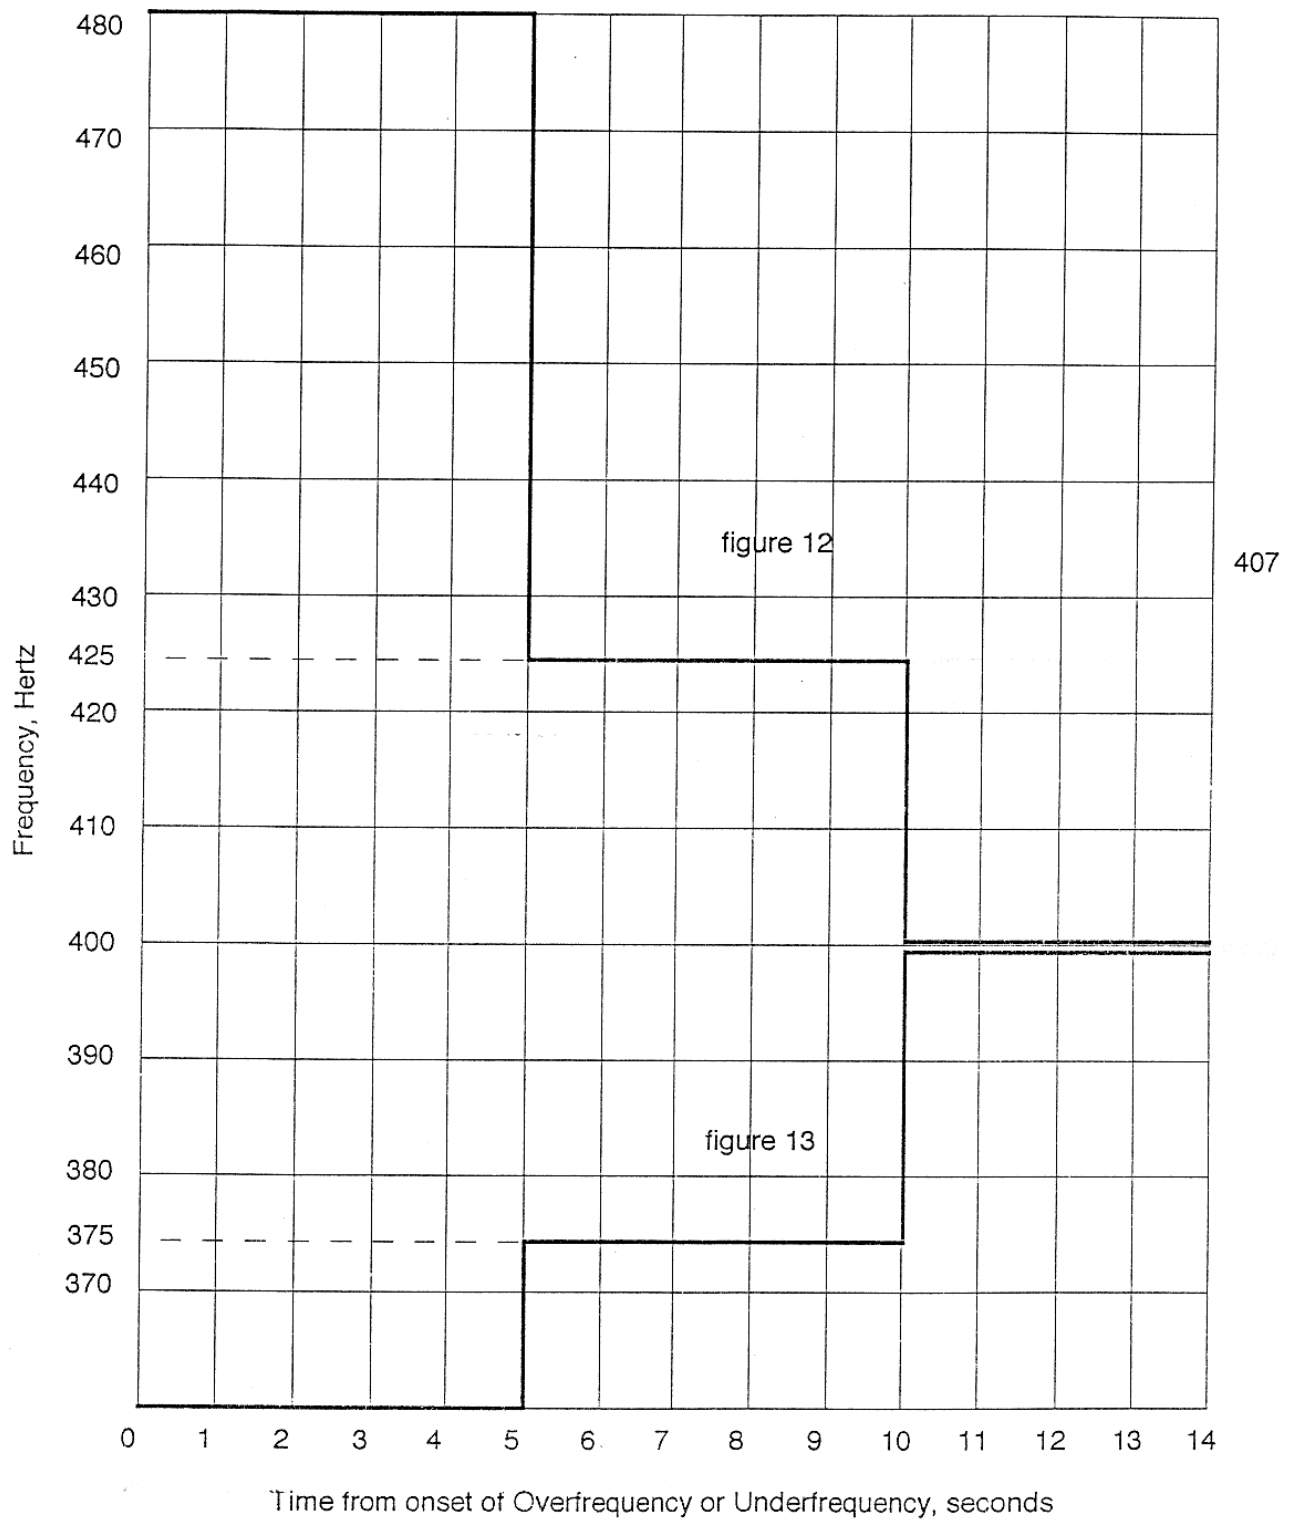


Figure 14

EMERGENCY VOLTAGE

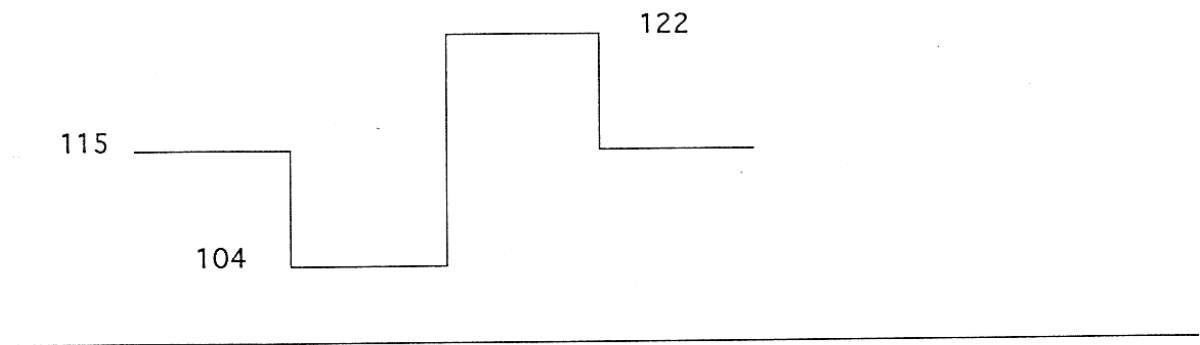

Emergency Frequency figure 15

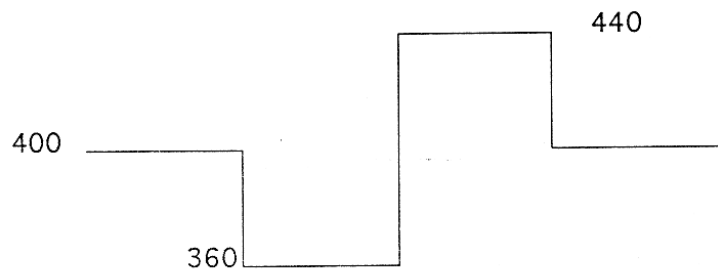

all time interval are 5 seconds



## **SECTION 9     2-PHASE OPTION (2P)**

### **9.1        GENERAL**

The output appears from the Phase A and Phase C output terminals for this option. Phase C leads Phase A by 90 degrees.

(This page left intentionally blank)

## **SECTION 10    RTCA/DO-160C**

### **10.1        GENERAL**

The RTCA/DO-160C option is capable of performing all sections of RTCA/DO-160C for the AC Source signal.

### **10.2        INITIAL SETUP**

Nominal parameters for the AC Power source shall be as follows:

Output Voltage 115V L-N  
Output Frequency 400 Hz  
Output Phase Angle B 240  
                          C 120

### **10.3        TEST PERFORMED**

#### **10.3.1      NORMAL STATE**

1.      Normal State Voltage and Frequency test
2.      Voltage Unbalance test
3.      Waveform Distortion test
4.      Voltage Modulation test
5.      Frequency Modulation test
6.      Momentary Power Interrupt (Undervoltage) test
7.      Voltage Surge (Overvoltage) test

#### **10.3.2      EMERGENCY TEST**

1.      Emergency Voltage and Frequency test
2.      Voltage Unbalance test

#### **10.3.3      ABNORMAL TEST**

1.      Abnormal Voltage and Frequency test
2.      Momentary Undervoltage test
3.      Voltage Surge test

### **10.4        KEYPAD ENTRY (Refer to Figure 1 for Keyboard Flow Chart)**

To perform a test from the keyboard, the following key sequence is required:

160 ENT

The following screen will appear:

DO160C: Sel A, B, C  
ENT = all CLR = EXIT

Pressing the A, B, C or any combination selects the phase in test. Press ENT without the phase select for simultaneous three phase test.

The following screen appears for a short time:

Test A, B, C  
CLR to Reselect

The next screen is:

Apply Nom output  
Press ENT

When ENT is selected the following screen appears;

Press MNU to  
Select Test

The MNU screen has two lines of selection shown at a time.

There are three different types of operations that can be selected from the MENU screen. If the word MENU appears for the items selected, another MENU screen will be displayed. If the word Test appears for the item selected, the test will start. The display will return to the previous screen if the word RETURN appears for the item selected.

The Main Menu will appear as follows:

1 = Normal Menu  
2 = Emergency Menu  
3 = Abnormal Menu  
4 = Return

If Key 1 is selected "Normal Menu" from the Main Menu, the following Menu will appear:

1 = Volt/Freq Menu  
2 = Unbalance Test  
3 = Volt Mod Test  
4 = Power Int Test  
5 = Volt Surge Test  
6 = Wave Dist Test  
7 = Freq Mod Test  
8 = Return

If Key 2 is selected "Emergency Menu" from the Main Menu, the following Menu will appear:

1 = Emg V/F Menu  
2 = Emg Unbal Test  
3 = Return

If Key 3 is selected "Abnormal Menu" from the Main Menu, the following Menu will appear:

1 = Ab Volt Menu  
2 = Ab Vunder Test  
3 = Ab Vsurge Test  
4 = Return

If Key 1 is selected "Volt/Freq Menu" from the Normal Menu, the following Menu will appear:

1 = Under Volt Test  
2 = Over Volt Test

3 = Return

If Key 1 is selected "Volt/Freq Menu" from the Emergency Menu, the following Menu will appear:

1 = Emg Vunder Test  
2 = Emg Vover Test  
3 = Return

If Key 1 is selected "Volt Menu" from the Abnormal Menu, the following Menu will appear:

1 = Ab Vunder Test  
2 = Ab Vover Test  
3 = Return

If Key 3 or Key 7 is selected from the "Normal Menu", another screen will appear as follows:

Enter Modulation  
Rate in Hz and ENT.

The numeric value must be within the limits for the test performed. See Figure 2 and Figure 3.

If Key 4 is selected from the "Normal Menu", the following screen will appear as follows:

Enter Test  
Number 1 to 15 and ENT (see Table 1)

## 10.5 GPIB OPERATION

The following command will be used to execute the appropriate section of DO-160C.

Remote Command

DO160[A][B][C] :NORMAl state :VOLT\_FREQ :MINimum  
DO160[A][B][C] :NORMAl state :VOLT\_FREQ :MAXimum  
DO160[A][B][C] :NORMAl state :VOLTage :UNBalance  
DO160[A][B][C] :NORMAl state :WAVE form :DISTortion  
DO160[A][B][C] :NORMAl state :VOLTage :MODulation <numeric>  
DO160[A][B][C] :NORMAl state :FREQuency :MODulation <numeric>  
DO160[A][B][C] :NORMAl state :VOLTage :UNDER<numeric>  
DO160[A][B][C] :NORMAl state :VOLTage :OVER

DO160[A][B][C] :EMERgency :VOLT\_FREQ :MINimum  
DO160[A][B][C] :EMERgency :VOLT\_FREQ :MAXimum  
DO160[A][B][C] :EMERgency :VOLTage :UNBalance

DO160[A][B][C] :ABNormal stage :VOLTage :MINimum  
DO160[A][B][C] :ABNormal state :VOLTage :MAXimum  
DO160[A][B][C] :ABNormal stage :VOLTage :UNDER  
DO160[A][B][C] :ABNormal state :VOLTage :OVER

## **10.6 TEST SPECIFICATION**

### **10.6.1 NORMAL STATE**

#### **10.6.1.1 NORMAL STATE MINIMUM VOLTAGE AND FREQUENCY TEST**

DO160[A][B][C] :NORMAl state :VOLT\_FREQ :MINimum

This test will change the output voltage for single phase from 115V to 104V and for three-phase from 115V to 105.5V and the frequency from 400 Hz to 380 Hz. The test will last for 30 minutes. The CLR Key in local operation will terminate the test at any time. Group execute trigger will terminate the test remotely. The unselected phases will remain at 115 volts.

#### **10.6.1.2 NORMAL STATE MAXIMUM VOLTAGE AND FREQUENCY TEST**

DO160[A][B][C] :NORMAl state :VOLT\_FREQ :MAXimum

This test will change the output voltage for single phase from 115V to 122 volts and from 115V to 120.5 volts for three-phase and the frequency from 400 Hz to 420 Hz. The test will last for 30 minutes. The CLR Key in local operation will terminate the test at any time. Group execute trigger will terminate the test remotely. The unselected phase will remain at 115 volts.

#### **10.6.1.3 NORMAL STATE VOLTAGE UNBALANCE**

DO160[A][B][C] :NORMAl state :VOLTage :UNBalance

This test will change the output voltage for each phase from 115 volts to 112 volts and to 118 volts. The test for all three phases will last 30 minutes. The test can be terminated at any time.

#### **10.6.1.4 NORMAL STATE WAVEFORM DISTORTION**

DO160[A][B][C] :NORMAl state :WAVE form :DISTortion

This test will generate a 5% distortion on the selected phase. The test will last for 30 minutes. This test can be terminated at any time.

#### **10.6.1.5 NORMAL STATE VOLTAGE MODULATION**

DO160[A][B][C] :NORMAl state :VOLTage :MODulation <numeric>

This test requires a numeric value equal to the modulation rate in Hz. See Figure 2. The amplitude modulation is calculated based on the modulation rate. This test will last for 2 minutes.

#### **10.6.1.6 NORMAL STATE FREQUENCY MODULATION**

DO160[A][B][C] :NORMAl state :FREQuency :MODulation <numeric>

This test requires a numeric value equal to the modulation rate in Hz. See Figure 3. The frequency modulation is calculated based on the modulation rate. This test will last for two minutes.

#### **10.6.1.7 NORMAL STATE POWER INTERRUPT**

DO160[A][B][C] :NORMAl state :VOLTage :UNDer<numeric>

This test requires a numeric value equal to the test number. There are 15 tests. See Table 1.

#### **10.6.1.8 NORMAL STATE VOLTAGE SURGE**

DO160[A][B][C] :NORMAL state :VOLTage :OVER

This test requires a power source with 160 volt output. If the power source has a dual voltage range, the test will select the high voltage range to complete the test.

The output voltage will remain at 115 volts for 5 minutes before it rises to 160 volts for 30 msec then stay for 5 seconds at 115 volts then drops to 60 volts for 30 msec before returning to 115 volts for 5 seconds. The above sequence will repeat itself three times.

#### **10.6.2 EMERGENCY TEST**

This test could be performed in addition to the Normal State test for equipment designed to operate under emergency electrical system.

##### **10.6.2.1 EMERGENCY STATE MINIMUM VOLTAGE AND FREQUENCY TEST**

DO160[A][B][C] :EMERgency :VOLT\_FREQ :MINimum

This test is similar to the test at 6.1.1 except the output frequency changes from 400 Hz to 360 Hz.

##### **10.6.2.2 EMERGENCY STATE MAXIMUM VOLTAGE AND FREQUENCY TEST**

DO160[A][B][C] :EMERgency :VOLT\_FREQ :MAXimum

This test is similar to the test at 5.1.2 except the output frequency changes from 400 Hz to 440 Hz.

##### **10.6.2.3 EMERGENCY STATE VOLTAGE UNBALANCE**

DO160[A][B][C] :EMERgency :VOLTage :UNBalance

This test is similar to the test at 6.1.3 except the output voltage changes from 115 volts to 111 volts and from 115 volts to 119 volts.

#### **10.6.3 ABNORMAL STATE**

##### **10.6.3.1 ABNORMAL STATE MINIMUM VOLTAGE**

DO160[A][B][C] :ABNormal stage :VOLTage :MINimum

This test will drop the output to 97 volts for 5 minutes

##### **10.6.3.2 ABNORMAL STATE MAXIMUM VOLTAGE**

DO160[A][B][C] :ABNormal state :VOLTage :MAXimum

This test will raise the output voltage from 115 volts to 135 volts for 5 minutes.

##### **10.6.3.3 ABNORMAL STATE UNDERVOLTAGE**

DO160[A][B][C] :ABNormal stage :VOLTage :UNDER

This test will drop the output voltage from 115 volts to 60 volts for 7 seconds.

#### **10.6.3.4 ABNORMAL STATE VOLTAGE SURGE**

DO160[A][B][C] :ABNormal state :VOLTage :OVER

This test requires an output voltage range of 180 volts. If the power source is a dual voltage range, this test will select the upper voltage range if the lower voltage ranges is less than 180 volts.

The output voltage will rise to 180 volts for 100 msec and will drop to 148 volts for 1 sec before it returns to 115 volts.



Figure 1



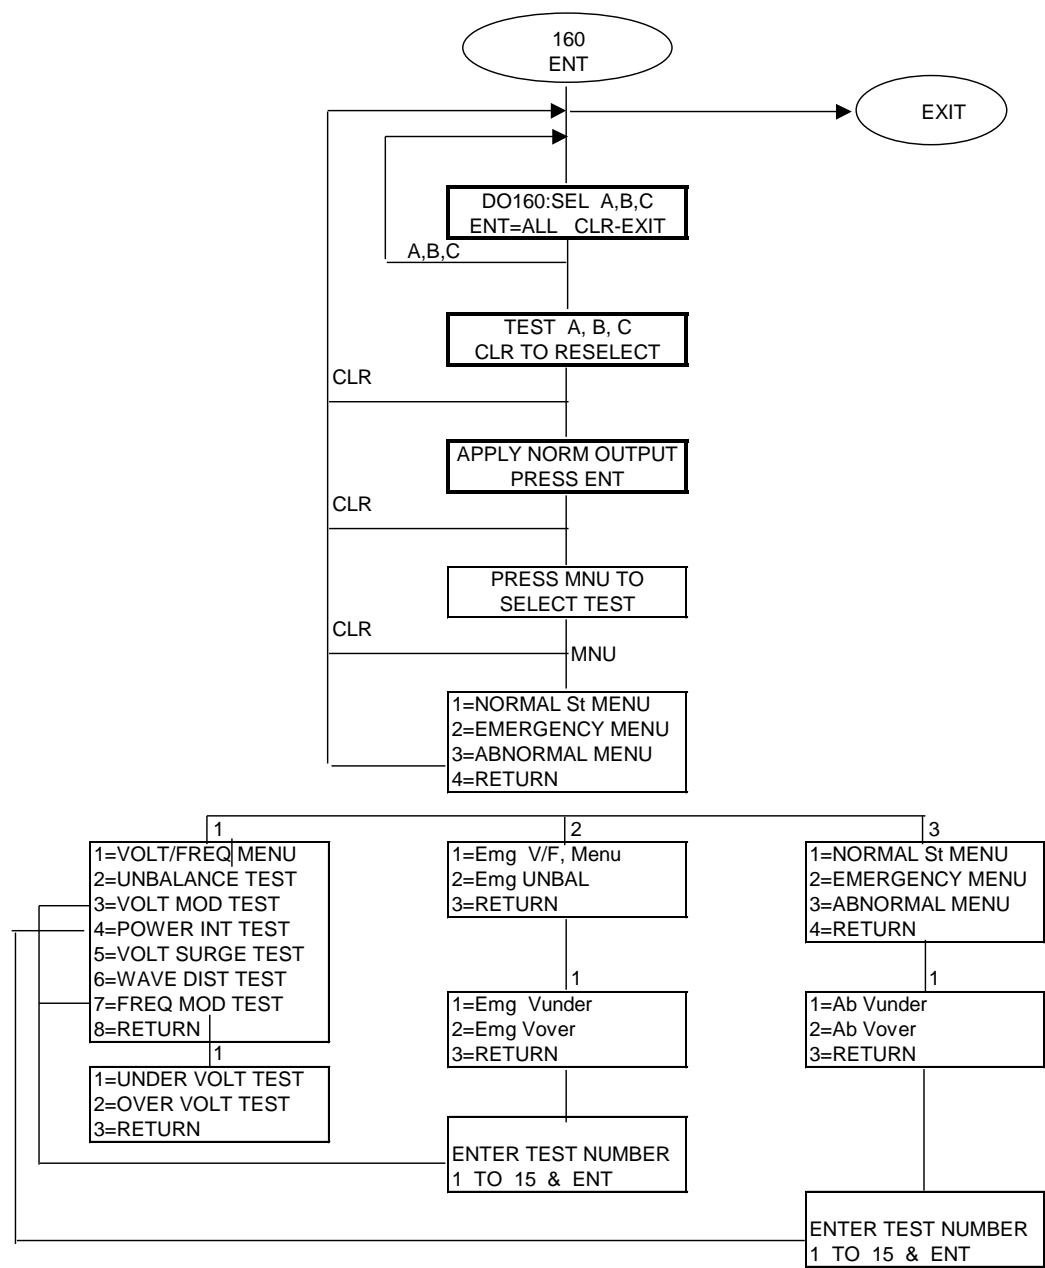


FIGURE 2

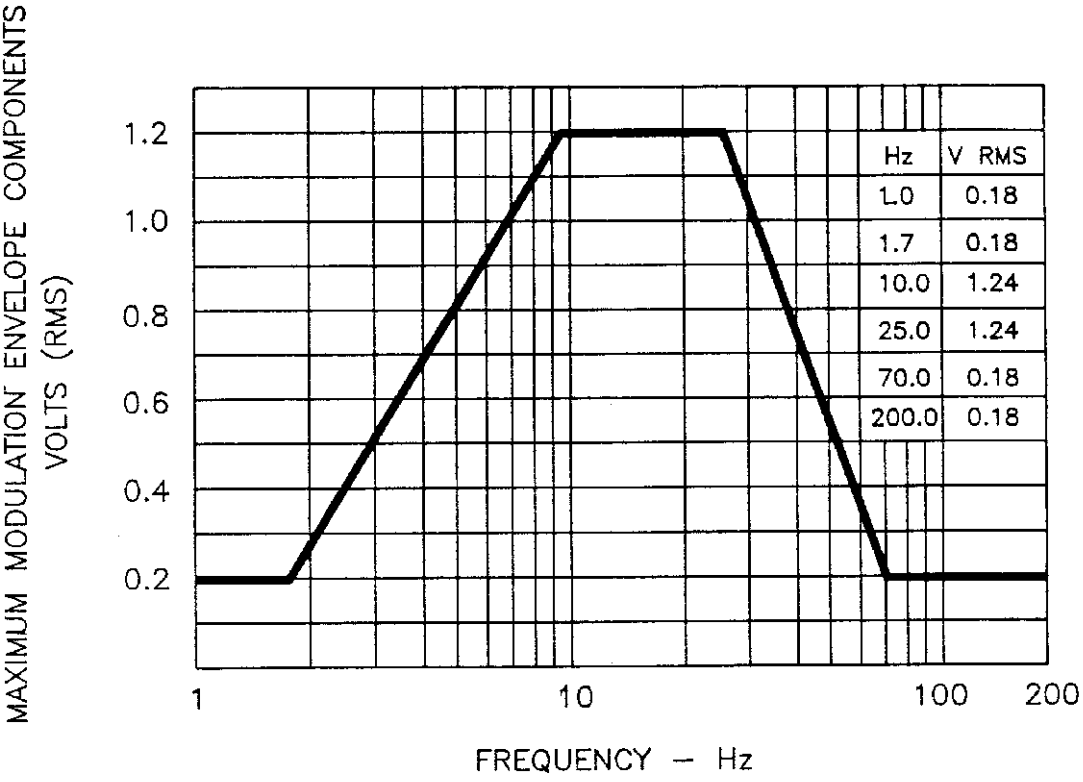


FREQUENCY CHARACTERISTICS OF AC VOLTAGE MODULATION ENVELOPE

FIGURE 3

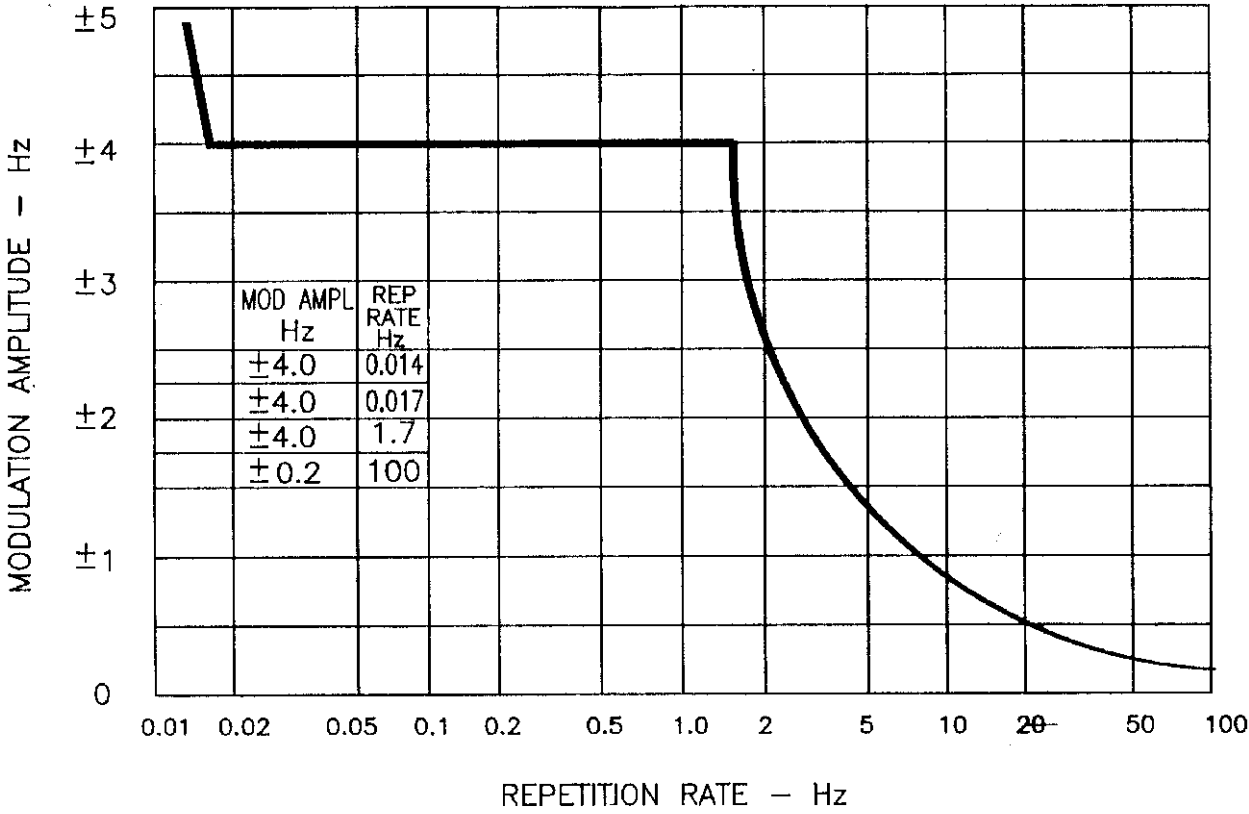

CHARACTERISITICS OF AC FREQUENCY MODULATION

**Table 1**

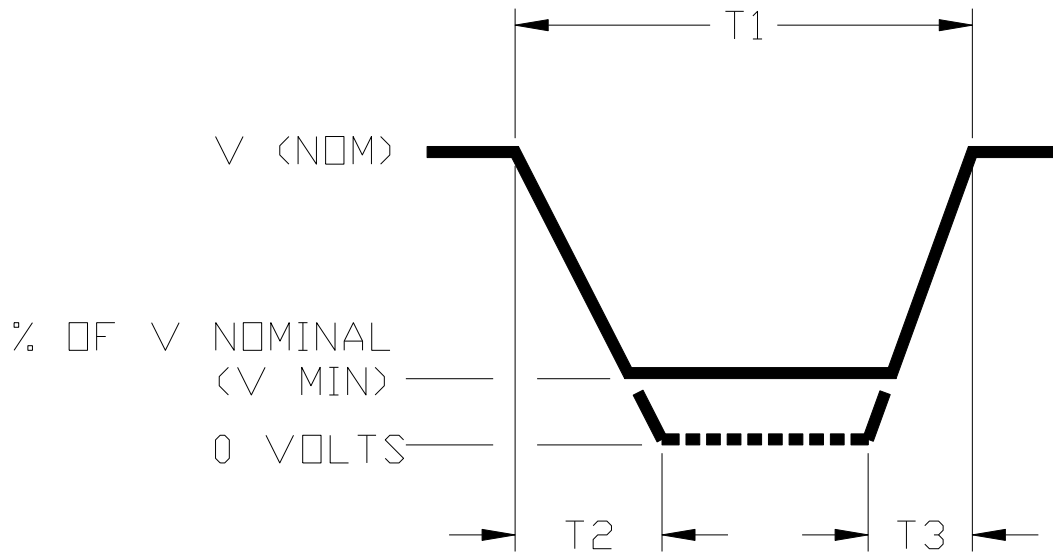

**NOTES:**

1. Definitions  
 $T1$  - Power Interrupt time.  
 $T2$  - Time it would take for the applied voltage to decay from  $V (nom)$  to zero volts >  
 $T3$  - Time it would take for the applied voltage to rise from zero to  $V (nom)$  volts.  
 $V \text{ MIN}$  - The minimum level (expressed as a percentage of  $V \text{ NOMINAL}$ ) to which the applied voltage is permitted to decay.
2. Tolerance to  $T1$ ,  $T2$  and  $V \text{ MIN}$  =  $\pm 10\%$

Test Condition No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
$T1$ (MILLISECONDS)	2	10	25	50	75	100	200	1000	10	25	50	75	100	200	1000
$T2$ (MILLISECONDS)	<1	20*	20	20	20	20	20	20	50*	50*	50	50	50	50	50
$T3$ (MILLISECONDS)	<1	8	5	5	5	5	5	5	20	20	20	20	20	20	20
$\% \text{ OF } V \text{ NOMINAL } (V \text{ MIN})$	0	50	15	10	5	0	0	0	20	50	0	15	5	0	0

- VOLTAGE WILL NOT REACH ZERO IN THIS TEST CONDITION